

BlackBerry® Style™ 9670 Smartphone

www.sprint.com

*©2010 Sprint. SPRINT and the logo are trademarks of Sprint.
Other marks are the property of their respective owners.*

8/12/10





Table of Contents

Getting to Know Your BlackBerry 9670	1
The BlackBerry Style 9670 Smartphone ..	1
Navigating With Your BlackBerry 9670	2
Applications	2
Setting Up Your BlackBerry 9670	4
Insert the Battery	4
Charge the Battery	6
Turn Your BlackBerry 9670 On	6
Complete the Setup Application	7
Connect to the Nationwide Sprint Network	7
Set Up Your Sprint Voicemail	8
Set Up a Wi-Fi® Connection	8

Using Email on Your BlackBerry 9670	10
Setting Up Email	10
Sending Email Messages	13
Using Your BlackBerry 9670	14
Making and Answering Phone Calls	14
Voicemail	18
Sending Text Messages	19
Contacts	19
Calendar	20
Camera	20
Video Camera	21
Visit a Web Page or Search the Internet ..	21
Setting Display Notifications	22
Setting a BlackBerry 9670 Password	23
Locking and Unlocking the BlackBerry 9670	24

Inserting a microSD Card	25	Shortcuts	41
Location Settings	26	Legal Notice	47
Using Bluetooth With Your BlackBerry 9670	27	Index	54
The BlackBerry Desktop Software	28		
Finding Help With Other Features	29		
Using Advanced Sprint Services ...	30		
Sprint TV	30		
Sprint Music	32		
Additional Sprint Services	34		
BlackBerry 9670 Basics and Shortcuts	35		
Navigating Screens	35		
Typing and Editing	36		
Battery Status Indicators	38		
Wireless Network Coverage	38		
Wi-Fi Coverage Indicators	40		

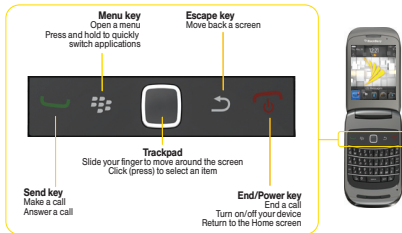 
Getting to Know Your BlackBerry 9670

The BlackBerry Style 9670 Smartphone


Getting to Know Your Device



Navigating With Your BlackBerry 9670



Applications

You can access all of your device's applications from the **All** panel on the Home screen. To display the Home screen (while not on a call), press **End/Power** . To view the complete selection of Home screen applications, highlight **All** and click the trackpad.

Take some time to explore the applications that are available on your BlackBerry device. Here are a few to get you started.



Click **Setup** to set up device options such as email and Bluetooth, personalize your device, and to access onboard help and tutorials.



Click **Browser** to visit Web pages, browse for download items, and set browser options. Your BlackBerry device might have more than one browser.



Click **Messages** to view the messages list, compose new messages, and set messaging options.



Click **Camera** to take a picture.



Click **Media** to access your saved videos, ring tones, pictures, songs, and voice notes, or to record a video or voice note.



Click **Video Camera** in the **Media** folder to record a video*



Click **Manage Connections** to turn network connections on or off and manage Wi-Fi connections.



Click **Options** to access the main list of BlackBerry device options.



Click **Contacts** to view your contact list or add new contacts.



Click **Help** to view help topics for your BlackBerry device.

** Before using the Video Camera, the microSD card must be properly inserted into the media card holder. (The microSD card is preinstalled in your BlackBerry device. See page 25.)*

Setting Up Your BlackBerry 9670

WARNING: Use only those accessories approved by Research In Motion (RIM). Using any accessories not approved by RIM for use with this particular BlackBerry device model might invalidate any approval or warranty applicable to the device, might result in the non-operation of the device, and may be dangerous. For more information about safe battery usage, see the Safety and Product Information booklet that was packaged with your BlackBerry device.

1

Insert the Battery

For more information on purchasing RIM approved batteries and accessories, please visit www.sprint.com.

1. Press and hold the top corners and slide off the battery cover.



2. Insert the battery so that the metal contacts on the battery align with the metal contacts on your BlackBerry device, and press down to secure the battery.



3. Slide up the battery cover until it clicks into place.



If the battery is charged, your BlackBerry device should turn on. If the BlackBerry device does not turn on, charge the battery.

2

Charge the Battery

1. Connect the large end of the USB cable into the power plug.
2. Connect the small end of the travel charger to the micro-USB port on the side of your BlackBerry device.




3. Plug the power plug into a power outlet and charge the battery to full power.



3

Turn Your BlackBerry 9670 On

- To turn the BlackBerry® device on or off, press and hold  on the front of the device.

4

Complete the Setup Application


The Setup application is designed to help you learn about navigation and typing, change options to personalize your BlackBerry device, and set up network connections. You can also set up email addresses. The Setup application should appear automatically the first time you turn on your device.

- To access the Setup application at any time, click **All > Setup** .

Note: For more information about selecting and setting up your email options, please see “Using Email on Your BlackBerry 9670” on page 10.

5

Connect to the Nationwide Sprint Network

 

When you turn on your BlackBerry device by pressing and holding , it should automatically connect to the Nationwide Sprint Network.

To connect to the network successfully, your Sprint service must be active, and you must be in a Nationwide Sprint Network service area. For information about wireless coverage indicators, please see the chart on page 38.

If your BlackBerry device is on but the wireless radio is turned off, you can turn the radio on and connect to the network by clicking **All > Manage Connections** .

6

Set Up Your Sprint Voicemail

1. Press  and then press and hold .
2. Follow the system prompts to:
 - Create your password.
 - Record your name announcement.
 - Record your greeting.

Voicemail Password:


Sprint strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your device is able to access your voicemail messages.

7

Set Up a Wi-Fi® Connection

Your BlackBerry device allows you connect to an available Wi-Fi® network to access such services as email service and Web browsing.

Note: If your BlackBerry device is associated with an email account that uses a BlackBerry® Enterprise Server, your organization may prevent you from connecting to a Wi-Fi® network.

1. On the Home screen, click the connections area at the top of the screen, or click **All > Manage Connections** .
2. Click **Set Up Wi-Fi Network**.

3. If you want to connect to a public hotspot or to a Wi-Fi network that does not require authentication, select the **Show Open networks only** check box.
4. Click the Wi-Fi network that you want to connect to.
5. If the Wi-Fi network requires authentication, type a password for the network and then click **Save and Connect**.

The name of the Wi-Fi network appears at the top of the Home screen.

Using Email on Your BlackBerry 9670

Setting Up Email

Choosing Your Email Setup Option

To begin sending and receiving email messages on your BlackBerry device, you must set up your device with a supported email account. You may configure up to 10 supported accounts on your BlackBerry device.

The following options will be available when you set up your email account(s):

Internet Mail Account

This option is most common for individual users. Use this option to create a new email address for your BlackBerry device or to associate your device with one or more (up to 10) existing email addresses (for example, a Google Mail™ or Windows Live™ Hotmail® email account) or to create a new email address.

Enterprise Account

This option is most common for corporate users. If your administrator has provided you with an activation password, use this option to associate your BlackBerry device with a

Microsoft® Outlook® work email account, IBM® Lotus Notes® work email account, or Novell® GroupWise® work email account.

Creating or Adding an Email Account


You can set up for email using the setup application on your BlackBerry device.

The first time that you log in, you can add a supported email address, create a BlackBerry email address, or do both.


- Add an email address if you have an existing, supported email account that you want to access from your BlackBerry device.

- Create a BlackBerry email address if you do not have another email account, or if you need an additional email address that you can use to send and receive email messages.:

Note: If you are swapping your phone number from a previous BlackBerry device, the email application will prompt you to move any email account you had set up on the other device. Click **Move** and enter the email passwords as prompted to migrate your email accounts to your BlackBerry 9670.

1. Click **All > Setup**  **> Email Accounts Internet Mail Account.**
 - The first time you set up an account, read the BlackBerry Prosumer Agreement. If you agree to the terms

and conditions, click **I Accept** to continue. If this is not your first account, click **Set up another email account**.

2. Click an email account type: **Yahoo**, **Gmail**, **AOL** (AOL, AIM), **Windows Live** (Hotmail, MSN, Live), or **Other**.
3. Type your email address and password, and then click **Continue**. The BlackBerry Internet Service will attempt to set up your account.
 - If setup is successful, press  to return to the Home screen.
4. If the BlackBerry Internet Service cannot add your email address, try re-entering your address or password, or click **I will provide the settings**, and then enter your account information and click **Continue**.

Note: To add or edit settings for your email accounts, including account display name and signature, click **All > Setup**  > **Email Accounts > Internet Mail Account**. Highlight an email address, press  > **Edit**, and make your changes. Click **OK** to save your changes.




Using the BlackBerry Enterprise Server Option

If your system administrator has provided you with an Enterprise Activation password, you can set up your supported email account directly from your BlackBerry device.

1. Click **All > Setup**  > **Email Accounts > Enterprise Account**.

2. Under **Account Activation**, type your supported corporate email address.
3. Type the enterprise Activation password provided by your system administrator, and then click **Activate**.

Sending Email Messages


1. Click **All > Messages**  to display a message list, and then press  > **Compose Email**.
2. In the **To** field, type an email address or a contact name.
3. Type a subject and a message and then press  > **Send**.

Note: If you have set up more than one supported email account on your BlackBerry device, you can select an account from which to send the message. At the top of the message, in the **Send Using** field, press **Space**  until the preferred email account appears.

Accessing Email Messages

1. Click **All > Messages**  to display a message list.
2. Highlight a message and click the trackpad to display the message.



Using Your BlackBerry 9670


Tip: For complete details on any of your BlackBerry device features, click **All > Help** .

 
Making and Answering Phone Calls

 
Making a Phone Call

- ▶ On the Home screen or in the Phone application type a phone number and


press . To end the call, close the phone or press .

Tip: Press  on any screen to open the phone application.


- ▶ Select a contact, call log, or phone number link on any screen and press  to make a call.

Tip: To select a contact, on the Home screen, type part of a contact name, highlight the name or number, and press .

Answering a Phone Call

- ▶ To answer an incoming call, open the phone or press .


In-Call Options

During an active call, press  to display a menu of available in-call options, such as **Flash**, **Mute**, or **Activate Speakerphone**.

Using the Mute Option



- ▶ During a call, click **Mute**. To turn off mute, click **Mute Off**.

Using the Speakerphone

- ▶ To turn the speakerphone on or off during a call, press **Speakerphone**  or click **Speaker** or **Handset**.

Call Waiting

 
To answer an incoming call waiting call:

- ▶ When you hear the call waiting tone and see the “Waiting Call” message, press  to answer the incoming call and place the active call on hold.
 - To switch between calls, press  > **Flash**.

Making Emergency Calls

Your BlackBerry device is designed to allow emergency calls even when it is locked or when your account is restricted, provided you are within range of a compatible wireless network.

To make an emergency call:

- ▶ Dial the emergency access number for the country you are in (for example **911** in the U.S. or **112** in countries that are part of the European Union), and then press .

To make an emergency call if your BlackBerry device is locked:

- ▶ Press  > **Emergency** > .

Enhanced 911 (E911) Information

Your BlackBerry device features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your BlackBerry device begins to seek information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

Important: Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your BlackBerry device.

Note: The GPS feature on your BlackBerry device can help emergency personnel determine your location in instances where you are in a wireless coverage area, your device is able to communicate with a GPS-enabled satellite, and your emergency response center is equipped to process such information. However, successful determination of your location is not guaranteed.

Note: YOU SHOULD NOT RELY ON ANY WIRELESS DEVICE FOR ESSENTIAL COMMUNICATIONS, INCLUDING MEDICAL EMERGENCIES. Emergency numbers may vary by location and emergency calls may be blocked or impeded by network, environmental, or interference issues.

Note: You can only make emergency calls by typing official emergency access numbers (for example, 911 in North America or 112 in European Union countries).

Voicemail

Note: For information about setting up voicemail on your BlackBerry device, see “Set Up Your Sprint Voicemail” on page 8 for details.

To change your voicemail options, follow the audio prompts in the voicemail system.

 

New Voicemail Message Alerts

When you receive a new voice message, your BlackBerry device alerts you and prompts you to call your voicemail.

Retrieving Your Voicemail Messages

You can review your messages directly from your BlackBerry device or from any other touch-tone phone.

Using Your BlackBerry 9670 to Access Your Voicemail Messages

- From the Home screen, press  and then press and hold . If prompted, enter the password to access your voicemail.




Using Another Phone to Access Your Voicemail Messages


1. Dial your wireless phone number.

2. When your voicemail answers, press the asterisk key (*) and enter your voicemail password.

Sending Text Messages





You can send text messages to up to 10 recipients.

1. Click **All > Text Messages**  >  > **Compose Text Message**.
2. In the **To** field, do one of the following:
 - Type a contact name
 - Type a phone number that can receive text messages (including area code) and then press .
 - Type an email address.

3. Type a message, and then press .

Contacts

Adding Contacts


- To add a contact using the Contacts application. Click **All > Contacts**  > **New Contact**. Type the contact information. Press  > **Save**.
- To add a contact from a message, call log, or Web page, highlight the contact name, number, or email address and press  > **Add to Contacts**. Add or edit the contact information and then press  > **Save**.

Note: If you have installed BlackBerry® Desktop Software on your computer (see “The BlackBerry Desktop Software” on page 28), you can also add contacts by connecting your BlackBerry device to your computer and synchronizing with a compatible Personal Information Management (PIM) address book. See the BlackBerry Desktop Software Online Help for details.

Calendar

Adding an Appointment

1. Click **All > Calendar**  >  > **New Appointment.**


2. Type the appointment information and then press  > **Save.**



Camera

1. Click **All > Camera** .
2. Use the display screen as a viewfinder and click the trackpad to take a picture.
 - Slide your finder up or down the trackpad to zoom in or out.



Video Camera

Note: Before using the Video Camera, a microSD card must be inserted into the media card holder. The microSD card is preinstalled in your BlackBerry device.

Tip: To confirm that a microSD card is installed, click **All > Options**  **> Device > Storage**.

1. Click **All > Media**  **> Video Camera** .
2. To start recording, click the **record** icon.
3. To pause recording, click the **pause** icon.

Visit a Web Page or Search the Internet

1. Click **All > Browser** .
2. In the field at the top of the screen, type a Web address or search terms and press .

Tip: To insert a period in a Web address, press **space**.

To insert a slash mark (/), press **⇧aA** and **space**.

The **Go To** dialog box tracks the Web addresses that you type. To go to a Web page on the list, click a Web address and then click **OK**.

Setting Display Notifications


When the phone is closed, notifications for items such as new messages, calls, or calendar reminders, appear on the external display.

To change options for notifications on the external display:

1. Click **All > Options**  **> Display > External Display**

- To set the backlight to turn on each time you receive a notification, change the **Automatic Backlight and Notification** field to **Yes**.
- To prevent notification details, such as the contact and subject line for a



message, from appearing on the external display, change the **Show Notification Details** field to **Never**.

- To prevent message preview text from appearing in message notifications, change the **Show Message Preview** field to **No**.
 - To change the duration that notifications appear on the external display, change the **Notification Cycle Duration** field.
 - To turn off the ability to review notifications by pressing the Volume keys, change the **Enable Volume Key to Scroll** field to **No**.
2. Press  **> Save**.

To review notifications on the external display:

1. To turn on the backlight if it is not already on, press a **Volume** key or the **Convenience** key on the right side of your device.
2. To open a notification, press a **Volume** key.
 - To move to the next notification, press the **Volume Up** key.
 - To move to the previous notification, press the **Volume Down** key.
 - To show the text for a message, press the **Convenience** key on the right side of your device.

Setting a BlackBerry 9670 Password

1. Click **All > Options**  **> Security > Password**.
2. Select the **Enable** check box and then click **Set Password** or **Change Password**.
3. Type a password, click the trackpad, and then repeat to confirm.
4. Press  **> Save**.

To turn off your BlackBerry device password, clear the **Password** check box. You will need to enter your password to confirm the change.

Locking and Unlocking the BlackBerry 9670


To lock your device:

To perform this task, you must have set a password for your BlackBerry device.

- ▶ Click **All > Password Lock** .

To unlock your device:

- ▶ Type your device password and press the trackpad.

Note: When the BlackBerry device is locked, you should be able to make an emergency call without dialing the emergency access number, provided you are within range of a compatible wireless network. Press  > **Emergency** > **Yes**.

YOU SHOULD NOT RELY ON ANY WIRELESS DEVICE FOR ESSENTIAL COMMUNICATIONS, INCLUDING MEDICAL EMERGENCIES. Emergency numbers may vary by location and emergency calls may be blocked or impeded by network, environmental, or interference issues.

Note: You can only make emergency calls by typing official emergency access numbers (for example, 911 in North America).

Tip: For additional options and shortcuts, including locking the keyboard, see “Navigating Screens” on page 35.

Inserting a microSD Card

Your BlackBerry device comes with a microSD™ card pre-installed. The optional microSD card extends the memory available on your BlackBerry device for storing your media files such as videos, ring tones, pictures, and songs.

1. Press and hold the top corners and slide off the battery cover. (See “Insert the Battery” on page 4.)

2. On the left side of your device, open the flap that covers the media card slot.
3. Hold the media card so that the metal contacts on the media card face down and point toward the right side of your device.
4. Slide the media card into the media card slot until it stops.



5. Slide the battery cover back onto the device and press down until it clicks into place.

Location Settings

Your BlackBerry device is equipped with a Location feature for use in connection with location-based services that may be available.


Where services are available, the Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911 (where compatible wireless coverage is available and the emergency response center is equipped to process such information). However, successful determination of your


location by the emergency response center is not guaranteed.

Note: Turning Location on will allow the network to detect your position using GPS technology, making some applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

To enable your BlackBerry device's Location feature:

1. Click **All > Options**  **> Device > Location Settings.**

2. Change the **Location Services** field to **Location On**.
3. Press  > **Save**.

Note: For more information about location-based services, such as the BlackBerry® Maps application, please click **Help**  or go online to see the complete user guide.

Using Bluetooth With Your BlackBerry 9670

Turning the Bluetooth Radio On or Off

- On the Home screen, click the connections area at the top of the

screen. Select the **Bluetooth** check box. To turn off Bluetooth technology, clear the **Bluetooth** check box.

Pairing With a Bluetooth-Enabled Device

You must pair your BlackBerry device with a Bluetooth-enabled device before you can connect to it. For more information about preparing the Bluetooth-enabled device for pairing, see the documentation that came with the Bluetooth-enabled device.

1. On the Home screen, click the connections area at the top of the screen and then click **Bluetooth Connections > Add New Device > Search**.

2. Click the name of a Bluetooth-enabled device.
3. If necessary, do one of the following:
 - If the Bluetooth-enabled device does not have a keyboard (for example, a headset), type the pairing passkey from the Bluetooth-enabled device's documentation (frequently 0000) into your BlackBerry device.
 - If the Bluetooth-enabled device has a keyboard (for example, a laptop computer), type a pairing passkey of your choosing on both devices.

Note: Verify that the Bluetooth-enabled device that you want to pair with is in the correct mode for pairing.

The BlackBerry Desktop Software



Install the BlackBerry® Desktop Software on your computer to allow you to perform many useful tasks such as synchronizing contacts and calendars, backing up data, transferring files, and adding applications.

To install the BlackBerry Desktop Software:

- Visit blackberry.com/desktopsoftware and follow the instructions to download and install the software.

Note: To find more information about the features of the BlackBerry Desktop Software, click **Help > BlackBerry Desktop Software help**.

Finding Help With Other Features

- ▶ To access a full list of help topics for your BlackBerry device, click **All > Help** .
- ▶ To open the main list of topics for all programs, click **Contents** from any open Help screen.
- ▶ To access a list of topics that are associated with the program that you are using, press  > **Help**.

User Guide

The full User Guide for your BlackBerry device, can be found on blackberry.com/go/docs.

Note: See the **Safety and Product Information** booklet for more information about your BlackBerry device.

Using Advanced Sprint Services


With your BlackBerry® device and data services from Sprint, you have access to a variety of entertaining and useful features.

Note: Sprint data service is not included. Depending on the plan and options selected, additional charges may apply.

Sprint TV

With Sprint, you can watch live TV on the go right on your BlackBerry device. Accessing

your Sprint TV channels is as easy as using the remote control in your living room. Browse through the available free channels or subscribe to one of the premium offerings.

1. Click **Media > Sprint TV** . The first time you use the application, follow the prompts to download it to your BlackBerry device.
 - If prompted, click **Yes** to grant the application Trusted Application status.
2. Click **TV** in the left panel and then scroll up or down to select a TV option.
 - **Featured** to see a list of featured channels.
 - **Recommended** to see what's recommended by Sprint TV.

- **Recently Played** to see a list of recently viewed channels.
 - **All Channels** to select from all available channels and categories.
 - **Live** to see a list of live TV options.
 - **On Demand** to see a list of available on demand video and music options.
3. Browse through the available programming and click a clip or channel to view the program.

Note: The first time you access a channel that requires a subscription, you will be prompted to purchase access. Select **Subscribe** to purchase access, or select **Preview** to see a preview of the selected channel.

Note: Coverage not available everywhere. Content and lineup subject to change. Select channels also available for casual usage. Go to sprint.com/tvguide for more information.


Tip: In the initial Sprint TV screen, slide your finger left on the trackpad to select the left panel options (**TV**, **Radio**, **Favs**, and **More**) and then slide your finger up or down and click the trackpad to select an option. Once you select an option, the right panel options become active, and you can slide your finger up or down and click the trackpad to select an option.

For more information, click **More** and then click **Help** in the main Sprint TV screen.

Sprint Music

Sprint lets you use your BlackBerry device as a portable personal jukebox. With access to the Sprint Music Store, you can purchase and download digital music files to play on your BlackBerry device.


Accessing Sprint Music Plus


1. Click **Media > Sprint Music Plus** .
2. The first time you access the service, follow the onscreen instructions to download the application.

Note: Use of Sprint Music requires that a microSD card is properly installed in your device. Your BlackBerry device comes with a microSD card pre-installed. See page 25 for details.

Purchasing and Downloading Music

From the Sprint Music Plus Store, you can shop for songs to purchase and download to your BlackBerry device's microSD card.


1. Click **Media > Sprint Music Plus**  **> Music Store.**
2. Enter a song or artist in the search field or browse through options in the **Featured, New Releases, Top Downloads,** or **Genre** pages.

3. Select a song and click on it. (The song information screen is displayed.)
4. Follow the onscreen instructions to preview or purchase the song. Press  at any time to display the Sprint Music Plus menu.

Playing Music on Your BlackBerry 9670



Use Sprint Music Plus to play all of your downloaded music.

Accessing the Music Player

1. Click **Media > Sprint Music Plus**  **> My Library.**

2. Click **Artists, Albums, Tracks, Genres** or **Playlists** and click a song title to begin playing music.
 - To pause or resume playing, press the space key.
 - To skip to the next or previous song, slide your finger right or left across the trackpad.
 - To view the current playlist, slide your finger up or down the trackpad. To

begin playing another song, highlight the title and click the trackpad.

Note: You can close the music player and continue listening to music while using other features of your BlackBerry device. Press  to exit the music player and display the Home screen. To stop playback, return to the Player screen and press  > **Close**.

Note: If you make or receive a phone call while listening to music, playback will pause until the call is over. Using certain applications, such as the Camera, will stop playback altogether.





Additional Sprint Services



More advanced services, including NASCAR Sprint Cup Mobile are available for use on your BlackBerry device.

1. Click **Media** and then click the icon for the feature you want to use, such as **NASCAR Sprint Cup Mobile**.
2. The first time you access a feature, follow the prompts to download and set up the application.
3. Once you're set up, follow the instructions to take advantage of your Sprint services.

BlackBerry 9670 Basics and Shortcuts

Navigating Screens

Lock the BlackBerry device	If you have set a device password (see page 24), click All > Password Lock 
Unlock the BlackBerry device	Type your password. Press Enter 
Return to the previous screen	Press Escape 
Return to the Home screen	Press End/Power 
Click an item	Highlight the item and then click (press) the trackpad

Select multiple items	Press and hold ⇧aA and slide your finger on the trackpad
Switch applications	Press and hold Menu 
Turn the BlackBerry device on or off	Press and hold End/Power 

Typing and Editing

Capitalize a letter	Press and hold the letter key.
Insert a period	Press space twice
Type the alternate character on a key	Press alt and the desired key
Type a symbol	Press sym and the letter key that appears below the desired symbol

Insert an accented character	Press and hold a letter key and slide your finger left or right across the trackpad
Select text	Press ⇧aA and slide your finger on the trackpad
Select characters	Press and hold ⇧aA and slide your finger on the trackpad
Copy selected text	Click the trackpad and click Copy
Cut selected text	Click the trackpad and click Cut
Paste selected text	Click the trackpad and click Paste
Cancel a selection	Press Escape ↵

Battery Status Indicators

Full battery power




Low battery power









Charging






Wireless Network Coverage

You must be connected to the Nationwide Sprint Network to begin using many of the features of your BlackBerry device. To connect to or disconnect from the network, click **All > Manage Connections** . Indicators on the Home screen show the wireless coverage level for the area in which you are using your BlackBerry device.

 





	You can use the phone, send and receive email messages, PIN messages, and text messages, and use the browser with a high-speed data connection.
	You can use the phone, send and receive email messages, PIN messages, and text messages, and use the browser.
	You can use the phone and send and receive text messages.
	You can only make emergency calls.
	Your connection to the wireless network is turned off.
	You are not in a wireless coverage area

 
 

Wi-Fi Coverage Indicators

 + network name	You can send and receive email messages and instant messages over a Wi-Fi connection.
 + network name	Your BlackBerry device is connected to a Wi-Fi network but you cannot send or receive email messages or instant messages over the Wi-Fi connection.
	Your connection to a Wi-Fi network is turned on, but you are not connected to a Wi-Fi network.

Shortcuts

Phone Shortcuts






 




Open the phone application or make a phone call	Press 
End a call	Press 
Turn mute on or off during a call	On the screen, click mute .
Turn speakerphone on or off during a call	Press 
Change the volume during a call	Press the volume buttons up or down
Dial a letter in a phone number	Press and hold  and then press the letter key
Add an extension to a number	Press  and  and then type the extension

Open the contact list from the phone screen	Press and hold 
Redial a number	Press  twice
Call voicemail access number	Press and hold 
Assign speed dial to a number key	Press and hold an unassigned key and then select a Contacts entry

Browser Shortcuts

Open a selected link	Press  or click the link
Go to the web address field	Press 
Insert a period in the Web address field	Press 
Insert a slash mark (/) in the Web address field	Press  and 
Go back one page	Press  key
Exit the browser	Press and hold 
Open the bookmark list	Press 
Add a bookmark	Press 
Go down one page	Press 
Go up one page	Press  and 

Message List Shortcuts

Open a selected message	Press 
Reply to sender	Press 
Reply to all	Press 
Forward message	Press 
Move to the next unopened message	Press 
Move down one screen	Press 
Move up one screen	Press  and 
Move to the top of the list	Press 
Move to the bottom of the list	Press 

Compose a message	Press ⁹C
Display the phone call log	Press alt and P[®]

Calendar Shortcuts

Go to the next day, week, or month	Press space
Go to the previous day, week, or month	Press ⇧aA and space
Move the cursor horizontally in week view	Slide your finger left or right across the trackpad
Move the cursor vertically in month view	Slide your finger up or down the trackpad

Note: Your use of third-party products or services shall be governed by and subject to you agreeing to the terms of separate licenses, if any, for those products or services. Any third-party products or services that are provided (if applicable) with RIM's products and services are provided "as is." RIM makes no representation, warranty or guarantee whatsoever in relation to the third-party products or services and RIM assumes no liability whatsoever in relation to the third-party products and services even if RIM has been advised of the possibility of such damages or can anticipate such damages.

For additional BlackBerry device help and troubleshooting information, visit:
www.blackberry.com/support.

Legal Notice

©2010 Sprint. SPRINT and the logo are trademarks of Sprint.

©2010 Research In Motion Limited. All rights reserved. BlackBerry®, RIM®, Research In Motion®, and related trademarks, names and logos are the property of Research In Motion Limited and are registered and/or used in the U.S. and countries around the world. Used under license from Research In Motion Limited.

ANSI is a trademark of the American National Standards Institute. Bluetooth is a trademark of Bluetooth SIG. CDMA2000 is a trademark of the Telecommunications Industry Association. CTIA – The Wireless Association is a trademark of CTIA –

The Wireless Association. GSM is a trademark of the GSM MOU Association. IEEE, 802.11b, 802.11g, and IEEE Std 1725 are trademarks of the Institute of Electrical and Electronics Engineers, Inc. Wi-Fi is a trademark of the Wi-Fi Alliance. All other trademarks are the property of their respective owners.

Portions of the BlackBerry® Device Software are copyright ©2007–2008 The FreeType Project (www.freetype.org). All rights reserved.

This documentation including all documentation incorporated by reference herein such as documentation provided or made available at www.blackberry.com/go/docs is provided or made accessible “AS IS” and “AS AVAILABLE” and without condition, endorsement, guarantee, representation, or warranty of any kind by Research In Motion Limited and its affiliated companies (“RIM”) and RIM assumes no responsibility for any typographical, technical, or other inaccuracies,

errors, or omissions in this documentation. In order to protect RIM proprietary and confidential information and/or trade secrets, this documentation may describe some aspects of RIM technology in generalized terms. RIM reserves the right to periodically change information that is contained in this documentation; however, RIM makes no commitment to provide any such changes, updates, enhancements, or other additions to this documentation to you in a timely manner or at all.

This documentation might contain references to third-party sources of information, hardware or software, products or services including components and content such as content protected by copyright and/or thirdparty web sites (collectively the "Third Party Products and Services"). RIM does not control, and is not responsible for, any Third Party Products and Services including, without limitation the content, accuracy, copyright compliance, compatibility,

performance, trustworthiness, legality, decency, links, or any other aspect of Third Party Products and Services. The inclusion of a reference to Third Party Products and Services in this documentation does not imply endorsement by RIM of the Third Party Products and Services or the third party in any way.

EXCEPT TO THE EXTENT SPECIFICALLY PROHIBITED BY APPLICABLE LAW IN YOUR JURISDICTION, ALL CONDITIONS, ENDORSEMENTS, GUARANTEES, REPRESENTATIONS, OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY CONDITIONS, ENDORSEMENTS, GUARANTEES, REPRESENTATIONS OR WARRANTIES OF DURABILITY, FITNESS FOR A PARTICULAR PURPOSE OR USE, MERCHANTABILITY, MERCHANTABLE QUALITY, NON-INFRINGEMENT,

SATISFACTORY QUALITY, OR TITLE, OR ARISING FROM A STATUTE OR CUSTOM OR A COURSE OF DEALING OR USAGE OF TRADE, OR RELATED TO THE DOCUMENTATION OR ITS USE, OR PERFORMANCE OR NON-PERFORMANCE OF ANY SOFTWARE, HARDWARE, SERVICE, OR ANY THIRD PARTY PRODUCTS AND SERVICES REFERENCED HEREIN, ARE HEREBY EXCLUDED. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY BY STATE OR PROVINCE. SOME JURISDICTIONS MAY NOT ALLOW THE EXCLUSION OR LIMITATION OF IMPLIED WARRANTIES AND CONDITIONS. TO THE EXTENT PERMITTED BY LAW, ANY IMPLIED WARRANTIES OR CONDITIONS RELATING TO THE DOCUMENTATION TO THE EXTENT THEY CANNOT BE EXCLUDED AS SET OUT ABOVE, BUT CAN BE LIMITED, ARE HEREBY LIMITED TO

NINETY (90) DAYS FROM THE DATE YOU FIRST ACQUIRED THE DOCUMENTATION OR THE ITEM THAT IS THE SUBJECT OF THE CLAIM.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW IN YOUR JURISDICTION, IN NO EVENT SHALL RIM BE LIABLE FOR ANY TYPE OF DAMAGES RELATED TO THIS DOCUMENTATION OR ITS USE, OR PERFORMANCE OR NON-PERFORMANCE OF ANY SOFTWARE, HARDWARE, SERVICE, OR ANY THIRD PARTY PRODUCTS AND SERVICES REFERENCED HEREIN INCLUDING WITHOUT LIMITATION ANY OF THE FOLLOWING DAMAGES: DIRECT, CONSEQUENTIAL, EXEMPLARY, INCIDENTAL, INDIRECT, SPECIAL, PUNITIVE, OR AGGRAVATED DAMAGES, DAMAGES FOR LOSS OF PROFITS OR REVENUES, FAILURE TO REALIZE ANY EXPECTED SAVINGS, BUSINESS INTERRUPTION,

LOSS OF BUSINESS INFORMATION, LOSS OF BUSINESS OPPORTUNITY, OR CORRUPTION OR LOSS OF DATA, FAILURES TO TRANSMIT OR RECEIVE ANY DATA, PROBLEMS ASSOCIATED WITH ANY APPLICATIONS USED IN CONJUNCTION WITH RIM PRODUCTS OR SERVICES, DOWNTIME COSTS, LOSS OF THE USE OF RIM PRODUCTS OR SERVICES OR ANY PORTION THEREOF OR OF ANY AIRTIME SERVICES, COST OF SUBSTITUTE GOODS, COSTS OF COVER, FACILITIES OR SERVICES, COST OF CAPITAL, OR OTHER SIMILAR PECUNIARY LOSSES, WHETHER OR NOT SUCH DAMAGES WERE FORESEEN OR UNFORESEEN, AND EVEN IF RIM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW IN YOUR JURISDICTION, RIM

SHALL HAVE NO OTHER OBLIGATION, DUTY, OR LIABILITY WHATSOEVER IN CONTRACT, TORT, OR OTHERWISE TO YOU INCLUDING ANY LIABILITY FOR NEGLIGENCE OR STRICT LIABILITY.

THE LIMITATIONS, EXCLUSIONS, AND DISCLAIMERS HEREIN SHALL APPLY: (A) IRRESPECTIVE OF THE NATURE OF THE CAUSE OF ACTION, DEMAND, OR ACTION BY YOU INCLUDING BUT NOT LIMITED TO BREACH OF CONTRACT, NEGLIGENCE, TORT, STRICT LIABILITY OR ANY OTHER LEGAL THEORY AND SHALL SURVIVE A FUNDAMENTAL BREACH OR BREACHES OR THE FAILURE OF THE ESSENTIAL PURPOSE OF THIS AGREEMENT OR OF ANY REMEDY CONTAINED HEREIN; AND (B) TO RIM AND ITS AFFILIATED COMPANIES, THEIR SUCCESSORS, ASSIGNS, AGENTS, SUPPLIERS

(INCLUDING AIRTIME SERVICE PROVIDERS), AUTHORIZED RIM DISTRIBUTORS (ALSO INCLUDING AIRTIME SERVICE PROVIDERS) AND THEIR RESPECTIVE DIRECTORS, EMPLOYEES, AND INDEPENDENT CONTRACTORS.

IN ADDITION TO THE LIMITATIONS AND EXCLUSIONS SET OUT ABOVE, IN NO EVENT SHALL ANY DIRECTOR, EMPLOYEE, AGENT, DISTRIBUTOR, SUPPLIER, INDEPENDENT CONTRACTOR OF RIM OR ANY AFFILIATES OF RIM HAVE ANY LIABILITY ARISING FROM OR RELATED TO THE DOCUMENTATION.

Prior to subscribing for, installing, or using any Third Party Products and Services, it is your responsibility to ensure that your airtime service provider has agreed to support all of their features. Some airtime service providers might not offer Internet browsing functionality with a subscription

to the BlackBerry® Internet Service. Check with your service provider for availability, roaming arrangements, service plans and features. Installation or use of Third Party Products and Services with RIM's products and services may require one or more patent, trademark, copyright, or other licenses in order to avoid infringement or violation of third party rights. You are solely responsible for determining whether to use Third Party Products and Services and if any third party licenses are required to do so. If required you are responsible for acquiring them. You should not install or use Third Party Products and Services until all necessary licenses have been acquired. Any Third Party Products and Services that are provided with RIM's products and services are provided as a convenience to you and are provided "AS IS" with no express or implied

conditions, endorsements, guarantees, representations, or warranties of any kind by RIM and RIM assumes no liability whatsoever, in relation thereto. Your use of Third Party Products and Services shall be governed by and subject to you agreeing to the terms of separate licenses and other agreements applicable thereto with third parties, except to the extent expressly covered by a license or other agreement with RIM.

Certain features outlined in this documentation require a minimum version of BlackBerry® Enterprise Server, BlackBerry® Desktop Software, and/or BlackBerry® Device Software.

The terms of use of any RIM product or service are set out in a separate license or other agreement with RIM applicable thereto. NOTHING IN THIS DOCUMENTATION IS INTENDED TO SUPERSEDE ANY EXPRESS WRITTEN AGREEMENTS OR

WARRANTIES PROVIDED BY RIM FOR PORTIONS OF ANY RIM PRODUCT OR SERVICE OTHER THAN THIS DOCUMENTATION.

Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations:

5,490,165	5,416,797	5,414,796
5,228,054	5,506,865	5,710,784
5,568,483	5,267,261	5,657,420
5,600,754	5,778,338	5,659,569
5,504,773	5,511,073	5,535,239
5,544,196	5,337,338	

BlackBerry® Style 9670 smartphone model number: RCU21CW

Research In Motion Limited
295 Phillip Street
Waterloo, ON N2L 3W8
Canada

Research In Motion UK Limited
Centrum House
36 Station Road
Egham, Surrey TW20 9LF
United Kingdom
Published in Canada

MAT-33573-001
PRINTSPEC-024

Index

A

- Answering Phone Calls 14
- Applications
 - Overview 2

B

- Battery
 - Charge 6
 - Insert 4
- BlackBerry Bold
 - Device Navigation 2, 35
 - Illus. 1
 - Password 23
- BlackBerry Desktop Software 28
- BlackBerry Enterprise Server 12

Bluetooth

- Pairing 27
- Turning On or Off 27
- Browser 21
 - Shortcuts 43

C

- Calendar 20
 - Shortcuts 45
- Call Forwarding 15
- Call Waiting 15
- Charge the Battery 6
- Contacts 19, 22

D

- Device Navigation 2, 35

E

- Email 10–13
 - Accessing Messages 13

BlackBerry Enterprise Server 12

- Create or Add Address 13
- Sending 13
- Emergency Calls 15
- End/Power Key 2
- Enhanced 911 (E911) 16
- Escape Key 2

L

- Legal Notice 47–53
- Location Feature (GPS) 26
- Locking the Device 24

M

- Making Phone Calls 14
- Menu Key 2
- Menus 36
- Message List Shortcuts 44
- Music Player 33

Mute 15

N

NASCAR Sprint Cup Mobile
34

Nationwide Sprint Network 7

Navigating Screens 35

P

Password 23

Phone Book see Contacts

Phone Calls

 Making and Answering 14

Phone Shortcuts 41

Playing Music 33

S

Send Key 2

Setup Wizard 7

Shortcuts

Browser 43

Calendar 45

Message List 44

Phone 41

Speakerphone 15

Sprint Music 32

Sprint Music Store

 Accessing 32

 Downloading Music 32

 Purchasing Music 32

Sprint Services 30–34

 Sprint Music 32

 Sprint TV 30

Sprint TV 30

T

Text Messages (SMS) 19

Trackpad 2

Turn On Device 6

Typing

Tips 36

U

Unlocking the Device 24

V

Video Camera 21

Voicemail

 New Message Alerts 18

 Options 18

 Passcode 8

 Retrieving 18

 Setup 8

W

Web Browsing 21

Wi-Fi

 Coverage Indicators 40

 Profiles 8

 Setup 8

Wireless Service

 Coverage Indicators 38