

Sprint Prepaid

Printable User Guide

A downloadable, printable guide
to your phone's features.



KYOCERA **EVENT**

Sprint
Prepaid

Sprint
Prepaid

Available applications and services are subject to change at any time.

Table of Contents

Get Started	1
Your Phone at a Glance	1
Set Up Your Phone	1
Activate Your Device	3
Sprint Account Information	4
Sprint Prepaid PINs and Passwords	4
Manage Your Account	4
Set Up Voicemail	5
Mobile ID	6
Installing an ID Pack	6
Switching ID Packs	7
Device Basics	8
Your Device's Layout	8
Key Functions	8
Turn Your Device On and Off	9
Turn Your Screen On and Off	10
Touchscreen Navigation	11
Your Home Screens	12
Home Screen Overview	12
Customize the Home Screens	13
Status Bar	14
Status Icons	14
Notification Icons	15
Enter Text	16
Touchscreen Keyboard	16
Enter Text Using Swype	16
Enter Text Using the Android Keyboard	22
Copy and Paste Text	26
Google Account	28
Create a Google Account	28
Sign In to Your Google Account	29
Add Account	29
General Sync Settings	30

Phone	31
Make Phone Calls	31
Call Using the Phone Dialpad	31
Call from Recent Calls	32
Call from People	32
Call a Number in a Text Message	32
Call Emergency Numbers	33
Call Numbers with Pauses	33
Call Using Plus (+) Code Dialing	34
Call Using the Internet Calling	34
Receive Phone Calls	35
Answer an Incoming Call	35
Mute the Ringtone	36
Reject an Incoming Call	36
Reject a Call and Send a Text Message	36
Visual Voicemail	36
Set Up Visual Voicemail	36
Review Visual Voicemail	37
Listen to Multiple Voicemail Messages	39
Compose a Message	39
Configure Visual Voicemail Settings	39
Change Your Main Greeting via the Voicemail Menu	40
Edit the Display Name via the Voicemail Menu	40
Voicemail (Traditional)	41
Set Up Voicemail	41
Voicemail Notification	41
Retrieve Your Voicemail Messages	42
Phone Call Options	42
Caller ID	42
Call Waiting	43
3-Way Calling	43
Other Call Settings	43
In-Call Options	45
Call Log	46
Device Settings	48
WIRELESS & NETWORKS Settings	48
Wi-Fi Settings	48

Bluetooth Settings	48
Data Usage	48
Airplane Mode	49
Mobile Networks	50
DEVICE Settings	50
Sound	50
Display	52
Storage	54
Battery	54
PC Connection	55
Apps	55
PERSONAL Settings	56
Accounts & Sync	56
Location Services	56
Security	57
Language & Input	60
Backup & Reset	60
SYSTEM Settings	61
Date & Time	61
Accessibility	62
Developer Options	63
Activate This Device	63
About Phone	63
System Update	63
People	66
Get Started with People	66
Access People	66
People List Options	67
Add a New People Entry	67
Save a Phone Number	69
Edit a People Entry	69
Add or Edit Information for a People Entry	69
Assign a Stored Picture to a People Entry	70
Assign a New Picture to a People Entry	70
Assign a Ringtone to a People Entry	71
Assign a Vibration to a People Entry	71
Add an Entry to Favorites	71

Send an Entry's Call to Voicemail	72
Delete a People Entry	72
Select People List	72
Customize People List	72
Synchronize People Entries	73
Display Options	73
Share a People Entry	74
Messaging	75
Gmail	75
Access Gmail	75
Send a Gmail Message	76
Read and Reply to Gmail Messages	76
Email	77
Add an Email Account (POP3 or IMAP)	77
Add a Corporate Account	77
Create Another Email Account	78
Compose and Send Email	79
View and Reply to Email	79
Manage Your Email Inbox	80
Email General Settings	80
Email Account Settings	81
Delete an Email Account	82
Text Messaging and MMS	82
Compose Text Messages	82
Send a Multimedia Message (MMS)	83
Save and Resume a Draft Message	85
New Messages Notification	85
Managing Message Conversations	85
Text and MMS Options	87
Social Networking Accounts	88
YouTube	88
Hangouts	89
Applications and Entertainment	91
Google Play™ on Your Device	91
Find and Install an Application	91
Create a Google Wallet Account	92
Request a Refund for a Paid Application	93

Open an Installed Application	93
Uninstall an Application	94
Get Help with Google Play	94
Navigation	94
Google Maps	94
Google Play Music App	97
Open the Play Music Library	97
Play Music	97
Now Playing Screen	98
Search for Music in the Play Music Library	99
Now Playing Queue	99
Use Playlists	100
Back Up Your Downloaded Music Files	101
Web and Data	102
Wi-Fi	102
Turn Wi-Fi On and Connect to a Wireless Network	102
Check the Wireless Network Status	103
Connect to a Different Wi-Fi Network	103
Data Services	103
Launch a Web Connection	104
Data Connection Status and Indicators	104
Browser	104
Learn to Navigate the Browser	105
Browser Menu	105
Select Text on a Web Page	107
Adjust Browser Settings	107
Adjust Browser Privacy and Security Settings	108
Adjust Browser Accessibility Settings	108
Adjust Browser Advanced Settings	109
Adjust Browser Bandwidth Management Settings	110
Adjust Browser Labs Settings	110
Set Search Engine	110
Create Website Settings	111
Reset the Browser to Default	111
Set the Browser Home Page	111
Read Web Page Offline	111
Manage Bookmarks	112

Camera and Video	114
Camera Basics	114
Review Screen	116
Take a Picture	116
Close the Camera	116
Record Videos	117
Video Viewfinder Screen	117
Record a Video	118
Camera/Video Settings	118
View Pictures and Videos Using Gallery	119
Open Gallery	119
View Photos and Videos	120
Zoom In or Out on a Photo	121
Watch a Video	121
Close Gallery	122
Working with Photos	122
Photo Options Menu	122
Edit a Photo	122
Rotate and Save a Photo	123
Crop a Photo	124
Share Photos and Videos	124
Send Photos or Videos by Email/Gmail	125
Send Photos or Videos by Multimedia Message	125
Send Photos or Videos Using Bluetooth	125
Share Photos or Videos on Google+	126
Share Photos on Picasa	126
Share Videos on YouTube	127
Tools and Calendar	128
Calendar	128
Add an Event to the Calendar	128
Invite Guests to Your Event	129
Event Alerts	129
View Events	130
Erase Events	132
Show or Hide Calendars	132
Synchronize Calendars with Your Device	133
Clock & Alarm	133

Open Clock	133
Set an Alarm	134
Change Alarm Settings	135
Calculator	136
Voice Service	136
Automatic Speech Recognition (ASR)	136
Text-to-speech Settings	137
Voice Search	138
Eco Mode	138
Bluetooth	140
Turn Bluetooth On or Off	140
The Bluetooth Menu	140
Connect a Bluetooth Headset or Car Kit	141
Reconnect a Headset or Car Kit	141
Disconnect or Unpair From a Bluetooth Device	142
Send and Receive Information Using Bluetooth	143
Send Information From Your Device to Another Device	143
Receive Information From Another Device	144
microSD Card	146
Insert the microSD Card	146
Remove the microSD Card	147
View the microSD Card Memory	148
Format the microSD Card	148
Unmount the microSD Card	148
Use the Device's microSD Card as a USB Drive	149
Use the Device's microSD Card as a Media Device	149
Notes	151
Copyrights	152
Index	153

Get Started

The following topics give you all the information you need to set up your device and use your service for the first time.

Your Phone at a Glance

The illustration below outlines your phone and its features.

 


Set Up Your Phone


You must first install and charge the battery to begin setting up your device.

1. Install the battery.


- Hook your thumb- or fingernail into the slot at the left side of the battery compartment cover (①) and gently lift up to remove the cover (②).

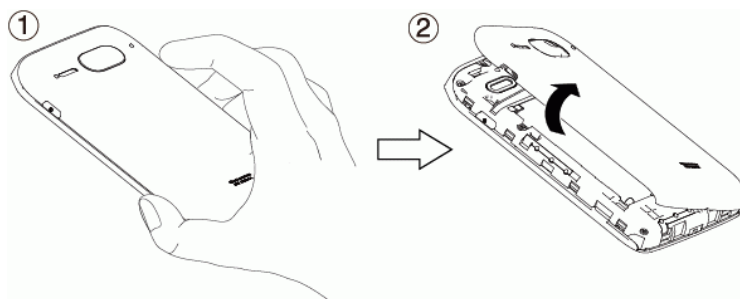

 - Insert the battery, contacts end first, and gently press into place (③).

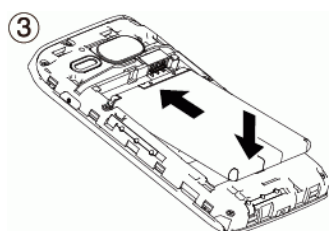


 - Make sure the locking tabs of the cover are seated and then gently press the cover. (④).

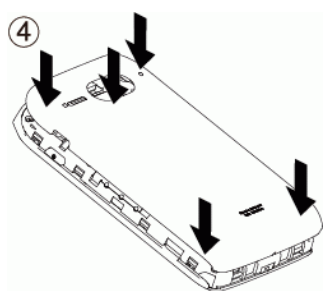

2. Charge your battery.

 - Plug the smaller end of the micro-USB cable into the device's charger/accessory jack.

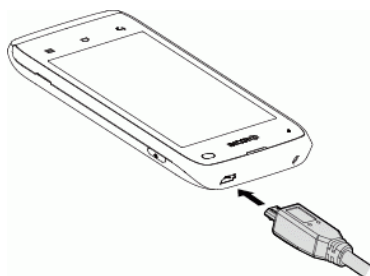

- Plug the other end of the USB cable into the charger, and then plug the charger into an electrical outlet.

WARNING: Do not handle a damaged or leaking Li-Ion battery as you can be burned.

Note: Your device's battery should have enough charge for the device to turn on and find a signal, set up voicemail, and make a call. You should fully charge the battery as soon as possible.

To remove the battery, after removing the battery compartment cover, grasp the tab extending from the battery pack and pull the battery out of its compartment.

Activate Your Device

Find out information about activating your device.

Register Your Phone on Sprint Prepaid

1. From your computer, visit sprint.com/prepaidactivate.
2. Choose an activation option and click **Next**. Then enter your zip code and click **Next**.
3. When prompted, enter the serial number (MEID DEC) printed on the label on your phone's packaging.
4. Follow the instructions to select a plan and payment method.
 - If you're swapping phones or bringing your number over from a different carrier, follow the prompts to sign in or provide additional information.
5. Continue to follow the instructions to program your phone. Once you see the "Congrats" page, your phone and plan are activated.
 - To confirm activation, make a phone call. If your phone is still not activated, visit sprint.com/prepaysupport for assistance. If you do not have access to the Internet, call Sprint Customer Service at 1-855-639-4644 from another phone.

Note: If you are having any difficulty with activation, visit sprint.com/prepaysupport for assistance..

Activate Your Phone

After completing the account set up on sprint.com/prepaidactivate, simply turn your device on. Your phone is designed to activate automatically.

- Press and hold the **Power** button to turn your phone on.
 - Your phone is designed to activate automatically. When you turn the phone on for the first time, you should see a Hands Free Activation screen, which may be followed by a PRL Update screen and a Firmware Update screen. Follow the onscreen instructions to continue.

If your phone is still not activated, visit sprint.com/prepaysupport for assistance. If you do not have access to the Internet, call Sprint Customer Service at 1-855-639-4644 from another phone.

Sprint Account Information

Find out about account passwords and information about managing your account and finding help.

Sprint Prepaid PINs and Passwords

As a Sprint customer, you enjoy unlimited access to your personal account information and your voicemail account. To ensure that no one else has access to your information, you will need to create PINs or passwords to protect your privacy.

Account Login and PIN

When you register your phone online, your Sprint Prepaid phone number will become your account login, and you will set up your own PIN to use when you sign on to sprint.com/prepaidmysprint.

Voicemail Password

You'll create your voicemail password when you set up your voicemail. See Set Up Voicemail for more information on your voicemail password.

For more information, or to change your PIN, sign on to sprint.com/prepaidmysprint.


 




Manage Your Account

Manage your Sprint Prepaid account from your computer, your Sprint Prepaid phone, or any other phone.

Online: sprint.com/prepaidmysprint

- View cash balance and/or payment date.
- Check minute usage (if not on an unlimited voice plan).
- Add a credit/debit card to set up AutoPay or make one-time payments.
- See or modify your price plan.
- Change your Account PIN.

From Your Sprint Prepaid Phone

- Dial    to make a payment.
- Dial    to access Sprint customer service or get answers to other questions.

From Any Other Phone

- For help, dial Sprint Customer Service at 1-855-639-4644 from any phone.




Reload Your Account

- Visit sprint.com/prepaidreload to reload your cash balance by making a one-time payment with a credit or debit card.

Set Up Voicemail




You should set up your voicemail and personal greeting as soon as your device is activated. Always use a password to protect against unauthorized access. Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off. See [Visual Voicemail](#) and [Voicemail \(Traditional\)](#) for details.

 
To set up visual voicemail:

1. Press **Home** , and touch  > **Voicemail**. (If your screen is locked, press the **Power** button to turn on the display, and then touch  and flick it to unlock the screen.)
2. Touch **Personalize now** and follow the system prompts to:
 - Create a password (part of standard voicemail).
 - Record your name announcement.
 - Record your greeting.
3. When prompted to enter information, touch **Dialpad** to bring up the onscreen dialpad to enter your numeric responses.
4. Once you have completed the setup process, return to the voicemail page (see step 1).
5. Touch the Welcome to Voicemail message on the screen to play a brief explanation of the voicemail services.

Note: Voicemail Password – It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your device is able to access your voicemail messages.

To set up traditional voicemail:

1. Press **Home** , and touch . (If your screen is locked, press the **Power** button to turn on the display, and then touch  and flick it to unlock the screen.)

2. Touch and hold  to dial your voicemail number.
3. Follow the system prompts to:
 - Create your password.
 - Record your name announcement.
 - Record your greeting.

Note: Voicemail Password – It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your device is able to access your voicemail messages.

Mobile ID




Mobile ID is a free service from Sprint that lets you download a complete mobile experience on demand. Customize your device to match whatever you're into... music, entertainment, social networking, and more.

"The Essentials" ID pack includes an entire set of apps, widgets, and more – handpicked by Sprint.



You can install as many as five ID Packs at any one time in addition to the default "The Essentials" ID pack which is installed automatically. You can easily switch from one ID Pack to another without losing any applications already installed.

Installing an ID Pack

Note: Your device must be activated, your battery should be fully charged, and you should be in a network coverage area before you install an ID Pack. ID Packs cannot be downloaded when only connected to a Wi-Fi network.

1. Press **Home** , and touch . (If your screen is locked, press the **Power** button to turn on the display, and then touch  and flick it to unlock the screen.)
2. Touch **Get New ID Packs**.
3. Touch **All ID Packs**.
4. Scroll to and touch the desired ID Pack.
5. Touch **Install**.
6. Read the Terms and Conditions and touch **Agree**.
 - If a **Downloading** message appears, read the message and touch **Continue**.
7. The ID Pack is now installed.

Switching ID Packs

1. Press **Home** , and touch .
2. Touch an ID Pack to replace your current pack.

— or —

Touch **Get New ID Packs** to install a new ID Pack and follow steps 3–7 of [Installing an ID Pack](#).

Note: Certain features of Mobile ID are subject to change.

Device Basics

The following topics will introduce the basic functions and features of your device.

Your Device's Layout




The illustrations and descriptions below outline your device's basic layout.



Key Functions

The following explains your phone's key functions.

- **Earpiece** lets you hear the caller and automated prompts.

- **LED Indicator** shows your device's battery status. It also flashes for incoming calls or pending notifications.
- **Volume Button** allows you to adjust the ringtone and media volumes when you are not on a call, or the voice volume during a call.
- **Back Key** () returns you to the previous screen or closes the dialog box.
- **Home Key** () returns you to the Home screen. Press and hold to display the recently used applications.
- **Menu Key** () lets you open the menus of the current screen or application.
- **Display Screen** displays all the information needed to operate your device. Use finger gestures to navigate and interact with items on the screen.
- **Power Button** lets you turn the device on or off, or turn the screen backlight on or off. This button can be configured to end a call.
- **Proximity Sensor/Light Sensor** automatically deactivates the touchscreen when you hold the device near your face. This prevents you from unintentionally activating device functions during a call. It also automatically turns off the backlight and brightens the display when you are in sunlight or a bright room, and dims the display in darker places.
- **Headphone Jack** allows you to plug in an optional headset for convenient, hands-free conversations.
- **Charger/Accessory Jack** allows you to connect the micro-USB cable (included) to charge the battery or to transfer files to and from a computer.

CAUTION! Inserting an accessory into the incorrect jack may damage the device.

- **Speaker** lets you hear the different ringtones and sounds. It also lets you hear the caller's voice in speakerphone mode.
- **microSD Card Slot** (under the battery) allows you to insert a microSD card to support external memory.
- **Internal Antennas** facilitate reception and transmission. To maximize performance, do not obstruct while using the device.
- **Microphone** allows other callers to hear you clearly when you are speaking to them.
- **Camera Flash** allows you to take pictures and videos in low light conditions.
- **Camera Lens**, as part of the built-in camera, lets you take pictures and videos.

 
Turn Your Device On and Off

The instructions below explain how to turn your device on and off.

Turn Your Device On

To turn your device on, follow the step below.

- Press and hold the **Power** button.

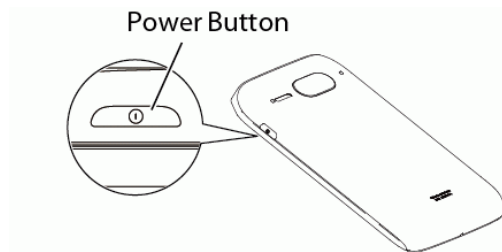

Turn Your Device Off

To turn your device off, follow the steps below.

- Press and hold the **Power** button which is located on the right side of the device to open the device options menu. Then touch **Power off** > **OK** to turn the device off.

Your screen remains blank while your device is off.

Turn Your Screen On and Off

Your device allows you to quickly turn the screen off when not in use and to turn it back on and unlock it when you need it.

Turn the Screen Off When Not in Use

To turn your screen off, follow the step below.

- To quickly turn the screen off, press the **Power** button. Pressing the **Power** button again will turn on your device screen and show the lock screen.

To save battery power, the device automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the device's screen is off.

Note: For information on how to adjust the time before the screen turns off, see **Sleep** within the [Display](#) section.

Turn the Screen On and Unlock It

1. To turn the screen on, press the **Power** button.

2. Flick  until it turns to  (with a blue frame) to unlock the screen.

- You can disable the screen lock or add more secure one from the System settings menu. See **Screen lock** within the [Security](#) section.

Touchscreen Navigation

Your device's touchscreen lets you control actions through a variety of touch gestures.

Touch

Touch once with your finger to select or launch a menu, option, or application. A light touch works best.

Warning: Do not touch with a pen or stylus. It may damage the touchscreen.

Warning: If the touchscreen of your device does get wet, dry it with a clean soft cloth before touching it.

Touch and Hold

To open the available options for an item (for example, options for a contact), simply touch and hold the item.

Drag

Touch and hold your finger before you start to move it. Do not release your finger until you have reached the target position.

Slide or Flick

To slide, quickly move your finger vertically or horizontally across the screen. To flick, move your finger in lighter, quicker strokes than sliding. When you're flicking through a long list, touch the screen to stop scrolling.

Pinch and Spread

Pinch the screen using your thumb and forefinger to zoom out or spread the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)

Rotate

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the device sideways. When entering text, you can turn the device sideways to bring up a bigger keyboard. See [Touchscreen Keyboard](#) for more details.

 
Note: The **Auto-rotate screen** check box in **Home**  > **Menu**  > **System settings** > **Display** needs to be selected for the screen orientation to automatically change.


Your Home Screens

The Home screen is the starting point for your device's applications, functions, and menus. You can customize your home screen by adding shortcuts, widgets, and more. Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.

Home Screen Overview

The below explains some examples you see on the Home screen.

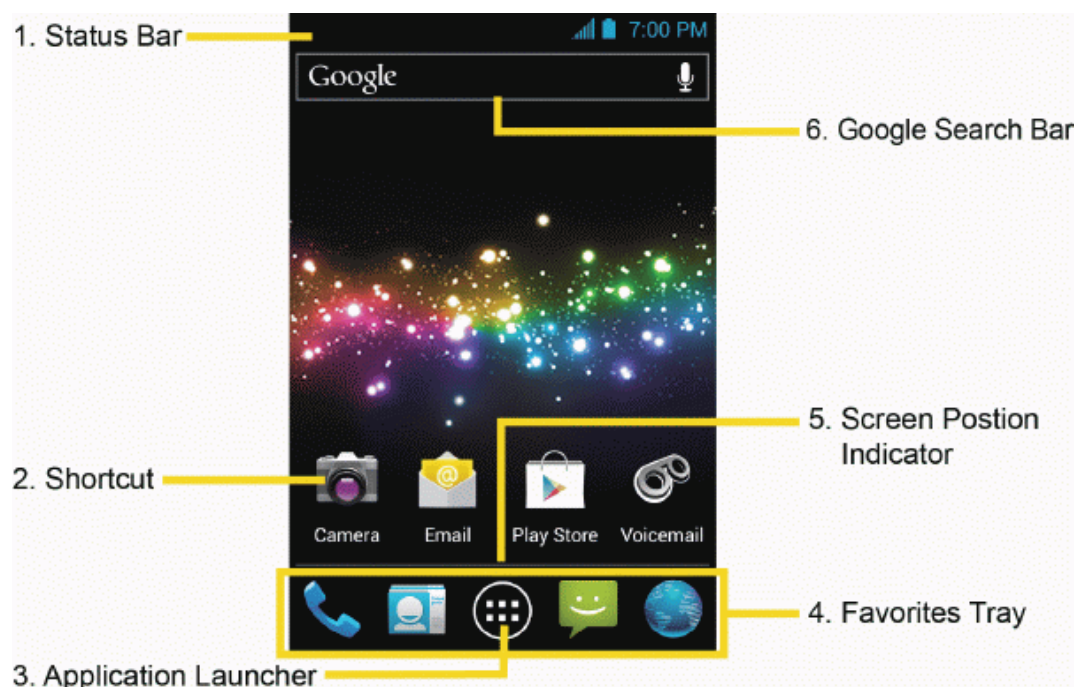


1. **Status Bar:** Displays the time, notification, and device status icons. Slide down to display the Notifications panel.
2. **Shortcut:** Allows users to quickly launch applications.
3. **Application Launcher:** Touch to display available applications and widgets on the device.
4. **Favorites Tray:** Keeps icons of your favorite application. The icons in the tray remain visible on every Home screen. You can change icons except the Application launcher icon (center).
5. **Screen Position Indicator:** Indicates where you are among five home screens.
6. **Google Search Bar:** Allows users to enter text or spoken keywords for a quick search on the device or on the Internet. Touch to enter text or touch  to speak your keyword.

Customize the Home Screens

Learn how to add, move, or remove items from the home screen.

Add Application Icons or Widget to the Home Screens

1. Touch  on the Favorites Tray.
2. Slide the **APPS** and **WIDGETS** screens to find the item you want to add to the Home screens.
3. Touch and hold an application or widget icon. The initial Home screen appears.
4. Pressing the application or widget icon, move your finger left or right to the place you want to add the icon.
5. Release your finger.

Move or Remove Items on the Home Screens

- Touch and hold the item you want to move or remove from the screen.
 - To move the item, drag it to a new area and release it.
 - To remove the item, touch and hold the item until you see “X Remove” at the top of the home screen, drag the item over “X Remove” until it turns red, and then release your finger.

Change Wallpaper

1. Touch and hold the empty area of the Home screens.
2. Select one of the following options.
 - **Gallery:** Select to use saved or captured pictures on your device. Touch to select a picture, and crop it before setting it as wallpaper.
 - **ID wallpapers:** Select to use ID wallpapers. Select the wallpaper and touch **Set wallpaper**.
 - **Live Wallpapers:** Select to use Live wallpapers. Select the wallpaper and touch **Set wallpaper**.
 - **Wallpapers:** Select to use preset wallpapers. Select the wallpaper and touch **Set wallpaper**.

Favorites Tray

Favorites Tray keeps five icons you usually use. The icons in the tray remain visible on every Home screen. You can change icons except the Application launcher icon located in the center of the tray.

To add a new icon on the Favorites Tray:

1. Remove the current icon on the tray. See “Move or Remove Items on the Home Screens” above.
2. Touch and hold the application icon and drag it to the Favorites Tray.
3. Release your finger.

Use Folders

You can combine several app icons in a folder. Drop one app icon over another on a Home screen, and the two icons will be combined.

1. Drag one application icon over another icon.
2. Release your finger. You can see two icons piled within a folder (a black circle).
3. Touch a circle. You can see application icons within the folder.
4. Touch **Unnamed Folder**. The keyboard opens and you can name this folder. To rename it, touch the name.






 
Status Bar







The status bar at the top of the screen provides device and service status information on the right side and notification alerts on the left. To view notification alerts, slide the status bar down.

Status Icons

The icons below are displayed in the status bar.














Icon	Description
	Bluetooth® enabled
	Wi-Fi® active (full signal)
	Vibrate
	Silent
	Network (full signal)
	Network (no signal)

Icon	Description
	3G or 1x (data service)
	Airplane mode
	Alarm set
	Battery (charging)
	Battery (full charge)
	Battery (discharged)

Notification Icons

The icons below appear in the notifications bar.



Icon	Description
	Missed call
	New email
	New Gmail
	New SMS message
	New MMS message
	Event
	Music application is running background
	USB connection
	Alarm
	When animating, GPS is active
	Downloading

Enter Text



You can type on your device using the touchscreen keyboards.

Touchscreen Keyboard

The touchscreen keyboard lets you enter text directly onscreen.

Your device provides convenient ways to enter letters, numbers, and symbols whenever you are prompted to enter text. To manually display the touchscreen keyboard, simply touch a text field where you want to enter text. There are two ways of entering text on your device: **Swype** and **Android keyboard**.

To switch the touchscreen keyboard:

1. Press **Home**  > **Menu** , and touch **System settings** > **Language & input** > **Default**.
2. Touch **Android keyboard** or **Swype**.

– or –

 
1. When a touchscreen keyboard is displayed, slide the status bar down.
2. Touch **Select input method**.
3. Touch **Android keyboard** or **Swype**.

Enter Text Using Swype


Swype® allows you to enter text by sliding your finger from letter to letter rather than touching each key individually. To enter text, slide your finger from one letter to the next.

Note: On first launch of the Swype keyboard, you may see a message from Nuance Communications, Inc. about the collection of usage data and be asked to cancel or accept this behavior. You can change this choice at any time in the **Contribute usage data** menu within the **Swype Connect** settings. See [Swype Settings](#).


Swype Keyboard Overview

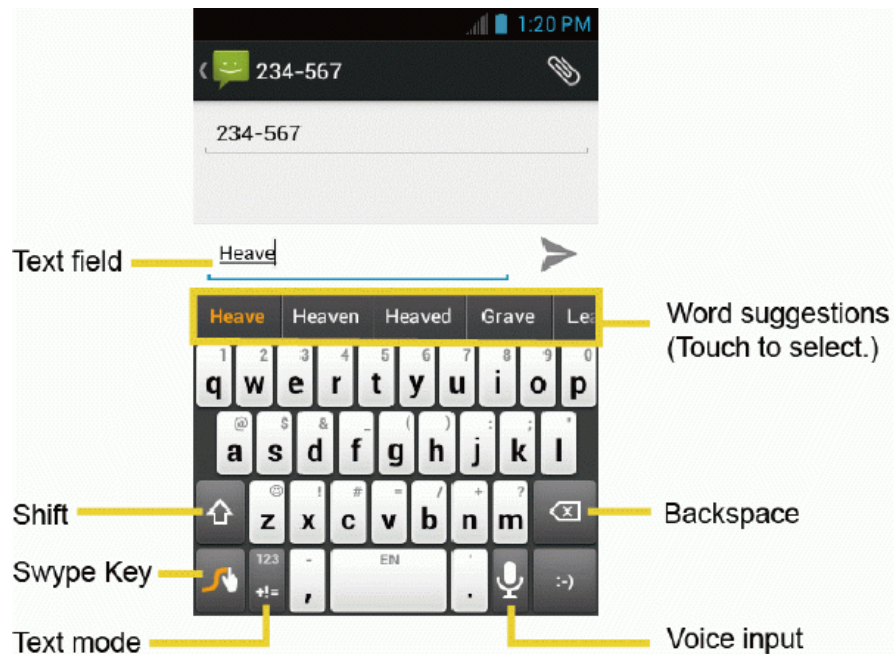

 
Note: Key appearance may vary depending on the selected application.

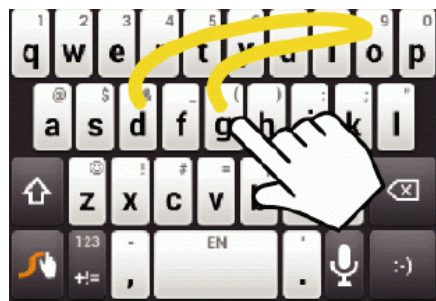

  Example: dog
Place your finger on the key with the first letter of the word and glide to the following letters. Lift your finger after the last letter.

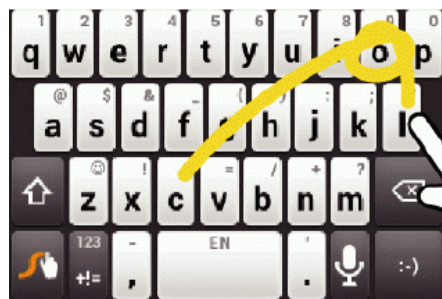



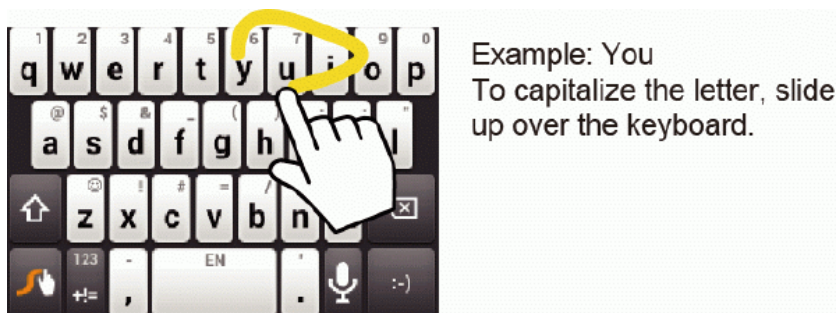





Example: cool
For double letters, circle the letter.




Tip: For tips on using Swype, touch and hold the Swype key  and then touch **How to Swype**.



You can do the following with the Swype keyboard:

Key	Description
	Text mode: Touch to toggle between the Alphabet keyboard and Number & Symbol keyboard.
	Swype Key: Touch and hold to access the tips or the settings of Swype.
	Voice input: Touch to enter text using your voice.
	Backspace: Touch to delete a character. Touch and hold to delete multiple characters.
	Smiley: Touch to insert a smiley. Touch and hold to view and select other smileys.
	Space: Touch to insert a space.
	Enter: Touch to confirm your entry.
	Shift: Touch to toggle between the uppercase, lowercase and caps lock text input.

For more information about the Swype application, visit swype.com.

ABC Mode

In ABC mode, you can enter letters from the onscreen keyboard by sliding your finger. While in this mode, the text mode key displays .

1. Select the ABC mode by touching . Capitalization in ABC mode can be altered by touching .



(Unshifted) to make all letters in a word lowercase.





(One-character-shifted) to capitalize only the first letter of a word.




(Caps Lock) to make all letters in a word uppercase.


2. Enter text using the Swype keyboard.



- If you make a mistake, touch  to erase a single character. Touch and hold  to erase an entire word.
- Touch the key for the characters you want to enter.
- Touch and hold to enter the character located at the upper right corner of the key. Confirm the character you want to enter is displayed and release your finger.
- Touch and long-hold to bring up a list of all the characters available on that key. Touch the character you want to enter from the list.


Numbers & Symbol Mode

In Number & Symbol mode, you can enter numbers and symbols from the onscreen keyboard by sliding your finger. While in this mode, the text mode key displays .

To enter numbers and symbols in Swype mode:


1. Select the Number & Symbol mode by touching .
2. Enter numbers or symbols using the Swype keyboard.

- If you make a mistake, touch  to erase a single character. Touch and hold  to erase an entire word.
- Touch the key for the number or symbol you want to enter.
- Touch and hold to enter the number or symbol located at the upper right corner of the key. Confirm the number or symbol you want to enter is displayed and release your finger.
- Touch and long-hold to bring up a list of all the characters available on that key. Touch the character you want to enter from the list.

Tip: Touch  to show the keyboard with the symbol characters located at the upper right corner of keys.


Entering Text by Speaking

You can use voice input to enter text by speaking anywhere that you can enter text with the touchscreen keyboard.

1. Touch  on the Swype keyboard.
2. Say the text you wish to enter into the microphone.

Adding a Word to the User Dictionary

 
You can use the user dictionary option to add new words into the dictionary.

1. Enter the word you want to add on the Swype keyboard.
2. Touch and hold the word until it is highlighted, and then touch .

— or —

While the word is underlined, touch  twice.

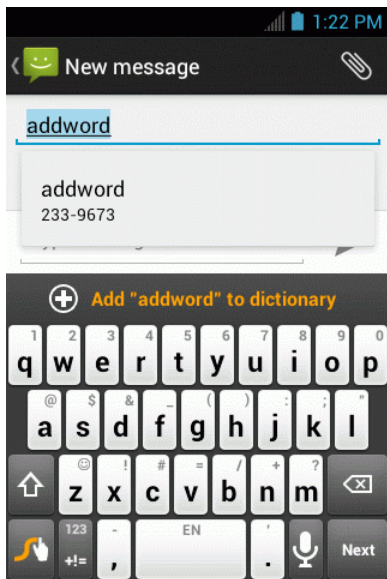


3. When you will see a prompt that says **Add "the word you entered" to dictionary**, touch it. The below is an example screen displayed when adding a word “addword” to the dictionary.






To review words added to the dictionary:

1. Touch and hold  on the Swype keyboard.




— or —

Press **Home**  > **Menu** , and touch **System settings** > **Language & input**. Touch  next to **Swype**.

2. Touch **Personal dictionary**. (A list of words you have added to the dictionary is displayed.)
 - To remove a word, touch the check box next to the word you want to remove, and then touch  > **OK**.
 - To remove all the words in the dictionary, touch  to check the all check boxes, and then touch  > **OK**.

Swype Settings

You can customize the Swype settings as you like.

1. Press **Home**  > **Menu** , and touch **System settings** > **Language & input**.
2. Touch  next to Swype.

Tip: You can open the Swype settings from the Swype keyboard. Touch and hold  on the Swype keyboard.

3. Choose from the following options.
 - **How to Swype:** Touch to learn Swype in quick steps.
 - **Preferences:** Touch to show the following settings menu for Swype.
 - **Vibrate on keypress:** Check to activate vibration when a key is touched.
 - **Sound on keypress:** Check to turn on sound when a key is touched.
 - **Auto-correction:** Check to automatically correct typing mistakes.
 - **Show helpful tips:** Check to turn on a flashing indicator for quick help.
 - **Auto-spacing:** Check to automatically insert spaces between words.
 - **Auto-capitalization:** Check to automatically capitalize the first letter of sentence-initial words within the specific text entry fields.
 - **Show complete trace:** Check to display the complete Swype path.
 - **Pop-up on keypress:** Check to display character above key when typing.
 - **Next word prediction:** Check to predict words based on previously entered text.
 - **Enable handwriting:** Check to enable the handwriting function.



- **Reset Swype's dictionary:** Touch to delete all the words you have added to Swype's dictionary.
- **Version:** Displays the current Swype version.
- **Language Options:** Touch to select the language to use on Swype.
- **Swype Connect:** Touch to show the options to personalize your personal dictionary and the options for data collection, Swype updates, language downloads, etc.
- **Personal dictionary:** Touch to review and remove the words added to your personal dictionary for Swype.
- **Updates:** Touch to check for available updates for Swype.

For more information about the Swype settings, visit swype.com.

Enter Text Using the Android Keyboard

When entering text, you can choose to use the Android keyboard.

 
To select the Android keyboard:

1. Press **Home**  > **Menu** , and touch **System settings > Language & input > Default**.
2. Touch **Android keyboard**.






 


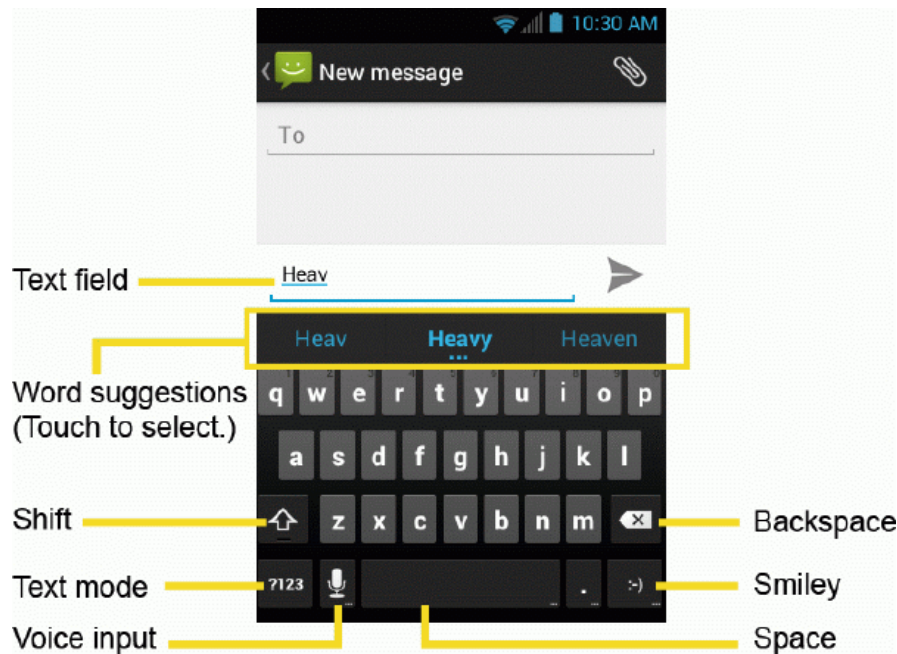
– or –


1. When a touchscreen keyboard is displayed, slide the status bar down.
2. Touch **Select input method**.
3. Touch **Android keyboard**.

Android Keyboard Overview




You can do the following with the Android keyboard:

Key	Description
	Shift: Touch to toggle between lower case or upper case.
	Capslock: Double-touch the lower case or upper case shift key.
	Text mode: Touch to toggle between the Alphabet keyboard and Number & Symbol keyboard.
	Voice input: Touch to enter text using your voice.
	Backspace: Touch to delete a character. Touch and hold to delete multiple characters.
	Smiley: Touch to insert a smiley. Touch and hold to view and select other smileys.
	Next: Touch to go to the next text entry field.
	Alternate: Touch to toggle between the default Number & Symbol keyboard and additional Number & Symbol keyboard.
	Go: Touch to go to a Web address.

Key	Description
	Space: Touch to insert a space. Touch and hold to select the input method.

ABC Mode

In ABC mode, you can enter letters from the onscreen keyboard. While in this mode, the text mode key displays .

1. Select the ABC mode by touching .

- You can switch the capitalization style in ABC mode by touching the shift key .



(Unshifted) to make all letters in a word lowercase.



(One-character-shifted) to capitalize only the first letter of a word.

- You can select the caps lock by double-touching  or  to make all letters in a word uppercase.



(Caps Lock) to make all letters in a word uppercase.

2. Touch the corresponding alphabet keys to enter the word.

Tip: Some keys have alternate characters. Touch and hold a key to bring up a list of all the characters available on that key. Touch the character you want to enter from the list.

Numbers and Symbols Mode

In Number & Symbol mode, you can enter numbers and symbols only from the onscreen keyboard.

 
While in this mode, the text mode key displays .

To enter numbers:


1. Select the Number & Symbol mode by touching .

2. Touch the appropriate numeric key.

To enter symbols:


1. Select the Number & Symbol mode by touching .
2. Touch the appropriate symbol key.

— or —




Touch  to select from additional symbol characters.

 Tip: Some keys have alternate characters. Touch and hold a key to bring up a list of all the characters available on that key. Touch the character you want to enter from the list.


Entering Text by Speaking

Voice input is an experimental feature that uses Google's speech-recognition service, so you must have a data or Wi-Fi connection to use it. If the Android keyboard does not display , voice input is not turned on.

To turn on voice input:




1. Press **Home**  > **Menu** , and touch **System settings** > **Language & input**.
2. Touch  next to **Android keyboard**.
3. Touch **Voice input key** and select **On main keyboard** or **On symbols keyboard**.

To enter text by speaking:

1. Touch  on the Android keyboard.
2. Say the text you wish to enter into the microphone and touch **Done**.

Adding a Word to the User Dictionary

You can use the user dictionary option to add new words into the dictionary.

1. Press **Home**  > **Menu** , and touch **System settings** > **Language & input** > **Personal dictionaries**.
2. Touch a language.
3. Touch .
4. Type the word you want to add, and touch **OK**. (A list of words you have added to the dictionary is displayed.)
 - Touch a word to edit it.

- Touch  to delete it.

Android Keyboard Settings

1. Press **Home**  > **Menu** , and touch **System settings** > **Language & input**.

– or –

On the Android keyboard, touch and hold the space key and touch **Configure input methods**.

2. Touch  next to **Android keyboard**.

Tip: Check **Show settings key** to always show  on the Android keyboard.

Tip: If  is not displayed on the Android keyboard, touch and hold the key at the left of the space key, and then touch **Android keyboard settings**.

 
3. Choose from the following options:
 - **Input languages:** Touch to select the input language. The dictionary for the selected language will be enabled.
 - **Auto-capitalization:** Check to automatically set the first letter of a sentence to upper case.
 - **Vibrate on keypress:** Check to activate vibration when a key is touched.
 - **Sound on keypress:** Check to activate a clicking sound when a key is touched.
 - **Popup on keypress:** Check to display a larger image of the key above it when you touch it.
 - **Show settings key:** Check to display the keyboard settings key on the keyboard.
 - **Voice input key:** Touch to select where the Voice Input key is displayed from **On main keyboard**, **On symbols keyboard**, or **Off**.
 - **Add-on dictionaries:** Touch to select the dictionary you want to use.
 - **Auto correction:** Touch to allow the space bar and punctuation to automatically correct mistyped words.
 - **Show correction suggestions:** Touch to select when correction suggestions are displayed.
 - **Advanced settings:** Touch to open the settings for expert users.

Copy and Paste Text



In applications that require text entry, such as Messaging, use the copy and paste functions to copy and paste text from one application to another.

To copy and paste the text:

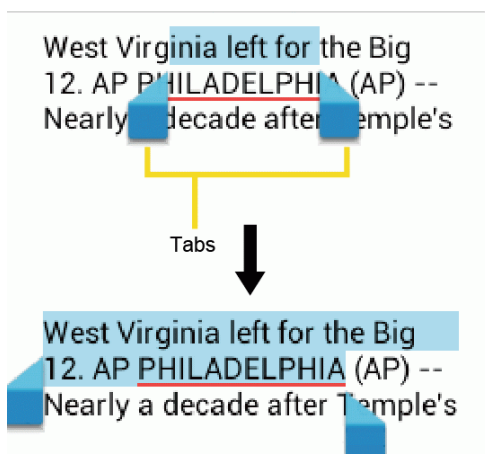1. Open the application or received message that you want to copy text from.
2. Touch and hold the text body. Selection tabs appear, and currently selected words or characters are highlighted. Drag tabs to expand or reduce the range of selected text.




Tip: Touch  or , or **SELECT ALL** to select all the text on the Web page.

3. Touch  or  to copy.
4. Open the application that you want to paste the text to.
5. Touch and hold the text box where you want to paste the text.
6. If you want to add the selected text to the current text, drag a selection tab to the position where you want to insert selected words or characters.
7. Touch and hold the text box, and touch **PASTE**.

 
To copy text from a Web page:

1. Scroll to the area of the Web page containing the text you want to select.
2. Touch and hold the text you want to copy. Drag tabs to expand or reduce the range of selected text. Any selected text will appear highlighted.

Tip: Touch **SELECT ALL** to select all the text on the Web page.

3. Touch  > **Copy**.
4. Open the application that you want to paste into.
5. Touch and hold the text box where you want to paste the text, and touch **PASTE**.

To copy a URL:

1. To copy a URL, touch and hold the URL to display the options menu.
2. Touch **Copy link URL** or .
3. Open the application that you want to paste into.
4. Touch and hold the text box where you want to paste the URL, and touch **PASTE**.

Google Account

You will need a Google account to access several device features such as Gmail™, Google Maps™, Google Maps™ with Navigation (Beta), Google Talk™, and Google Play™ applications. Before you can access Google applications, you must enter your account information. These applications sync between your device and your online Google account.

Create a Google Account



If you do not already have a Google account, you can create one online or by using your device.

Note: Although you need a Gmail account to use certain features of your device, such as Google Play™, you do not need to use Gmail as the default account for your device.

Create a Google Account Online

1. From a computer, launch a Web browser and navigate to google.com.
2. On the main page, click **Sign in > Create an account for free**.
3. Follow the onscreen prompts to create your free account.

Create a Google Account Using Your Device



1. Press **Home**  > **Menu** , and touch **System settings > Accounts & sync**.
2. Touch **ADD ACCOUNT**, and then touch **Google**.
3. Touch **New**.
4. Enter your First name, Last name, and touch **Next**.
5. Enter your email address and touch **Next**.
6. When prompted, enter and reenter a password and touch **Next**.
7. Create a security question and answer, enter a secondary email address to help you recover your password if you ever lose it, and then touch **Next**.

Note: When setting up a new Google account, either on your device or online, you will be prompted to add a secondary email address. Enter a second Gmail address or any other email address from which you currently send and receive email. This address is used to authenticate your account should you ever encounter problems or forget your password. It is strongly encouraged for Android users so you can regain access to Google Mobile™ services and purchases on your device.

8. Select if you want to join Google+ or not.
9. Read and accept the Google Terms of Service, and then touch **I accept**.
10. Enter the characters shown, and then touch **Next**.
11. Select if you save your credit card number or not.
12. Select if you want to set a PIN code in Google Play or not.
13. Select items you want to sync with Google servers and touch **Next**.



Sign In to Your Google Account

If you already have a Google account, sign in with the account.

1. Press **Home**  > **Menu** , and touch **System settings > Accounts & sync**.
2. Touch **ADD ACCOUNT**, and then touch **Google**.
3. Touch **Existing**.
4. Enter your Gmail username and password, and then touch **Sign in**.
5. Select if you want to join Google+ or not.
6. Select if you want to set a PIN code in Google Play if requested.
7. Select items you want to sync with Google servers and touch **Next**.

Add Account

You can add additional accounts to your device.




1. Press **Home**  > **Menu** , and touch **System settings > Accounts & sync**.
2. Touch **ADD ACCOUNT**.
3. Touch an account type.
 - Corporate, Google, etc.
4. Follow the instructions on the screen to add your additional account.

- Depending on the account type, you may need to enter an email address or user address, password, domain name, or other information. For Corporate accounts, contact your server administrator to determine what information you will need.

General Sync Settings

Let applications synchronize data in the background, whether or not you are actively working in them.

As default your Google accounts are automatically synced.

1. Press **Home**  > **Menu** , and touch **System settings > Accounts & sync**.
2. If you see  at the upper right corner, your accounts will automatically sync. Touch the account with data you want to sync.
3. Touch the types of data you wish to synchronize automatically. (A check mark indicates the feature is enabled.)

Note: If you do not want to sync your Google account automatically, touch  at the upper right corner and confirm  is displayed.

Note: If you want to remove the account, press **Menu**  > **Remove account**.

Phone




With the network and your device's calling feature, you can enjoy clear calling across the country.

Make Phone Calls

There are several convenient ways to place calls from your device.

Call Using the Phone Dialpad

The most "traditional" way to place a call is by using the phone's dialpad.

1. Press **Home** , and touch  to display the phone screen.
 - If the phone screen is not displayed when the Phone application opens, touch the Phone tab .
2. Touch the number keys on the dialpad to enter the phone number.







3. Touch the Talk key  on the bottom of the screen to call the number.

4. To end the call, touch .






Call from Recent Calls

The Recent Calls list lets you quickly place calls to recent incoming, outgoing, or missed numbers.

1. Press **Home** , and touch  to display the phone screen.
2. Touch  to display the Call log list.
3. Touch the phone icon  next to a number or a People entry to place a call.
 - For additional options, touch the name or number.




Call from People

You can place phone calls directly from entries in your People list.

1. Press **Home** , and touch  to display the phone screen.
2. Touch  to display the People list. Your frequent People entries are displayed at the top of the list.
 - Touch  to search your People entry.
 - Press **Menu**  and touch **Contacts to display** to select a list which contains your People entries.
3. Touch the entry you want to call and then touch the number to place a call.




 
 

Call a Number in a Text Message

While viewing a message, you can place a call to a number that is in the body of the message.


 
 

1. Press **Home** , and touch  > **Messaging**.
2. Touch the message with the phone number.
3. The Phone screen then opens, with the phone number automatically filled in and ready to be dialed. To place the call, touch .

Call Emergency Numbers

You can place calls to 9-1-1 even if the device's screen is locked or your account is restricted.

1. Flick  to unlock the screen, if the device's screen is locked. For more information, see [Turn Your Screen On and Off](#).
2. Touch  on the Home screen.
3. Touch    .

To call the 9-1-1 emergency number when the device's screen is locked with a pattern, PIN, or password (see [Screen Lock](#)):

1. Touch **Emergency call** on the screen.
2. Touch    .

Enhanced 9-1-1 (E 9-1-1) Information

This device features an embedded Global Positioning System (GPS) chip necessary for utilizing E 9-1-1 emergency location services where available.

When you place an emergency 9-1-1 call, the GPS feature of your device seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.





Important: Always report your location to the 9-1-1 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs), may not be equipped to receive GPS location information from your device.

Call Numbers with Pauses

You can dial phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.





There are two types of pauses available on your device:

- **Add 2-sec pause:** Automatically sends the next set of numbers after two seconds.
- **Add wait:** Sends the next set of numbers when you touch **Yes** in the pop-up window.

1. Press **Home** , and touch  and enter all or part of a number.
2. Press **Menu** , and touch **Add 2-sec pause** or **Add wait**.
3. Enter additional numbers.
4. Touch  to dial the number.

Call Using Plus (+) Code Dialing

When placing international calls, Plus Code Dialing automatically enters the international access code for your location (for example, 011 for international calls made from the U.S.). See [North American Dialing](#).




1. Press **Home** , and touch  to display the phone screen.
2. Touch and hold  until you see a “+” on the display screen.
3. Enter the country code and phone number, and then touch . The device automatically prepends the access code for international dialing, followed by the country code and phone number.

Call Using the Internet Calling

When Wi-Fi network is available, you can make and receive calls through an Internet calling account.



Important: Calling a phone number using Internet calling may incur additional charges.

Adding an Internet Calling Account




1. Press **Home** , and touch  to display the phone screen.
2. Press **Menu** , and touch **Settings**.
3. Touch **Accounts** under **INTERNET CALL SETTINGS**.
4. Touch **ADD ACCOUNT**.
5. Enter your account details and touch **SAVE**.
6. To set your phone to receive Internet calls on your added account, touch the **Receive incoming calls** check box.

Note: This requires the phone to maintain a connection with a Wi-Fi data network, which reduces the life of your phone's battery.

Making an Internet Call

1. Press **Home** , and touch  > **People**.
2. Touch an entry, and then touch **Internet call**.

Changing Internet Calling Settings

1. Press **Home**  and touch  to display the phone screen.
2. Press **Menu** , and touch **Settings**.
3. Touch **Use Internet calling** under **INTERNET CALL SETTINGS**.
4. Select an option from the following:
 - **For all calls when data network is available** to use Internet calling for all calls when Wi-Fi network is available.
 - **Only for Internet calls** to use Internet calling only for calls to Internet calling addresses.
 - **Ask for each call** to ask each time you make a call.

Receive Phone Calls



The following information lets you know how to answer incoming calls, mute the ringtone on incoming calls, reject incoming calls, and more.

When you receive a phone call from an entry stored in People, the Incoming call screen appears and displays the caller ID icon, name, and phone number of the calling party. When you receive a phone call from someone who is not stored in People, only the default caller ID icon and phone number appear on the Incoming call screen.

Note: If your device is turned off, all calls automatically go to voicemail.

Answer an Incoming Call

Below are different ways to answer an incoming call.

- On the Incoming call screen, flick the Answer icon .
- While you connect a Bluetooth device, you can choose to receive the call by the Bluetooth device or your device. Flick the Answer icon  to the direction of your favorable device.


Mute the Ringtone

To mute the ringtone without rejecting the call:

- Press the volume button up or down.


Reject an Incoming Call

Reject an incoming call.

- Flick the Ignore icon  to send the call to your voicemail inbox.

Reject a Call and Send a Text Message

You can automatically send a text message to a caller and reject the incoming voice call.

- Flick the Ignore & Text icon  to ignore the call and send a message to the caller.




Visual Voicemail

Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first. This new feature periodically goes out to your voicemail, and gathers the caller information from all of the current voicemails. It then populates a list with the caller name and number, along with the length of time and priority level of the voicemail message.

Set Up Visual Voicemail

Setting up Visual Voicemail follows many of the same procedures as setting up traditional voicemail. You should set up your voicemail and personal greeting as soon as your phone is activated. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

Note: To set up your traditional voicemail box, see [Set Up Voicemail](#).

1. Press **Home** , and touch  > **Voicemail**. (If your screen is locked, press the **Power** button to turn on the display, and then touch  and flick it to unlock the screen.)



2. Touch **Personalize now** and follow the system prompts to:
 - Create a password (part of standard voicemail).
 - Record your name announcement.
 - Record your greeting.
3. When prompted to enter information, touch **Dialpad** to bring up the onscreen dialpad to enter your numeric responses.

 
Important: Voicemail Password – It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

4. Once you have completed the setup process, return to the voicemail page (see step 1).
5. Touch the Welcome to Voicemail message on the screen to play a brief explanation of the voicemail services.


Review Visual Voicemail

Visual Voicemail lets you easily access and select which messages you want to review.

1. Press **Home** , and touch  > **Voicemail**.

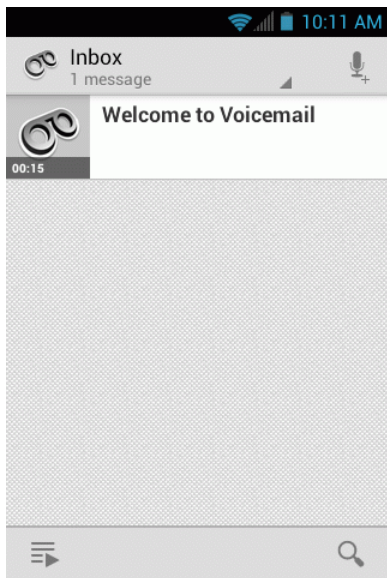

 
Note: Touch **Inbox** at the top left on the screen to move to other folders, such as Trash or SD card.









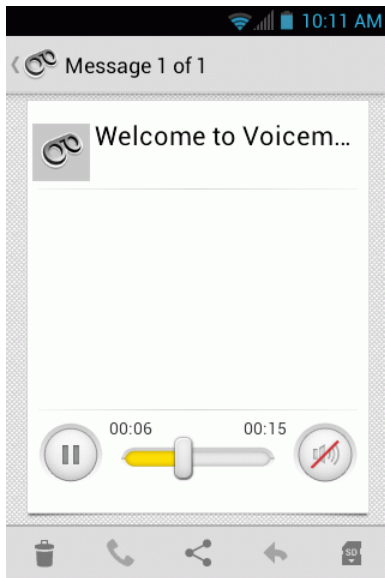


2. Touch  to play all the new messages.




– or –

Touch a message to play it.

3. The following features are available while reviewing a voicemail message:



-  provides a visual timeline for the current message. Touch and drag this bar to scrub through the message to different points.
- Touch  to pause the playback. Touch  to resume.
- Touch  or  to turn the speakerphone on or off during playback.
- Touch  to delete the current voicemail message. The message will be moved to the Trash folder.
- Touch  to call the person who left the voicemail message.
- Touch  to share the message. Select an available method and follow the onscreen instructions.
- Touch  to reply to the message.
- Touch  to move the message to the SD card folder.
- Touch  to move the message from the Trash folder to the Inbox folder.

Tip: More options may be available by touching and holding a message, such as  or  to mark the message as read or unread, or  to empty the Trash folder.

Listen to Multiple Voicemail Messages









When you are done listening to a voicemail message you can easily access other voicemail messages without returning to the main voicemail screen.

1. Listen to the current voicemail message.
2. Swipe your finger left or right to display the next or previous message. (It will begin playing automatically.)

You can navigate through voicemail messages as frequently as you'd like. You can even move to the next or previous message before you're finished listening to the current one.

Compose a Message

Record a voice message and share it.

1. Press **Home** , and touch  > **Voicemail** > .
2. Touch  to start recording.
3. Touch  to stop recording.
4. Touch  to review the recorded message.
 - Touch  > **Re-record** to discard the current message and start a new recording.
5. Touch  to select a method to share the recorded message and follow the onscreen instructions.
 - You will be asked to set a Display name if it is not set.

Configure Visual Voicemail Settings




The Visual Voicemail settings menu lets you access settings for notifications, pictures, greetings, and more.

1. Press **Home** , and touch  > **Voicemail**.
2. Press **Menu** , and touch **Settings**. From this menu, you can:

- Touch **Personalize voicemail** to change your voicemail greeting for incoming calls and update password. See [Change Your Main Greeting via the Voicemail Menu](#).
- Touch **Notifications** to determine how you are notified of new voicemails.
- Touch Delete messages to set the timing to permanently delete the messages in the Trash folder.
- Touch **Display name** to enter a name or number that is attached to your outgoing voicemails as part of an identification string. See [Edit the Display Name via the Voicemail Menu](#).
- Touch **View quick tips tutorial** to display some quick tips for using visual voicemail.
- Touch Help to go to the help page of Visual Voicemail.
- Touch Send feedback to send your feedback on the visual voicemail.
- Touch **Check for update** to search for an update to your Visual Voicemail software.
- Touch **About Voicemail** to view build information about the current visual voicemail application.




Change Your Main Greeting via the Voicemail Menu

Your main greeting can be changed directly via the Visual Voicemail system. This direct access saves you from having to navigate within the voicemail menu.

1. Press **Home** , and touch  > **Voicemail**.
2. Press **Menu** , and touch **Settings** > **Personalize voicemail**.
3. Touch **OK** to connect to the voicemail system. Follow the prompts to change your current greeting.

Edit the Display Name via the Voicemail Menu

From your Visual Voicemail menu, you can quickly change the name or number attached to your voice messages.




1. Press **Home** , and touch  > **Voicemail**.
2. Press **Menu** , and touch **Settings** > **Display name**.
3. Touch the field and enter an identifying name or number (used to identify you to recipients of your voice messages).
4. Touch **OK** to save your information.

Voicemail (Traditional)

In addition to [Visual Voicemail](#), your device and Sprint Prepaid service always offer traditional voicemail service accessed through the Phone application.

Set Up Voicemail


You should set up your voicemail and personal greeting as soon as your device is activated. Always use a password to protect against unauthorized access. Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off.

1. Press **Home** , and touch .
2. Touch and hold  to dial your voicemail number.
3. Follow the system prompts to:
 - Create your password.
 - Record your name announcement.
 - Record your greeting.

Important: Voicemail Password – It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your device is able to access your voicemail messages.

Voicemail Notification

There are several ways your device alerts you to a new voicemail message.



 
- By sounding the assigned notification sound.
- By vibrating the device.
- By displaying  in the notifications area of the status bar when new unheard voicemail message(s) is received. The figure is the number of new messages. This icon means you have 10 unheard new messages.

Note: Your device accepts messages even when it is turned off. However, your device notifies you of new messages only when it is turned on and you are in the service area.



Retrieve Your Voicemail Messages

You can review your messages directly from your device (using either traditional voicemail or Visual Voicemail) or from any other touch-tone phone.

Use Traditional Voicemail to Access Your Messages

1. Press **Home** , and touch .
2. Touch and hold . If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

Use Visual Voicemail to Access Your Messages

1. Press **Home** , and touch  > **Voicemail**.
2. Touch an entry to listen to the message.

Note: Depending on your plan, you may be charged when you are accessing your voicemail from your wireless device.

Use Another Phone to Access Messages




 

1. Dial your wireless phone number.
2. When your voicemail answers, press the asterisk key (*) on the phone.
3. Enter your password.

Phone Call Options

Your phone application provides many useful features and options to help you make the most of your calling experience.

Caller ID

Caller ID identifies a caller before you answer the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. Press **Home** , and touch .
2. Touch   .

3. Enter a phone number.

4. Touch .

To permanently block your number, call Sprint Prepaid Customer Service.

Call Waiting





When you're on a call, Call Waiting alerts you to incoming calls by sounding beeps. Your device's screen informs you that another call is coming in and displays the caller's phone number (if it is available).

To respond to an incoming call while you're on a call:

- Flick .


To switch back to the first caller:

- Touch **Switch calls**.

Note: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing     before placing your call. Call Waiting is automatically reactivated once you end the call.

3-Way Calling

With 3-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. On the Phone screen, enter a number and touch the Talk key .
2. Once you have established the connection, touch Add call, and dial the second number. (This puts the first caller on hold and dials the second number.)
3. When you're connected to the second party, touch **Merge calls**.




If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

- To end the 3-way call, touch .

Other Call Settings

Use the phone settings menu to set additional call options including North American dialing and TTY mode.

North American Dialing




1. Press **Home**  and touch  to display the phone screen.
2. Press **Menu** , and touch **Settings**.
3. Check **North American dialing** under **OTHER CALL SETTINGS** when placing international calls while in the United States or Canada. See [Call Using Plus \(+\) Code Dialing](#).

TTY Mode

A TTY (teletypewriter, also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities to communicate by telephone.

Your device is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your device and TTY device will connect using a special cable that plugs into your device's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

To turn TTY mode on or off:

1. Press **Home**  and touch  to display the phone screen.
2. Press **Menu** , and touch **Settings**.
3. Touch **TTY mode**.
4. Touch **TTY Full**, **TTY HCO**, or **TTY VCO** to turn TTY mode on.

– or –

Touch **TTY Off** to turn TTY mode off.

 
Note: When enabled, TTY mode may impair the audio quality of non-TTY devices connected to the headset jack.

Warning: 9-1-1 Emergency Calling

It is recommended that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 9-1-1 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.


In-Call Options

While you're on a call, you will see a number of onscreen options. Touch an option to select it.

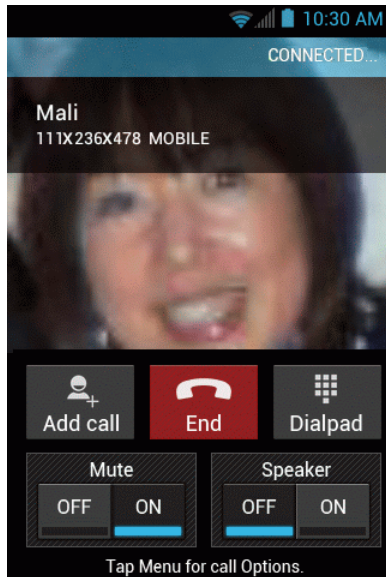

- **Add call:** Touch to initiate a 3-way call.
- **End:** End the current call.
- **Dialpad/Hide:** Toggle the appearance of the onscreen dialpad to enter additional numbers, for example, an extension or access code.
 - For example: When you call your bank's 800 number, use your dialpad to enter your account number and PIN.
- **Mute:** Mute the microphone (☒ ON) during an active call, or unmute the microphone (☐ OFF).
- **Speaker:** Route the device's audio through the speaker (☒ ON) or through the earpiece (☐ OFF).

Warning: Because of higher volume levels, do not place the device near your ear during speakerphone use.







Press **Menu**  during a call to display a list of additional in-call features. Touch an option to select it.

- **Contacts:** Display your People list.
- **Bluetooth:** Route the device's audio through a connected Bluetooth headset (checked) or through the speaker (not checked).

Call Log

The Call log tab of the Phone application lists up to 500 recent incoming, outgoing, and missed calls.









View Recent Calls

1. Press **Home** , and touch  to display the phone screen.
2. Touch  to display the Call log list.
 - You can determine if an entry was an incoming, outgoing, or a missed call from the icons shown below.
 -  = Incoming Call
 -  = Outgoing Call
 -  = Missed Call

Call Log Options





- To make a call from Call log, see [Call from Recent Calls](#).

For additional options:

1. Press **Home** , and touch  to display the phone screen.
2. Touch  to display the Call log list.
3. Touch the name to display the options list.
 - Touch  to send a text message.
 - Touch  to view a People entry.
 - Touch  to add the number to People.
 - Press **Menu** , and touch **Remove from call log** to remove the log.
 - Press **Menu** , and touch **Edit number before call** to edit the number before calling.

Clear Call Logs

Use the menu option to clear the Call log list.

1. Press **Home** , and touch  to display the phone screen.
2. Touch  to display the Call log list.
3. Press **Menu** , and touch **Clear call log > OK**.

Device Settings

The following topics provide an overview of items you can change using your device's **Settings** menus.

WIRELESS & NETWORKS Settings

This group of settings lets you control your device's wireless network settings, Wi-Fi settings, Bluetooth, and more.

Wi-Fi Settings

Your device lets you take advantage of Wi-Fi hotspots for high-speed data access using available computer networks. For details on your device's Wi-Fi features and settings, see [Wi-Fi](#).

Bluetooth Settings





Your device's Bluetooth capabilities let you use wireless headsets, send and receive pictures and files, and more. For details on your device's Bluetooth settings, see [Bluetooth](#).

Data Usage

Your device provides a new data usage chart feature which shows current usage as well as usages in a specific period of time.

View Data Usage by Application



You can view the amount of the data usage for the specific period of time.

1. Press **Home**  > **Menu** , and touch **System settings** > **Data usage**.
2. Confirm **Mobile data** is set to .
3. Touch  of **Data usage cycle** to change the period of time for which the chart will display the data usage.
4. Drag the bottom of the white line to set the short period of time you want to see the data usage within that cycle.
 - The usage amount will be displayed just below the chart.

Set Data Usage Limit




You can also set the limit for mobile data in case you don't have an unlimited data plan which cuts off data at a specified threshold.

Warning: The usage displayed is measured by your phone. Your carrier's data usage accounting may differ and the usage in excess of your data limit plan can result in data speed reduction. Data usage limit set in this menu is not guaranteed to prevent additional data speed reduction. Visit sprint.com/prepaysupport for details.

1. Press **Home**  > **Menu** , and touch **System settings** > **Data usage**.
2. Touch to check **Set mobile data limit**. Read the message and touch **OK**.
3. Drag the right side of the red line at the top of the chart to set the limit you want.
 - When your data usage reaches the limit, mobile data will be turned off automatically.
4. Drag the right side of the orange line under the red line to set the level where you receive the warning.
 - When your data usage reaches the level set with the orange line, you will see the message.

Restrict Data Usage by Application

You can restrict the background data usage.


1. Press **Home**  > **Menu** , and touch **System settings** > **Data usage**.
2. Press **Menu**  > **Restrict background data** to check it.
3. Read the message and touch **OK**.

Tip: You can see the Wi-Fi usage. Press **Menu**  > **Show Wi-Fi usage** to check it.



Airplane Mode

Airplane mode allows you to use many of your device's features, such as Gallery, Camera, and Music, when you are on an airplane or in any other area where making or receiving calls or data is prohibited. When you set your device to Airplane mode, it cannot send or receive any calls or access online information.

To quickly turn Airplane mode on or off:

- Press and hold the **Power** button, and then touch **Airplane mode** under Phone options. While in Airplane mode, the status bar will display .

To turn Airplane mode on or off in Settings:

1. Press **Home**  > **Menu** , and touch **System settings** > **More...** under **WIRELESS & NETWORKS**.



2. Touch the **Airplane mode** check box. While in Airplane Mode, the status bar will display .

Mobile Networks

Mobile networks menu lets you enjoy the data connection.



Enable Data

Enable data access to enjoy the data connection.

1. Press **Home**  > **Menu** , and touch **System settings** > **More...** under **WIRELESS & NETWORKS**.
2. Touch **Mobile networks** and confirm **Data enabled** is checked.

Connections Optimizer

Your device can be set to automatically select the best mobile network.

1. Press **Home**  > **Menu** , and touch **System settings** > **More...** under **WIRELESS & NETWORKS**.
2. Touch **Mobile networks** > **Connections Optimizer**.
3. Follow the onscreen instructions.

DEVICE Settings



The DEVICE settings menu lets you control your device's features including sound, display, storage, battery, PC connection, and apps settings.

Sound

Use the following settings for such features as silent mode, vibrate, and overall device volume.

Volumes



Adjust your device's volume settings to suit your needs and your environment.



1. Press **Home**  > **Menu** , and touch **System settings** > **Sound** > **Volumes**.
2. Drag the onscreen slider to adjust the volume level of **Music, video, games, & other media**, **Ringtone & notifications**, or **Alarms**.
3. Touch **OK**.

Tip: You can adjust the ringtone volume in standby mode (or the earpiece volume during a call) by using the volume button on the left side of your device.

Silent Mode



The Silent mode option allows you to mute all sounds or vibrate (except for media and alarm sounds).

1. Press **Home**  > **Menu** , and touch **System settings** > **Sound** > **Silent mode**.
2. Select your option.
 - **Off** to disable the silent mode.
 - **Vibrate** to mute all sounds but vibrate. You can select the vibrate pattern.
 - **Mute** to mute all sounds.

Tip: Press the volume button down in standby mode until you see  or  on the screen.

Phone Ringtone



You can select and assign ringtones for your incoming calls.

1. Press **Home**  > **Menu** , and touch **System settings** > **Sound** > **Phone ringtone**.
2. Touch a ringtone from the available list. The ringtone briefly plays when selected.
3. Touch **OK** to assign a ringtone.

Tip: You can assign individual ringtones to your People entries. See [Assign a Ringtone to a People Entry](#).



Vibrate Pattern

You can select the vibrate pattern.

1. Press **Home**  > **Menu** , and touch **System settings** > **Sound** > **Vibrate Pattern**.
2. Touch a vibrate pattern from the available list. Your phone briefly vibrates when selected.
3. Touch **OK** to assign a vibrate pattern.

Default Notification

Use the settings menus to assign specific ringtones for notifications.



1. Press **Home**  > **Menu** , and touch **System settings** > **Sound** > **Default notification**.
2. Touch a notification sound from the available list. The sound briefly plays when selected.
3. Touch **OK** to assign a notification sound.

Vibrate and Ring

Check this option to let your device ring and vibrate simultaneously.

Persistent Alerts

This menu lets you set alerts, such as beep, vibration, or LED blinking for notification.

1. Press **Home**  > **Menu** , and touch **System settings** > **Sound** > **Persistent alerts**.
2. Check the following.
 - **Audible tone** to beep when notification is on the notification bar.
 - **Vibrate** to vibrate when notification is on the notification bar.
 - **Blink LED** to blink the LED indicator when notification is on the notification bar.

SYSTEM

The SYSTEM settings menu lets you select whether you hear tones when touching numbers on the dialpad, selecting onscreen options, and more.



- **Dial pad touch tones:** Check to play tones when using the dialpad.
- **Touch sounds:** Check to play sounds when making an onscreen selection.
- **Screen lock sound:** Check to play sounds when locking or unlocking the screen.
- **Vibrate on touch:** Check to vibrate when touching softkeys and during certain other instances.
- **Hearing aid:** Check to use your hearing aid device effectively.

Display

Adjusting your device's display settings not only helps you see what you want, it can also help increase battery life.

Brightness

Adjust your screen's brightness to suit your surroundings.

1. Press **Home**  > **Menu** , and touch **System settings** > **Display** > **Brightness**.
2. Drag the Brightness slider left or right to adjust the screen brightness.



– or –

Check **Automatic brightness** to set the brightness automatically.

3. Touch **OK**.

Wallpaper



Select wallpaper using this menu.

1. Press **Home**  > **Menu** , and touch **System settings > Display > Wallpaper**.
2. Select the wallpaper you want to display on the screen. See [Customize the Home Screens](#).

Auto-rotate Screen



Your device is capable of automatically changing the orientation of some onscreen content. With this feature, you can view the screen in either portrait or landscape orientation by turning the device sideways. By default, the screen orientation automatically changes when the device is rotated.

To deactivate the Auto-rotate feature:

1. Press **Home**  > **Menu** , and touch **System settings > Display**.
2. Touch **Auto-rotate screen** check box to uncheck it.


Sleep

Select the delay time before the screen automatically turns off.

1. Press **Home**  > **Menu** , and touch **System settings > Display > Sleep**.
2. Touch a delay time to select it.

Font Size

Choose the font size of the screen as you like.



1. Press **Home**  > **Menu** , and touch **System settings > Display > Font size**.
2. Touch the font size you want.

MagniFont

You can use the MagniFont size which is the largest of all font size in your device. To use this font, you must activate the MagniFont mode first.

1. From any screen, slide down the status bar to display the notifications panel, and then touch **MagniFont mode**. (From the next time after once you activate this mode, you can access this application with the procedure mentioned below.)



– or –

Press **Home** , and touch  > **MagniFont**.

2. Touch the **MagniFont** button to turn the MagniFont mode on.
 - To turn the MagniFont mode off, touch the button again, touch the font size you want from the Font size options, and then touch **OK**.

Key Backlight



Select the delay time before the key backlight automatically turns off.

1. Press **Home** , > **Menu** , and touch **System settings > Display > Key backlight**.
2. Touch a time delay to select it.

Screen Proximity Safety

Set the distance between your device and your face that triggers your device's proximity sensor to work.

Note: If you disable the proximity sensor, it may cause accidental key presses during a call.



1. Press **Home** , > **Menu** , and touch **System settings > Display > Screen proximity safety**.
2. Drag the slider left or right to adjust the distance between your device and your face, and then touch **OK**.

Storage

The Storage settings menu lets you see the available space of the internal storage, phone, and the microSD card on your device and provides options for phone and microSD storages.



Primary Storage

You can select your primary storage.

1. Press **Home** , > **Menu** , and touch **System settings > Storage**.
2. Touch **Select Primary Storage**.
3. Touch **Phone** or **SD card**, and then touch **OK**.



Battery

The battery menu lets you see the current battery status and which applications have been using the battery.

1. Press **Home**  > **Menu** , and touch **System settings** > **Battery**.
2. Touch "... on battery" to see the history details of the battery usage.

PC Connection



Set your device's default connection mode when connected to the USB port of a computer.

1. Press **Home**  > **Menu** , and touch **System settings** > **PC connection**.
2. Touch **Default connection type** and select one of the following options.
 - **Charge only**: Let your PC charge your device only.
 - **Mass Storage**: Let your device function as a removable disk when connected to the USB port of a computer.
 - When a microSD card is inserted, it is also recognized as a separate removable disk from the device.
 - **Media Transfer**: Let your device function as a media device when connected to the USB port of a computer.
3. Check **Ask me** if you want to display the selection screen whenever you connect your device to a computer.

If **Ask me** is checked, the selection screen is displayed whenever you connect your device to a computer. If you want this selection set as default, check **Remember this choice** > **Done** on the selection screen.

Apps

This menu lets you view applications on your device.

1. Press **Home**  > **Menu** , and touch **System settings** > **Apps**.
2. Touch one of the following tabs to select the applications to be displayed.
 - **DOWNLOADED**: Select to display downloaded application. You can also see the storage status on your device at the bottom of the screen.
 - **ON SD CARD**: Select to display applications stored on the internal storage and the microSD card. You can also see the storage status on your SD card at the bottom of the screen.
 - **RUNNING**: Select to display currently running applications. You can also see the RAM status on your device at the bottom of the screen. Touch **SHOW CACHED PROCESSES** to see the cached process of the application.

- **ALL:** Select to display all applications stored on your device and the installed SD card.

PERSONAL Settings

The PERSONAL settings menu lets you manage your personal settings of your device.

Accounts & Sync



The Accounts & sync settings menu lets you add and manage your accounts and synchronizes the calendar or People entries on your device. See [General Sync Settings](#).

Location Services

Your device is equipped with a Location feature for use in connection with location-based services. The Location services menu allows the network to detect your position. Turning the Location services menu off will hide your location from everyone except **9-1-1**.



Google's Location Service

This service uses Wi-Fi and/or mobile networks to detect your location.

1. Press **Home**  > **Menu** , and touch **System settings > Location services**.
2. Touch **Google's location service**. (A check mark indicates this feature is enabled.)
3. Read the disclaimer and touch **Agree**.



GPS Satellites

This service uses available GPS to pinpoint your location within certain applications such as Google Maps™.

1. Press **Home**  > **Menu** , and touch **System settings > Location services**.
2. Touch **GPS satellites**. (A check mark indicates this feature is enabled.)

Location & Google Search

This service lets Google use your location to improve search results and other services.

1. Press **Home**  > **Menu** , and touch **System settings > Location services**.
2. Touch **Location & Google search**. (A check mark indicates this feature is enabled.)
3. Read the disclaimer and touch **Agree**.

Security

The Security settings menus let you set device security, lock codes, passwords, administrator settings, and more.



Screen Lock

 
You can choose the way how your device acts when the device's display screen is turned on. As default, you must flick the lock button on the screen. See [Turn Your Screen On and Off](#).

The security of your device can be increased by drawing the correct pattern on the screen, entering the correct PIN, or entering the correct password to unlock the device's control keys, buttons, and touchscreen.

If you fail to enter the correct pattern, PIN or password after five attempts, you will have to wait for 30 seconds before you can try again.

Use a Pattern:

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Screen lock**.
2. Touch **Pattern**.

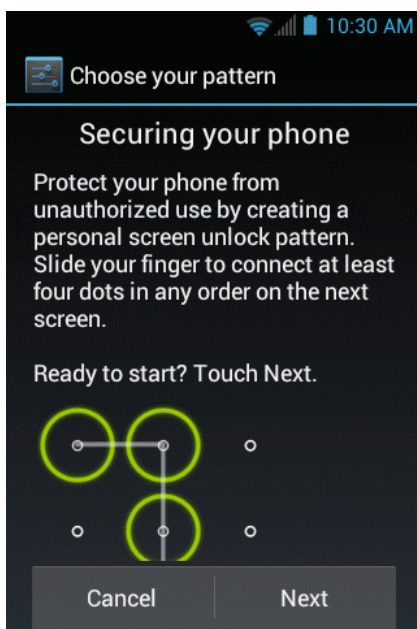



3. Read the information and study the example pattern on the screen and touch **Next**.
4. Draw the screen unlock pattern by connecting at least four dots in a vertical, horizontal, or diagonal direction. Lift your finger from the screen when finished.
5. The device records the pattern. Touch **Continue**.



6. When prompted, draw the screen unlock pattern again, and then touch **Confirm**.

Note: Clear the **Make pattern visible** check box if you do not want the pattern to be displayed on the screen when you draw it.

Use a PIN:

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Screen lock**.
2. Touch **PIN**.
3. Enter a PIN and touch **Continue**.
4. Enter your PIN again and touch **OK** to confirm it.

Use a Password:

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Screen lock**.
2. Touch **Password**.
3. Enter a password and touch **Continue**.
4. Enter your password again and touch **OK** to confirm it.



Note: Check the **Vibrate on touch** check box if you want the device to vibrate when you draw the pattern or enter the PIN.

Note: Touch **Automatically lock** to select the time duration before the screen lock feature activates.

Note: Check the **Power button instantly lock** check box if you want the screen lock feature to activate by pressing the **Power** button.

Note: Touch **Owner info** to enter your information to be displayed on the lock screen.

Change or Disable the Screen Lock:

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Screen lock**.
2. Draw your unlock screen pattern, or enter your PIN or password and touch **Next**.
3. Touch **None** to disable the screen lock or change the unlock mode. Touch **Slide** to return to the default lock pattern.

Encrypt Data



You can encrypt your device and the SD card installed in your device.

Warning: To unencrypt your device, you need to reset your device to the original factory settings, which erases all data from the device's application storage.

Warning: To unencrypt your SD card, you need to format the card, which permanently removes all files stored on the card.

Note: Charge the battery enough and connect the device to an electrical outlet.

Note: You cannot use other features including making or receiving phone calls during encryption.



1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Encrypt data**.
2. Select the following options.
 - **Phone & SD card** to encrypt your device and the SD card installed in your device.
 - **Phone** to encrypt your device only.
 - **SD card** to encrypt the installed SD card only.
3. Read the message and touch **Next**.
4. If you use the security lock with a PIN or password, enter it and touch **Next**.
5. Read the message and touch **Encrypt**.

Warning: Do not remove the SD card during the encryption of the SD card, otherwise you will lose some or all of your data.

Warning: If you interrupt the encryption process, you will lose some or all of your data.



Passwords

You can hide your password or PIN number as you type it.

1. Press **Home**  > **Menu** , and touch **System settings** > **Security**.
2. Clear the **Make passwords visible** check box.



Device Administration

You can disable the authority to be a device administrator of certain applications. If disabled, you will typically lose some functionality in those applications, such as the ability to sync new email or calendar events to your device.

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Device administrators**.
2. Touch an application you want to disable the authority to be a device administrator.



Unknown Sources

Follow the steps below to install non-Google Play applications.



1. Press **Home**  > **Menu** , and touch **System settings** > **Security**.
2. Touch **Unknown sources** > **OK**. (A check mark indicates this feature is enabled.)

Credential Storage



You can see the trusted credentials on your device's system.

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Trusted credentials**.
2. Touch an item to read the information.

You can install encrypted certificates from the SD card.

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Install from SD card**.
2. Touch an available certificate.
3. Follow the onscreen instructions.

You can remove all the credentials on your device.

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Clear credentials**.
2. Touch **OK**.

Language & Input

Your device's Language & input settings let you select a language for the device's screens and menus, as well as manage a personal user dictionary. The Keyboard settings let you select a preferred input method, control keyboard settings, and more. For details, see [Enter Text](#).



This menu also provides the settings when using voice function. See [Text-to-speech Settings](#) and [Voice Search](#).

Backup & Reset

This menu helps you to back up and restore your data.



Back up My Data

You can back up your settings to a Google server.

1. Press **Home**  > **Menu** , and touch **System settings** > **Backup & reset**.
2. Touch **Back up my data**. (A check mark indicates this feature is enabled.)

Automatic Restore

Check this option to restore your settings and other data when you install an application.



1. Press **Home**  > **Menu** , and touch **System settings** > **Backup & reset**.
2. Touch **Automatic restore**. (A check mark indicates this feature is enabled.)

Factory Data Reset

Your device's Backup & reset menu includes the **Factory data reset** option. This option lets you reset your device to the original factory settings, which erases all data from the device's application storage, including the following options.

- Your Google account
- All other email and social networking accounts
- System and application data and settings
- Downloaded applications

To reset your device:



1. Press **Home**  > **Menu** , and touch **System settings** > **Backup & reset** > **Factory data reset**. Read the Factory data reset information.
2. Touch **Reset phone**.
3. Touch **Erase everything**. Your device will power down and reset itself, which may take up to 10 minutes.

SYSTEM Settings

The SYSTEM settings menu lets you manage the system settings of your device.

Date & Time

Your device obtains its time and date information by using the network-provided date, time, and time zone. These values can be changed manually.

1. Press **Home**  > **Menu** , and touch **System settings** > **Date & time**.
2. Clear the **Automatic date & time** check box if necessary.
3. Clear the **Automatic time zone** check box if necessary.
4. Touch **Set date** to adjust the date, month, and year by touching ▲ or ▼, or by sliding each item vertically. When finished, touch **Set**.
5. Touch **Set time** to adjust the hour, minute, and AM or PM by touching ▲ or ▼, or by sliding each item vertically. When finished, touch **Set**.

6. Touch **Select time zone**, and then select a time zone from the onscreen list. Scroll down the list to view additional time zones.
7. Touch **Use 24-hour format** to toggle between 12-hour or 24-hour format.
8. Touch **Select date format** to select how the date information is displayed on your device.



Accessibility

You can download and manage accessibility-related applications or configure the accessibility setting of your device.

Note: You can also enable your TTY (teletypewriter, also known as a TDD or Text Telephone) settings. See **TTY mode** within the [Other Call Settings](#) section.



Services

This menu provides you the list of accessibility-related applications. Touch the application and configure its settings.

1. Press **Home**  > **Menu** , and touch **System settings** > **Accessibility**.
2. Touch an application to configure its settings.



TalkBack

TalkBack is an application to help blind and vision-impaired users use their devices more easily. It adds spoken, audible, and vibration functionality services to your device.

1. Press **Home**  > **Menu** , and touch **System settings** > **Accessibility**.
2. Touch **TalkBack**.
3. If **OFF** is displayed at the right of **TalkBack**, touch it to turn **TalkBack** on.
4. Read the message and touch **OK**. **ON** is displayed.
5. Touch **SETTINGS** and configure the TalkBack settings

System

This menu configures the accessibility settings of the system in your device.

1. Press **Home**  > **Menu** , and touch **System settings** > **Accessibility**.
2. Configure the following system accessibility settings.
 - **Large text** to use large fonts on the screen.
 - **Power button ends call** to use the **Power** button to end a call.



- **Auto-rotate screen** to automatically change the orientation of some onscreen content when the device is rotated.
- **Speak passwords** to let your device speak the password you enter.
- **Explore by touch** to let your device speak or write the descriptions of what's under your finger (when **TalkBack** is turned on).
- **Touch & hold delay** to set the delay time when the screen recognizes the touch and hold operation.
- **Install Web scripts** to install Web scripts that make the Web content more accessible.

Developer Options

These menus are specific for application development. Unless you have a specific reason for changing these settings, you should leave them at the default settings.

Activate This Device

Follow the steps below to activate this device.

1. Press **Home**  > **Menu** , and touch **System settings** > **Activate this device**.
2. Follow the onscreen instructions.

About Phone



The About phone menu lets you access important device information including your phone number, and view legal information.

System Update

From time to time, updates may become available for your device. You can download and apply updates through the System update menu.



Update PRL

This option allows you to download and update the PRL (preferred roaming list) automatically.

1. Press **Home**  > **Menu** , and touch **System settings** > **System update** > **Update PRL**.
2. Follow the onscreen instructions.

Update Profile

This option allows you to automatically update your online user profile information. If you choose to change your username and select a new one online, you must then update the username on your device.

1. Press **Home**  > **Menu** , and touch **System settings** > **System update** > **Update profile**.
2. Follow the onscreen instructions.

Note: If your data services or account syncing ever seems to go out unexpectedly, use this feature to reconnect with the network.




Update Firmware

This option allows you to update the firmware package on your device via an over-the-air connection.

Before Updating Your Firmware:



Updating your device firmware may erase all user data from your device. You must back up all critical information before updating your device firmware.

To back up your account information:



1. Press **Home**  > **Menu** , and touch **System settings** > **Accounts & sync**.
2. Touch the account containing the data you want to back up now.
3. Press **Menu** , and touch **Sync now**.

Note: As an added precaution, to preserve any data on your microSD card, please remove it from your device prior to starting the update process.

Update Your Device Firmware:

1. Press **Home**  > **Menu** , and touch **System settings** > **System update**.
2. Touch **Update firmware**. (Your device automatically downloads and installs any available updates. You may be required to power your device off and back on to complete the software upgrade.)

Confirm Your Current Device Firmware:



1. Press **Home**  > **Menu** , and touch **System settings** > **About phone**.
2. Scroll to the bottom of the page for the version number.

Update Kyocera Software

This option provides you to the latest Android Operating System (OS) and the device firmware on your device via an over-the-air connection.




Note: Before updating the Kyocera Software, be sure to back up your information.

Update Kyocera Software:

1. Press **Home**  > **Menu** , and touch **System settings** > **System update** > **Update Kyocera software**.
2. Follow the onscreen instructions. (Your device automatically downloads and installs any available updates. You may be required to power your device off and back on to complete the software upgrade.)
3. Confirm your current firmware version.

Reinstall Your Google Application:

Your Google™ application purchases are reloaded remotely and can be re-installed after the update is applied.

1. Log into your Google account via the device.
2. Press **Home** , and touch  > **Play Store**.
3. Press **Menu** , and touch **My Apps**.
4. Scroll through the list of previously downloaded Google applications and choose the one you wish to reinstall.
5. Follow the onscreen instructions.

People



The People application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your device as well as contacts synchronized with your Google account or compatible email programs.

Get Started with People

Before using People, it's best to learn a few basics.

Access People

Follow the steps below to access People.

- Press **Home** , and touch  > **People**.

There are four tabs on People:



Groups to display the Group of entries.

 


All to display all entries.



Favorite to display your favorite entries.

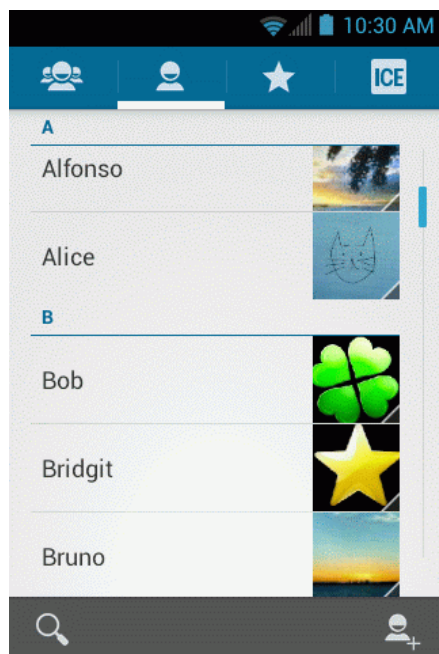

 **ICE** to display your ICE (in case of emergency) entry.



Scroll through the list to view all your entries. To see a specific entry, scroll to it and touch it.

People List Options

You can manage your entries from the People list.




- Touch  to add an entry. See [Add a New People Entry](#).
- Touch  to search an entry.

 
You can also press **Menu**  to display the People list options.


- **Contacts to display:** Selects the People list to be displayed. See [Select People List](#).
- **Import/export:** Imports/exports entries from/to the microSD card.
- **Accounts:** Opens the Accounts & sync settings screen. See [Accounts & Sync](#).
- **Settings:** Opens the Display options screen. You can select how your entries are displayed. See [Display Options](#).

Add a New People Entry

Enter details such as name, phone numbers, email addresses, mailing addresses, and more.

1. Press **Home** , and touch  > **People**.
2. If this is the first time to open the People application, select where to save a new entry.
 - **Existing** to save a new entry to your existing Google account.
 - **New** to save a new entry to your new Google account.
 - **Not now** to save a new entry in your device only.
3. Touch .
 - You may be prompted to select a type of entry.
 - Select your **Google** account.
 - Select **Add new account** to save an entry to your new account. Select **Google** or **Corporate**.
 - They will be synced automatically with your Google account online.
4. Use the keyboard to enter as much information as you want.

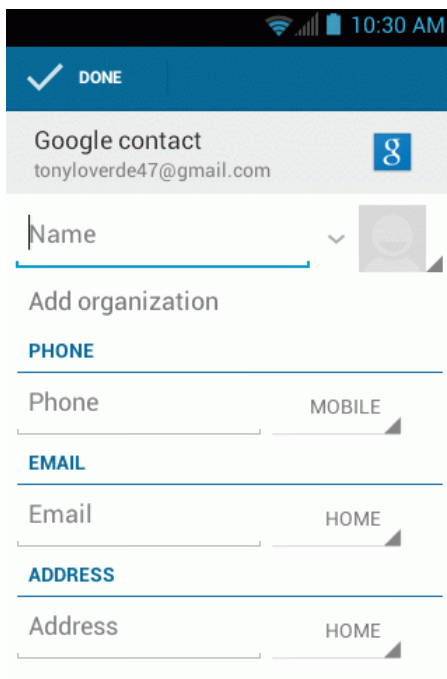

-  (**People icon**): Touch to assign a photo to the entry. See [Assign a Stored Picture to a People Entry](#) or [Assign a New Picture to a People Entry](#).
- **Name**
- **Add organization**

- **PHONE**
- **EMAIL**
- **ADDRESS**
- **Add another field:** Touch to include additional information such as Phonetic name, IM (address), Notes, Nickname, Website, Internet call, etc.





Note: To select a type (label) for a phone number, email address, or postal address (such as Mobile, Home, Work, etc.), touch the type to the right of the field.

Note: To add more phone numbers, email addresses, etc., touch **Add new** under the current numbers or addresses.

5. When you have finished adding information, touch **DONE**.

Save a Phone Number

You can save a phone number to People directly from the phone dialpad.




1. Press **Home** , and touch  to display the phone screen.
 - If the phone screen is not displayed when the Phone application opens, touch the Phone tab .
2. Enter a phone number, press **Menu**  and touch **Add to contacts**.
3. To add the number to an existing entry, scroll through the list and touch the entry or touch **Find contacts** to find the entry. To add a new entry, touch **CREATE NEW CONTACT**.
4. For an existing entry, select a number type for the new number, and then touch **OK**.
5. For a new entry, enter the name and any additional information, and then touch **DONE**. See [Add a New People Entry](#).

Edit a People Entry

Once you've added an entry, you can add or edit any of the information in the entry, assign a caller ID picture, customize it with a unique ringtone, and more.

Add or Edit Information for a People Entry





Use the **Edit** menu to add or edit information for an existing entry.

1. Press **Home** , and touch  > **People**.
2. Touch an entry to display it, and then press **Menu** , and touch **Edit**.
3. Touch any field you want to change or add. See [Add a New People Entry](#).
4. Add or edit the information, and then touch **DONE**.

Note: To select a type (label) for a phone number, email address, or postal address (such as Mobile, Home, Work, etc.), touch the type at the right of the field.







Assign a Stored Picture to a People Entry

The **Edit** menu lets you assign a picture stored in your device's memory or SD card to an entry.

1. Press **Home** , and touch  > **People**.
2. Touch an entry to display it, and then press **Menu** , and touch **Edit**.
3. Touch the entry icon  at the right of the name.
4. Touch **Choose photo from Gallery** and select a location.
5. Touch a picture to select it.
 - You may be prompted to size the picture for use with entries. Touch and drag the square to frame the portion of the picture to use. Touch and drag the side of the square to resize the square and touch **CROP**.
6. Touch **DONE** to save the entry.

Assign a New Picture to a People Entry

Follow the instructions to take a new picture and assign it directly to an existing entry.




1. Press **Home** , and touch  > **People**.
2. Touch an entry to display it, and then press **Menu** , and touch **Edit**.
3. Touch the entry icon  at the right of the name.
4. Touch **Take photo**.
5. Touch  to take the photo. If you're satisfied with the picture, touch  to continue.

- You may be prompted to size the picture for use with entries. Touch and drag the square to frame the portion of the picture to use. Touch and drag the side of the square to resize the square and touch **CROP**.

6. Touch **DONE** to save the entry.




Assign a Ringtone to a People Entry

Know who's calling without looking at your device by assigning a specific ringtone to an entry.

1. Press **Home** , and touch  > **People**.
2. Touch an entry to display it, and then press **Menu** , and touch **Set ringtone**.
3. Touch an available ringtone.
 - When you touch a ringtone, you will hear a sample.
4. Touch **OK** to assign the ringtone.

Assign a Vibration to a People Entry

You can assign a specific vibration pattern to a People entry.

1. Press **Home** , and touch  > **People**.
2. Touch an entry to display it, and then press **Menu** , and touch **Set vibrate**.
3. Touch an available vibration.
 - When you touch a vibration, you will feel a vibration.
4. Touch **OK** to assign the vibration.




Add an Entry to Favorites

The Favorite tab of the People application is a listing that can help you quickly access your most used or preferred People entries.

1. Press **Home** , and touch  > **People**.
2. Touch an entry.
3. Touch the star at the upper right corner. The star turns to white.


Send an Entry's Call to Voicemail

You can transfer your entry's voice call to voicemail anytime you receive it.

1. Press **Home** , and touch  > **People**.
2. Touch an entry to display it, and then press **Menu** .
3. Check **All calls to voicemail**.




Delete a People Entry

You can delete an entry from the entry's details page.

1. Press **Home** , and touch  > **People**.
2. Touch an entry to display it, and then press **Menu** , and touch **Delete**.
3. Touch **OK**.




Select People List

Display the People list you like if you have multiple Google accounts.

1. Press **Home** , and touch  > **People**.
2. Press **Menu** , and touch **Contacts to display**.
3. If you save multiple accounts, select the account. People entries saved in the account will be displayed.
 - If you select **All contacts**, all the entries you saved will be displayed.

Customize People List

You can customize the People list of the account.

1. Press **Home** , and touch  > **People**.
2. Press **Menu** , and touch **Contacts to display**.



3. Touch **Customize** and touch the account.
4. Check the types of entries to be displayed or uncheck those types you don't wish to display.
5. Touch **OK**.

Synchronize People Entries

Syncing data from your managed accounts allows you to add and manage a new or existing entry from your online or remote accounts to your device. Prior to syncing, you must first have an active Google or Corporate account with current People entries, and be signed into your account via the device.

With syncing, any entries (with phone numbers, email addresses, pictures, etc.) are updated and synced with your device.

For more information about syncing existing managed accounts, see [General Sync Settings](#).

1. Press **Home**  > **Menu** , and touch **System settings > Accounts & sync**.
2. Touch the account you want to sync your People entries with.
3. Touch the **Sync Contacts** check box to select the feature. (A check mark indicates this feature is enabled.)




Note: The process of updating your People can take several minutes. If after 10-20 minutes, your list has not been updated, repeat steps 2 and 3.

The People list then reflects any updated entry information.

- This update process works both ways. For example, any changes on the device are updated to your Gmail contacts list after sync.






Display Options

Select how the People list is displayed.

1. Press **Home** , and touch  > **People**.
2. Press **Menu** , and touch **Settings**.
3. Set the following options.
 - **Sort list by** to choose how your entries are sorted.
 - **View contact names as** to choose how the names of your entries are displayed.

Share a People Entry

You can quickly share People entries using Bluetooth, Email, or Gmail.

1. Press **Home** , and touch  > **People**.
2. Touch an entry to display it, and then press **Menu** , and touch **Share**.
3. In the **Share contact via** menu, select a method:
 - **Bluetooth** to send the information via Bluetooth. See [Bluetooth](#) for information on pairing and sending via Bluetooth.
 - **Email** to send the information as an email attachment. If prompted, select an email account. Address the message, add a subject and a message, and then touch . See [Compose and Send Email](#) for details on sending email.
 - **Gmail** to send the information as a Gmail attachment. Address the message, add a subject and a message, and then touch . See [Send a Gmail Message](#) for details.

Messaging

With the data service and your device's messaging capabilities, you have the opportunity to share information through many different channels and accounts.

 
Gmail

Gmail is Google's Web-based email service. You need to setup your [Google Account](#) in advance.

Access Gmail

Your device allows you to access, read, and reply to all your Gmail messages.

1. Press **Home** , and touch  > **Gmail**.

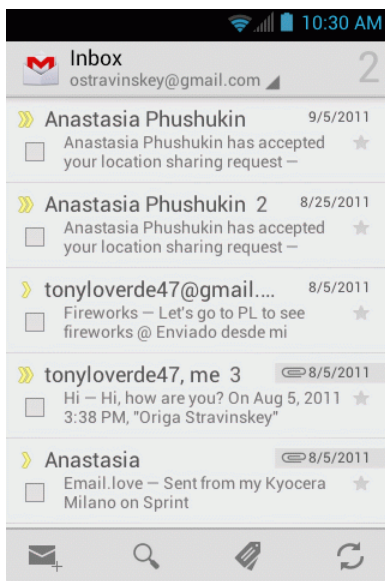




2. Do any of the following:
 - View more email messages: If the Inbox is full, swipe your finger up the screen to view more messages and conversations.
 - Read a new email message: Touch the unread message or the conversation with an unread message (just-arrived items display in bold).
 - Select messages and conversations: Touch the box before the email or conversation.
 - View the Inbox of your other Gmail account. Touch **Inbox** at the top of the screen and select the account you want to view its inbox.

- Refresh the Inbox: Touch .

Send a Gmail Message

Use the phone's Gmail app to send Gmail messages.

1. Press **Home** , and touch  > **Gmail**.
2. Touch .
3. Enter the message recipient's email address in the **To** field. If you're sending the email message to several recipients, separate the email addresses with a comma. As you enter email addresses, any matching addresses from your People list are displayed. Touch a match to enter that address directly.

Tip: If you want to send a CC or a BCC of the email to other recipients, press **Menu** , and touch **Add Cc/Bcc**.

4. Enter the subject, and then compose your message.

Note: If you want to attach a picture, press **Menu** , and then touch **Attach file**. Locate and then touch the picture you want to attach.



5. After composing your message, touch .


Note: While composing the message, press **Menu**  and touch **Save draft** if you want to send it later. To open a draft email, in the email account Inbox, touch **Inbox** (top of the Gmail screen), and then touch **Drafts**.

Note: To view your sent messages in the Inbox, touch **Inbox**, and then touch **Sent**.




Read and Reply to Gmail Messages

Use the Gmail app to read and reply to Gmail messages.

1. Press **Home** , and touch  > **Gmail**.
2. Touch a message to display it.

Tip: You can also access new messages through the status bar. When a new Gmail message arrives, you'll see the  icon in the status bar. Slide the bar down to display notifications. Touch a message to display it.

3. To reply to or forward a message:

- Touch  to reply to the message.
- Touch  > **Reply all** to reply to all recipients.
- Touch  > **Forward** to forward the message.



4. After composing your message, touch .

Email

Use the Email application to send and receive email from your webmail or other accounts, using POP3 or IMAP. You can also access your corporate email and other features on your device.

Add an Email Account (POP3 or IMAP)

You can add several types of personal email accounts, such as POP3 and IMAP accounts, on your device.



1. Press **Home** , and touch  > **Email**.
2. Enter the Email address and Password for the email account and then touch **Next**.

Important: If the account type you want to set up is not in the device database, you will be asked to enter more details. You should get all pertinent information for the email account, such as incoming and outgoing server settings, before you proceed.

3. Confirm the Email settings and touch **Next**.
4. Touch **Next**. The inbox of the account is displayed.

Add a Corporate Account

If you synchronize your device with your corporate account, you can read, manage, and send email in the same easy way as with a POP3/IMAP account. However, you can also access some Exchange features.

1. Press **Home**  > **Menu** , and touch **System settings** > **Accounts & sync**.
2. Touch **ADD ACCOUNT**, and then touch **Corporate**.
3. Enter your **Email address** and **Password** information, and then touch **Next**. Consult your network administrator for further details.
 - **Email address:** your corporate email address.

- **Password:** typically your network access password (case-sensitive).
4. Enter a **Domain\Username**, **Password**, and **Server** information and touch **Next**.
 - **Domain\Username:** enter your network domain\login username.
 - **Password:** typically your network access password (case-sensitive).
 - **Server:** your exchange server remote email address. Typically it is in the form mail.XXX.com. Obtain this information from your company's network administrator.
 5. If your network requires SSL encryption, touch the **Use secure connection (SSL)** check box to place a check mark and activate this additional level of security. If your exchange server requires this feature, leaving this field unchecked can prevent connection.
 6. If the onscreen activation disclaimer is displayed, touch **Next**.
 7. Configure your **Inbox checking frequency**, **Days to sync** (days to synchronize between your device and server), and activate any other email settings, then touch **Next**.

Note: Signal interruptions or incorrect username or password information can cause completion issues.




8. Identify your new account with a unique name and provide the outgoing name, then touch **Done**.

Note: You can have multiple corporate email (Microsoft® Exchange ActiveSync®) accounts active on your device.

Note: Your corporate Exchange Server must support auto-detect for the device to automatically set up the Exchange ActiveSync account. If your corporate Exchange Server does not support auto-detect, you will need to enter your Exchange Server settings after you touch **Next**. Ask your Exchange Server administrator for details.




Create Another Email Account

While you are viewing one email account, you can access the tool to create another email account.

1. Press **Home** , and touch  > **Email**.
2. Press **Menu** , and touch **Settings**.
3. Touch **ADD ACCOUNT**.
4. Enter the Email address and Password for the email account and then touch **Next**.
5. Confirm the Email settings and touch **Next**.
6. Touch **Next**. The inbox of the account is displayed.

Compose and Send Email




Compose and send email using any account you have set up on your device. Increase your productivity by attaching files such as pictures or videos to your email messages.

1. Press **Home** , and touch  > **Email**.
2. On the email account Inbox, touch .

Tip: Touch displayed email address to select a different email account.

3. Enter email addresses directly in the **To** field. If you're sending the email to several recipients, separate the email addresses with a comma. As you enter email addresses, any matching addresses from your People list are displayed. Touch a match to enter that address directly.





Tip: If you want to send a CC or a BCC of the email to other recipients, press **Menu** , and touch **Add Cc/Bcc**.

4. Enter the subject, and then compose your message.
5. To add an attachment, press **Menu** , and touch **Attach file**, and choose from the following options:
 - **Pictures:** Select photos from Gallery.
 - **Videos:** Select videos from Gallery.
 - **Audio:** Select sound files.
6. Touch  to send the message immediately, or press **Menu**  and touch **Save draft** if you want to send it later.

Note: To open a draft email, in the email account Inbox, touch **Inbox** (top of the Email screen), and then touch **Drafts**.

View and Reply to Email







Reading and replying to email on your device is as simple as it is on your computer.

1. Press **Home** , and touch  > **Email**.
2. On the email account Inbox, touch the message you want to view.
3. Touch  or  > **Reply all** to reply to the message.

Manage Your Email Inbox

Use the settings menu to manage your email inboxes.

View Your Email Inbox


1. Press **Home** , and touch  > **Email**.
2. Touch the account whose mails you want to view.
 - Touch  to search an email.
 - Touch  to display folders.
 - Touch  to refresh your email box.
 - Press **Menu**  and touch **Settings** to display the Email settings. See [Email General Settings](#) and [Email Account Settings](#).

Refresh an Email Account


Whatever your automatic synchronization settings are, you can also synchronize your sent and received email messages manually at any time.

- While in the account you want to synchronize, touch .

Delete an Email Message




1. On the email account Inbox, mark the check box next to the message you want to delete.
2. Touch .

Delete Multiple Email Messages

1. On the email account Inbox, mark the check boxes next to the messages you want to delete.
2. Touch .

Email General Settings




You can edit the general settings of your email.

1. Press **Home** , and touch  > **Email**.
2. Press **Menu**  and touch **Settings** > **General**.

- **Auto-advance:** Choose which screen to show after you delete a message.
- **Message text size:** Select the message text size.
- **Reply all:** Check if you want to display “Reply all” option as default.
- **Ask to show pictures:** Touch if you want to be asked before pictures in messages to be displayed.

Email Account Settings




You can edit settings for your individual email accounts, such as email address and password, name display and signature, frequency of retrieval, and more.

1. Press **Home** , and touch  > **Email**.
2. Press **Menu**  and touch **Settings**.
3. Select the account you want to edit the settings of.
4. Set the following options:
 - **Account name:** Edit your account name.
 - **Your name:** Edit your name displayed on your emails.
 - **Signature:** Create an email signature for your outgoing emails.
 - **Quick responses:** Edit the text you frequently insert when composing emails.
 - **Default account:** Check to assign this account as the default email used for outgoing messages.
 - **Inbox check frequency:** Touch to select the time interval used by your device to check your new emails from **Automatic (Push)** (corporate account only), **Never**, **Every 5 minutes**, **Every 10 minutes**, **Every 15 minutes**, **Every 30 minutes**, and **Every hour**.
 - **Days to sync:** Set a period of time to synchronize your account (corporate account only).
 - **Sync email:** Check to synchronize your email (corporate account only).
 - **Sync contacts:** Check to synchronize your contacts (corporate account only).
 - **Sync calendar:** Check to synchronize your calendar (corporate account only).
 - **Download attachments:** Check if you want to automatically download attachments via Wi-Fi.
 - **Email notifications:** Check to display the email notification icon on the status bar when a new email is received.
 - **Choose ringtone:** Select a ringtone for new email messages.

- **Vibrate:** Select a vibration pattern for new email messages.
- **Incoming settings:** Adjust the incoming email parameters, such as username, password, and other incoming connection parameters (ex: IMAP server).
- **Outgoing settings:** Adjust the outgoing parameters, such as username, password, and other outgoing connection parameters (ex: SMTP server, not for a corporate account).
- **Out of office settings:** Set your current status and your message to reply automatically while you are out of the office (corporate account only).
- **Remove account:** Touch to remove the account.

Delete an Email Account

If you no longer want an email account on your device, you can delete it through the email settings menu.

1. Press **Home** , and touch  > **Email**.
2. Press **Menu**  and touch **Settings**.
3. Select the account you want to delete.
4. Touch **Remove account** > **OK**.

Text Messaging and MMS



With Text Messaging (SMS), you can send and receive instant text messages between your wireless device and another messaging-ready phone.

Multimedia messages, or MMS, can contain text and pictures, recorded voice, audio or video files, or picture slideshows.

See your service plan for applicable charges for messaging.

 
Compose Text Messages

Compose and send text messages on your device quickly.

1. Press **Home** , and touch  > **Messaging**.
2. On the Messaging screen, touch +. The compose screen opens.
3. Fill in one or more recipients.

- Enter phone numbers or email addresses in the **To** field. If you're sending the message to several recipients, separate the phone numbers or email addresses with commas. As you enter information, any matching phone numbers or addresses from your People list are displayed. Touch a match to enter that number or address.

Tip: By entering a name saved in People, you can call up the phone number or email address. Touch a match from an available list.

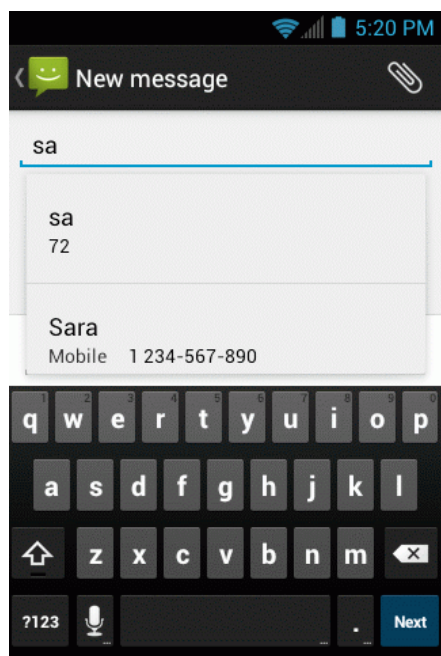

4. Touch **Type message** and then start composing your message.

Tip: You can add a subject or insert a smiley by pressing **Menu** (≡), and touching **Add subject** or **Insert smiley**, and then typing a subject or selecting a smiley.

5. When done, touch ➤ to send the text message.

Send a Multimedia Message (MMS)


When you need to add a little more to a text message, you can send a multimedia message (MMS) with pictures, recorded voices, or audio or video files, or slideshows.

1. Press **Home** (🏠), and touch (⋮) > **Messaging**.
2. On the Messaging screen, touch (✉️) +. The compose screen opens.
3. Fill in one or more recipients.

- Enter phone numbers or email addresses in the **To** field. If you're sending the message to several recipients, separate the phone numbers or email addresses with commas. As you enter information, any matching phone numbers or addresses from your People list are displayed. Touch a match to enter that number or address.

Tip: By entering a name saved in People, you can call up the phone number or email address. Touch a match from an available list.


4. Touch **Type message** and then start composing your message.

Tip: You can add a subject or insert a smiley by pressing **Menu** , and touching **Add subject** or **Insert smiley**, and then type a subject or select a smiley.

5. Touch  and select from the following file attachments.



- **Pictures:** Open Gallery to attach a photo from your storage card.
- **Capture picture:** Run the camera application to take a photo and attach it.
- **Videos:** Open Gallery to attach a video from your storage card.
- **Capture video:** Run the camcorder application to take a video and attach it.
- **Audio:** Select a ringtone and attach it.
- **Record audio:** Run the sound recorder application to create a recording and attach it.
- **Slideshow:** See "Create a Slideshow" below for details.

6. To make changes to your attachment, touch **Replace** or **Remove**.

7. Touch  to send the MMS message.


Create a Slideshow

In a multimedia message, you can add slides, each containing a photo, video, or audio.


1. In the multimedia message you're composing, touch  > **Slideshow**.
2. To compose your slideshow, do any of the following.
 - Touch **Add slide** to create a new slide. (This is a placeholder for new images to be added, similar to a playlist.)
 - Touch the created slide (example, Slide 1), touch **Add picture**, and then select the picture you want to add to the slide.
 - Touch the text field below the image to enter a caption for the picture.
 - Touch **Preview** (to preview the slide), **Replace picture** (to delete the currently selected picture), **Remove slide**, press **Menu** , and touch **Add music**, **Add slide**, **Duration**, or

Layout.



- When finished, touch **Done** to attach the slideshow to your message.

3. When you have finished composing the multimedia message, touch  or **Send**.

Save and Resume a Draft Message



While composing a text or multimedia message, press **Back**  and touch **Yes** to save your message as a draft.

To resume composing the message:

1. On the Messaging screen, touch the message to resume editing it. “Draft” in red appears at the right of the message in the list.
2. When you finish editing the message, touch , or touch  if you have added attachments to your message.

New Messages Notification

Depending on your notification settings, the device will play a ringtone, vibrate, or display the message briefly in the status bar when you receive a new text or multimedia message. To change the notification for new text and multimedia messages, see [Text and MMS Options](#) for details.

A new message icon  or  also appears in the notifications area of the status bar to notify you of a new text or multimedia message.

To open the message, slide the status bar down to open the Notifications panel. Touch the new message to open and read it. For information on reading and replying to messages, see [Managing Message Conversations](#).


Managing Message Conversations

Text and multimedia messages that are sent to and received from a contact (or a number) are grouped into conversations or message threads in the Messaging screen. Threaded text or multimedia messages let you see exchanged messages (similar to a chat program) with a contact on the screen.

To read a text message:

- Do one of the following:
 - On the Messaging screen, touch the text message or message thread to open and read it.

- If you have a new text message notification, slide the status bar down to open the Notifications panel. Touch the new text message to open and read it.

To return to the Messaging screen from a text message thread, press **Back** .



Note: To view the details of a particular message, in the message thread, touch and hold the message to open the options menu, and then touch **View details**.

Note: If a message contains a link to a Web page, touch the message and then touch the link to open it in the Web browser.

Note: If a message contains a phone number, touch the message to dial the number, or touch and hold the message to send a text message to the number or to add the number to your People list.

Note: If a message contains an email address, touch the message to send an email message to the email address, or touch and hold the message to add the email address to your People list.

To view a multimedia message (MMS):






1. Press **Home** , and touch  > **Messaging**.
2. On the Messaging screen, touch a multimedia message or message thread to open it.
3. Touch the attachment to open it.

Tip: To save the attachment, touch and hold the message, and then touch **Save attachment** on the options menu.

Note: When the **Auto-retrieve** option in MMS settings is disabled, only the message header is downloaded. To download the entire message, touch the **Download** button at the right side of the message. For details, see [Text and MMS Options](#).




Note: If you are concerned about the size of your data downloads, check the multimedia message size before you download it.

To reply to a message:

1. Press **Home** , and touch  > **Messaging**.
2. On the Messaging screen, touch a text or multimedia message thread to open it.
3. Touch the text box at the bottom of the screen, enter your reply message, and touch , or touch   if you have added attachments to your reply message.

Note: To reply to a text message with a multimedia message, open the text message. touch , and add attachments. The text message is automatically converted into a multimedia message.

To delete a message thread:

1. Press **Home** , and touch  > **Messaging**.
2. On the Messaging screen, touch the message thread that you want to delete.
3. Press **Menu** , and then touch **Delete thread**.
4. When prompted to confirm, touch **Delete**.




To delete a single message:

1. While viewing a message thread, touch and hold the message that you want to delete.
2. From the options menu, touch **Delete**.
3. When prompted to confirm, touch **Delete**.

When you have received a message from someone stored in your People, you can touch the entry's photo or icon in the message thread to open a menu of options. Depending on the stored entry information, you can view the entry details, phone or send an email message to the entry, and more.

Text and MMS Options

The messaging settings menu lets you control options for your text and MMS messages including message limits, size settings, and notifications.

1. Press **Home** , and touch  > **Messaging**.
2. Press **Menu** , and then touch **Settings**. You can set the following options.

STORAGE Settings

- **Delete old messages:** Automatically delete older messages, when the set limits are reached.
- **Text message limit:** Choose the maximum number of text messages to store in each conversation thread.
- **Multimedia message limit:** Choose the maximum number of MMS messages to store in each conversation thread.

TEXT (SMS) MESSAGES Settings

- **Emergency Alerts:** Sets the federally supervised cell phone alert services to send out broadcast SMS messages for public warning.
 - **Presidential:** Receives an emergency presidential alert. (Presidential is always grayed out [not selectable] and cannot be excluded.)
 - **Imminent Threat - Extreme:** Select this option if you want to receive emergency alerts in an extreme emergency situation (an extraordinary threat to life or property).

- **Imminent Threat - Severe:** Select this option if you want to receive emergency alerts in a severe emergency situation (a significant threat to life or property).
- **Amber:** Select this option if you want to receive alerts related to missing or endangered children.
- **Emergency Alerts Test:** Select this option if you want to receive a test message to make sure that the alert messages can be successfully received.
- **Help:** Displays the help information for Emergency Alerts.

MULTIMEDIA (MMS) MESSAGES Settings

- **Auto-retrieve:** Select this option to automatically retrieve all your multimedia messages completely. When selected, the multimedia message header plus the message body and attachments will automatically download to your device. If you clear this check box, only the multimedia message header will be retrieved and shown in your Messaging screen.

NOTIFICATIONS Settings

- **Notifications:** Select this option if you want to receive a notification in the status bar when a new text or multimedia message arrives.
 - **Choose ringtone:** Select a ringtone that is specific to new text and multimedia messages. Note that the ringtone briefly plays when selected.
 - **Vibrate:** Select when your device to vibrate when a new text or multimedia message arrives.

Social Networking Accounts

Stay in touch on the go with all your social networking accounts.

YouTube

YouTube™ is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts and other original videos.

Opening YouTube




- Press **Home** , and touch  > **YouTube**. The library screen appears.

Note: If **Terms of Service** appears, touch **Accept** if you agree to the Terms of Service.

Watching YouTube Videos

1. On the YouTube screen, touch a video.
2. Touch the screen to show the progress bar at the bottom. Touch the screen while the bar is displayed to pause/play the video. Move the slider on the bar to the left or right to rewind or fast-forward the video.




Searching for Videos

1. On the YouTube screen, touch  at the upper right of the screen to open the search box.
2. Enter the keyword to search. Search results appear below the status bar.
3. Touch one of the results, or touch  or .
4. Scroll through the results and touch a video to watch it.

Hangouts

Hangouts is an application for instant messaging offered by Google. Conversation logs are automatically saved to a Chats area in your Gmail account. This allows you to search chat logs and store them in your Gmail accounts.

Using Hangouts

1. Press **Home** , and touch  > **Hangouts** .
3. Touch **Add** to start a new Hangout.
4. Type a name, email, number, or circle, or select a contact from the list.
5. Type a message or touch the camera icon to start a video chat.
 - A chat window or a video chat window opens.
 - Each time text is entered, the corresponding friend appears.
 - If a friend is not in a Hangout, you will see a message. Touch Send invitation to invite them to join the Hangout.


Hangouts Operations

- **Ending a Chat:** In the Hangouts window, flick the chat from left to right.
- **Ending a Video Chat:** In the video chat window, touch the red phone icon.

- **Disabling Chat History:** If you don't want to keep chat history, in the chat window, touch Menu > Turn history off.
- **Delete Chat History:** To delete all your chat history, in the chat window, touch Menu > Delete > Delete.

Note: You can use Hangouts as your phone's default messaging app, or as a standalone IM app. If you set Hangouts as the default messaging app, the Messages app will be disabled.

Applications and Entertainment

All of your device's features are accessible through the Applications list. Touch the applications launcher icon  on the Home screen.

Google Play™ on Your Device



Google Play™ is your digital content destination to discover Android apps, books, movies, music and much more on your device and on the Web.

To access the Google Play Store app, you must first connect to the Internet using your device's Wi-Fi or data connection and sign in to your Google account. See [Web and Data](#) and [Sign In to Your Google Account](#) for details.

Important: Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

Find and Install an Application

When you install apps from the Google Play Store app and use them on your device, they may require access to your personal information (such as your location, contact data, and more) or access to certain functions or settings of your device. Download and install only apps that you trust.

1. Press **Home** , and touch  > **Play Store**. (If a message from Google "Android Market is upgrading to Google play" appears, touch **Continue**.)
2. When you open the Google Play Store app for the first time, the Terms of Service window will appear. Touch **Accept** to continue if you agree to the Terms of Service.

3. Find an application you want and touch it to open its details screen.



Note: The Google Play Store screen shots and options may vary depending on the version installed on your device. Your Google Play Store app will update automatically when available.

4. Touch an app to read a description about the app and user reviews.
5. Touch **Download** or **Install** (for free applications) or touch the price button (for paid applications).

Note: You need a Google Wallet account to purchase items on Google Play. See [Create a Google Wallet Account](#) to set up a Google Wallet account if you do not have one.

6. The subsequent screen notifies you whether the app will require access to your personal information or access to certain functions or settings of your device. If you agree to the conditions, touch **Accept & download** (for free applications) or **Accept & buy** (for paid application) to begin downloading and installing the app.

If you selected a paid application, after touching **Accept & buy**, you're redirected to the Google Wallet screen to pay for the application before it's downloaded to your device.

Warning: Read the notification carefully! Be especially cautious with applications that have access to many functions or a significant amount of your data. Once you touch **OK** on this screen, you are responsible for the results of using this item on your device.

Create a Google Wallet Account

You must have a Google Wallet account associated with your Google account to purchase items from the Google Play Store app.

Do one of the following:

- On your computer, go to wallet.google.com to create a Google Wallet account.

– or –




The first time you use your device to buy an item from Google Play, you're prompted to enter your billing information to set up a Google Wallet account.

Warning: When you've used Google Wallet once to purchase an application from the Google Play Store app, the device remembers your password, so you don't need to enter it the next time. For this reason, you should secure your device to prevent others from using it without your permission. (For more information, see [Security](#).)

Request a Refund for a Paid Application


If you are not satisfied with an application, you must ask for a refund within 15 minutes of purchase, unless otherwise stated by the app developer. Your credit card is not charged and the application is uninstalled from your device.

If you change your mind, you can install the application again, but you can't request a refund a second time.



1. Press **Home** , and touch  > **Play Store**.
2. Press **Menu** , and touch **My Apps**.
3. Touch the application to uninstall for a refund. The details screen for the application opens.
4. Touch **Refund**. Your application is uninstalled and the charge is cancelled.
 - If requested, choose the reason for removing the application, and then touch **OK**.

Open an Installed Application

There are several options for opening an installed application.




- On the status bar, check if you see the  icon. If you see the  icon, open the Notifications panel, and then touch the app to open it.

– or –



1. Press **Home** , and touch .
2. On the All apps screen, locate the app, and then touch the icon.

Uninstall an Application


You can uninstall any application that you have downloaded and installed from the Google Play Store app.

1. Press **Home** , and touch  > **Play Store**.
2. Press **Menu** , and touch **My Apps**.
3. On the INSTALLED screen, touch the application you want to uninstall, and then touch **Uninstall**.
4. When prompted, touch **OK** to remove the application on your device.
 - If requested, choose the reason for removing the application, and then touch **OK**.

— or —

1. Press **Home** , > **Menu** , and touch **System settings** > **Apps**.
2. Touch the **DOWNLOADED** tab and touch the application you want to uninstall, and then touch **Uninstall**.
3. When prompted, touch **OK** to remove the application on your device.
4. Touch **OK**.

Get Help with Google Play

If you ever need help or have questions about the Google Play Store app, press **Menu** , touch **Help**, and then touch a browser to use. The Web browser will take you to the Google Play Help Web page.

Navigation

Your device offers a number of location-based navigation programs to help you figure out where you are and get you where you're going.

 
Google Maps

Use this application to find directions, location information, business addresses, etc., all right from your device. Determine your current location with or without GPS, get driving and transit directions,

get phone numbers and addresses for local businesses.


Opening Google Maps

- Press **Home** , and touch  > **Maps**.

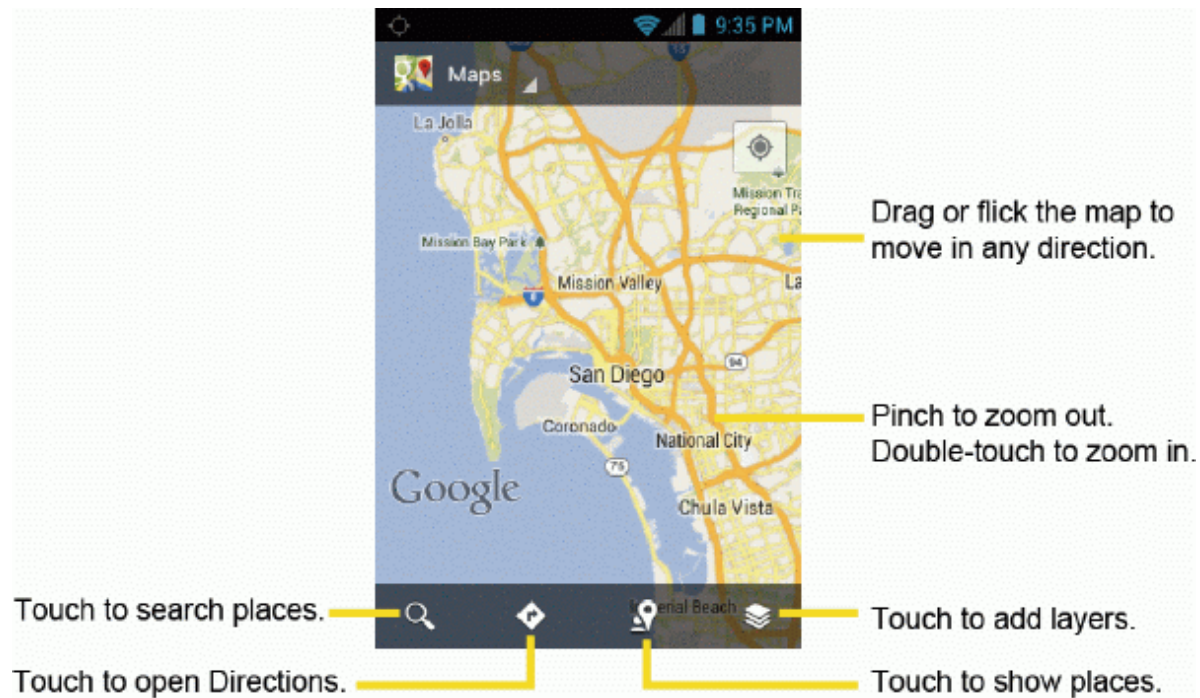


Finding Your Current Location



Note: Don't forget to set your location sources.

On the Google Maps screen, touch . A blinking blue arrow indicates your current location on the map. This feature is available when **Google's location service** or **GPS satellites** is enabled. See [Location Services](#).

Searching Maps

1. On the Google Maps screen, touch .
2. Type the place that you want to search. You can enter an address, a city, or type of establishment.

Tip: Touch  to search by speaking the location you are searching.

3. Touch  or . A callout label appears on the map to indicate the location.
4. Touch the callout to open the menu for the location.




Adding Map Layers

Layers allow you to view locations and additional info overlaid on the map.

On the Google Maps screen, touch  and then touch one or more of the following options:

- **Traffic:** Add this layer to view real-time traffic conditions with roads marked in color-coded lines that indicate the traffic condition. This mode is available in selected areas only.
- **Satellite:** Add this layer to use the same satellite data as Google Earth. The images are not real-time and are approximately one to three years old.
- **Terrain:** Add this layer for a shaded relief view of topographic features.
- **Transit Lines:** Add this layer to provide geographic representations of transit lines. This mode is available in selected areas only.
- **Latitude:** Add this layer to see your friends' locations and share yours with them. You may sign in with your Google account to use this feature.
- **My Maps:** Adds this layer to display Google My Maps on Google Maps of your device.
- **Bicycling:** Adds this layer to provide the road map suitable for bicycling.
- **Wikipedia:** Adds this layer to provide a list of Wikipedia articles that are geo-referenced. An extract of the Wikipedia article can be accessed by clicking on the icon, a link to the full version of the Wikipedia article is also available.

Getting Directions

1. On the Google Maps screen, touch .
2. Do one of the following:
 - The starting point is set to your current location as default. Touch  to change your starting point place.
 - Touch **End point:** and type your destination or touch  to select the destination from the list.
3. Select the way to get to the destination (by car, by train, or by foot).
4. Touch **GET DIRECTIONS**. The directions to your destination appear in a list or on the map. Touch **NAVIGATION** to open Google Navigation to navigate you to your destination.

Clearing the Map

When you have reached your destination, press **Menu**  > **Clear Map** to reset the map.

Google Play Music App

Play Music plays digital audio files saved on the storage card. You need to copy music files to a storage card first to use the Google Play Music application. The microSD cards are sold separately and not included with this device. See [Use the Device's microSD Card as a USB Drive](#) for more details on copying files.

Note: If you have signed up for Google Music™, the first time you open the Google Play Music application you will be prompted to select the account whose online music library you want to access from the Google Play Music application. Follow the onscreen instructions to continue.

Open the Play Music Library

Access the Play Music library to enjoy your favorite music.

- Press **Home** , and touch  > **Play Music**. The Play Music library screen appears.

Play Music

Learn the basics to use the Play Music application.

 
1. On the Play Music library screen, touch a category name to view its contents. Available categories are:
 - **PLAYLISTS** to select a customized playlist you've created.
 - **RECENT** to show the albums you have listened to recently.
 - **ARTISTS** to show your music library sorted by artist.
 - **ALBUMS** to show your music library sorted by album.
 - **SONGS** to list all of your songs in alphabetical order.
 - **GENRES** to show your music library sorted by genre.
2. Touch a song in your library to play it. The Now playing screen opens.

— or —







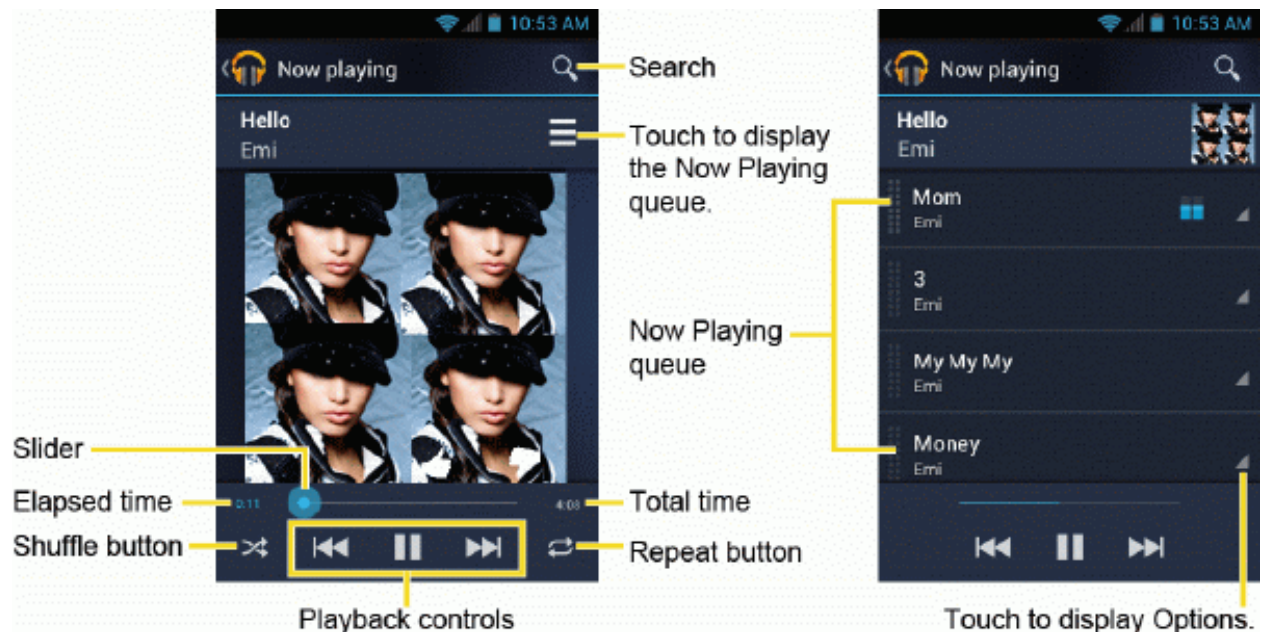


 
Touch the triangular menu button  next to an item and touch **Play**.

Now Playing Screen


Learn the basic layout of the Now Playing screen.



The following options are available for the control:

- Drag the slider to rewind or fast-forward.
- Touch  to pause. Touch  to resume playing.
- Touch  to go back to the beginning of the current song, and touch  to play the next song in an album.
- Touch the Shuffle button  to toggle shuffle on or off. When shuffle is on, the button will change color .
- Touch the Repeat button  to cycle through the repeat modes:  (Repeating all songs),  (Repeating current song), or  (Repeat is off).

Additional Options

While using the Play Music application you can touch the triangular menu button  next to an item to view additional options. These options may vary depending on the music data.

 
- **Play** to play the song.
- **Play next** to play the next song.

- **Add to queue** to add the song to the queue.
- **Add to playlist** to add the song to the playlist.
- **Remove from queue** to remove the song from the queue.
- **More by artist** to show another album of the selected artist.
- **Shop for artist** to open the Google Play Store app and find items related to the artist.
- **Search** to conduct a search using the application that you select.
- **Delete** to delete the song.

Tip: For more options such as changing the settings, saving or clearing the queue, or displaying the equalizer, press **Menu** .

Search for Music in the Play Music Library

Follow the instructions to find music in your Play Music library.

1. Open the Play Music library and touch the Search button .
2. Type the name of the artist, album, song, or playlist you're looking for. As you type, matching information is displayed on the screen.
3. To select a matched item, touch the item.

 
Now Playing Queue

The Now playing queue allows for queuing and reordering of the music.


Displaying the Now Playing Queue

- On the Now playing screen, touch . See [Now Playing Screen](#).


Adding an Item to the Queue

1. Open the Play Music library and identify the item that you want to add to the queue.
2. Touch  next to the item and touch **Add to queue**.

Removing an Item From the Queue

1. On the Now playing queue screen, identify the item that you want to remove from the queue.
2. Touch  next to the item and touch **Remove from queue**.


Saving the Queue

1. On the Now playing queue screen, press **Menu**  and touch **Save queue**.
2. Enter the name to be displayed in the playlist and touch **OK**. The queue is saved as a playlist.

Clearing the Queue

- On the Now playing queue screen, press **Menu**  and touch **Clear queue**.


Reordering the Queue

- On the Now playing queue screen, touch  next to the item that you want to play next, and then touch **Play next**. The music will be played next.


Use Playlists

Create a playlist to organize your music.


Creating Playlists

1. Open the Play Music library and browse for the song that you want to add to the playlist.
2. Touch  next to the song that you want to add and touch **Add to playlist**.
3. On the Add to playlist window, touch **New playlist**.
4. Type the name of your new playlist and touch **OK**. After you save the playlist, it's added to the Playlists library.


Adding Song to Existing Playlists

1. Open the Play Music library and browse for the song that you want to add to the playlist.
2. Touch  next to the song that you want to add and touch **Add to playlist**.
3. On the Add to playlist window, touch the name of the playlist to which you want to add the song.


Removing Song From Playlists

1. Open the Playlists library.
2. Touch the playlist that contains the music you want to remove.
3. Touch  next to the song that you want to remove and touch **Remove from playlist**.


Renaming Playlists

1. Open the Playlists library.
2. Touch  next to the playlist that you want to rename and touch **Rename**.
3. Type the new name of the playlist and touch **Rename**.

Playing Song in Playlists

1. Open the Playlists library.
2. Touch  next to the song you want to play and touch **Play**.

Deleting Playlists

1. Open the Playlists library.
2. Touch  next to the playlist you want to delete and touch **Delete**.
3. Touch **OK** to confirm.

Back Up Your Downloaded Music Files

It is recommended that you back up your downloaded music files to your computer. Although the downloaded files can only be played on your device and on your account, backing them up to your computer lets you access the files in case your microSD card is lost or damaged, or if you install a new microSD card. See [Use the Device's microSD Card as a USB Drive](#).

1. Connect your device to your computer using a USB cable.
2. Use your computer to navigate to the microSD card's Music folder.
3. Select and copy the music files to a folder on your computer's hard drive.

Web and Data

Your device's data capabilities let you wirelessly access the Internet or your corporate network through a variety of connections, including Wi-Fi and Data Services.

The following topics address your device's data connections and the built-in Web browser. Additional data-related features can be found in [Messaging](#), [Applications and Entertainment](#), and [Tools and Calendar](#).



Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your device's Wi-Fi, you need access to a wireless access point or "hotspot."


The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.



Turn Wi-Fi On and Connect to a Wireless Network

Use the WIRELESS & NETWORKS settings menu networks to enable your device's Wi-Fi radio and connect to an available Wi-Fi network.

1. Press **Home**  > **Menu** , and touch **System settings**.
2. If **OFF** is displayed at the right of **Wi-Fi**, touch it to turn Wi-Fi on. **ON** is displayed and the device will scan for available wireless networks.
3. Touch **Wi-Fi**. The network names and security settings (open network or secured with WEP/WPA/WPA2 PSK) of detected Wi-Fi networks are displayed.
4. Touch a Wi-Fi network to connect. If you selected an open network, you will be automatically connected to the network. If you selected a network that is secured, enter the key, and then touch **Connect**.

Depending on the network type and its security settings, you may also need to enter more information or choose a security certificate.

When your device is connected to a wireless network, the Wi-Fi icon () appears in the status bar and tells you the approximate signal strength. (The above icon indicates maximum signal strength.)



If **Network notification** is enabled, this icon () appears in the status bar whenever the device detects an available open wireless network within range. Press **Menu** , touch **Advanced**, and check **Network notification**.

Note: The next time your device connects to a previously accessed secured wireless network, you will not be prompted to enter the security key again, unless you reset your device to its factory default settings.

Note: Wi-Fi networks are self-discoverable, which means no additional steps are required for your device to connect to a Wi-Fi network. It may be necessary to provide a username and password for certain closed wireless networks.

Check the Wireless Network Status



Check the status of your current wireless network, including speed and signal strength, through the WIRELESS & NETWORKS settings menu.

1. Press **Home**  > **Menu** , and touch **System settings > Wi-Fi**.
2. Touch the wireless network that the device is currently connected to. You will see a message box showing the Wi-Fi network name, status, speed, signal strength, and other details.

Note: If you want to remove the remembered wireless network settings, touch **Forget** on this window. You need to enter the settings again if you want to connect to this wireless network.

Connect to a Different Wi-Fi Network

Use the WIRELESS & NETWORKS settings to scan for and connect to a different Wi-Fi network.

1. Press **Home**  > **Menu** , and touch **System settings > Wi-Fi**. Detected Wi-Fi networks are displayed in the Wi-Fi networks section. To manually scan for available Wi-Fi networks touch **SCAN**.
2. Touch another Wi-Fi network to connect to it.

Note: If the wireless network you want to connect to is not in the list of detected networks, scroll down the screen, and touch **ADD NETWORK**. Enter the wireless network settings and touch **Save**.

Data Services

With your Sprint Prepaid service, you are ready to start enjoying the advantages of data services. The following topics will help you learn the basics of using your data services, including managing your username, launching a data connection, and navigating the Web with your device.

Important: Certain data services requests may require additional time to process. While your device is loading the requested service, the touchscreen keyboard may appear unresponsive when in fact they are functioning properly. Allow the device some time to process your data usage request.

Launch a Web Connection

Launching a Web connection is as simple as opening the browser on your device.

- Press **Home** , and touch  > **Browser**. (Your data connection starts and you see the home page.)

Note: Internet connections can be made either through the data service or via Wi-Fi (configured within the **Settings > Wi-Fi**).



Tip: To change the device's default launch page to your current page, press **Menu** , and touch **Settings > General > Set homepage > Current page**.

Note: The Browser automatically launches when a Web link is touched from within either an email or text message.

Data Connection Status and Indicators

Your device displays the current status of your data connection through indicators at the top of the screen.

The following symbols are used:

Icon	Description
	Your device is connected to the 3G or 1x network. When the arrows are animated, your device is transferring data (for example, when you are opening a Web page).
	Your device is connected to the 3G or 1x network but is not currently transferring data (for example, when you are viewing a Web page that is completely open).

In any state, you can receive incoming calls.

If you do not see an indicator, your phone does not have a current data connection. To launch a connection, see [Launch a Web Connection](#).

Browser

Your device's Web browser gives you full access to both mobile and traditional websites on the go, using data service, or Wi-Fi data connections.

Learn to Navigate the Browser

Navigating through menus and websites during a data session is easy once you have learned a few basics.

Note: Before you access the home page, you may be asked to enter your 10-digit wireless phone number and touch **OK**. Entering your phone number is not required for access to other Web pages.

Scrolling

As with other parts of your device's menu, you'll have to drag up and down to see everything on some websites.

To scroll through a website's page:

- In a single motion, touch and drag across or up and down a page.

Selecting


To select onscreen items or links:

- Drag across a page, and then touch an onscreen item or link.

Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

Go Back

To go back one page:

- Press **Back**  on your device. Repeat this process to keep going back through your Web page history of recently visited pages.

Go to a Web Page

1. Touch the Address field (top of the browser window) and enter a new Web address.
 - As you enter the address, possible matches are displayed within an onscreen list. Touch an entry to launch the desired website.
2. Touch **Go** to launch the new page.




Note: Not all websites are viewable on your device.

 
Browser Menu

The browser menu offers additional options to expand your use of the Web on your device.

Open the Browser Menu

The browser menu may be opened anytime you have an active data session, from any page you are viewing.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** . You will see the browser menu.

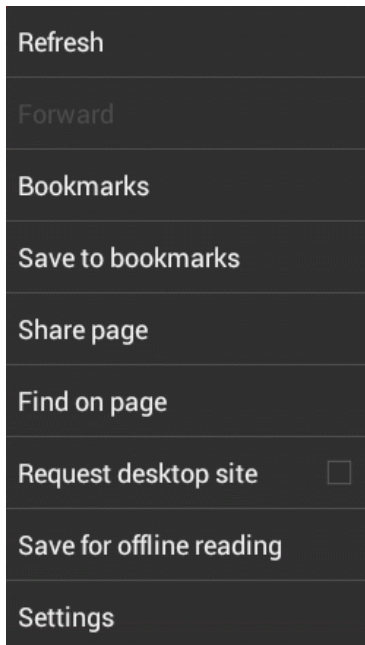


Options available within the browser menu include:

- **Stop:** Stops loading the current Web page. (This option will be displayed until a page is opened.)
- **Refresh:** Reloads the current Web page.
- **Forward:** Returns you to a previously viewed page. (This option will be grayed out when there is no page which can be forwarded.)
- **Bookmarks:** Allows you to access and manage your bookmarks.
- **Save to bookmarks:** Adds the currently viewed page as a bookmark.
- **Share page:** Allows you to send a URL via Gmail, SMS, Email, or Bluetooth.
- **Find on page:** Searches the current Web page for a word.
- **Request desktop site:** Displays the PC site of the current Web page.
- **Save for offline reading:** Saves the current Web page in cache to read it offline.
- **Settings:** Lets you configure and manage your browser settings.


Select Text on a Web Page

You can highlight text on a Web page and copy it, search for it, or share it.

 1. Scroll to the area of the Web page containing the text you want to select.
2. Touch and hold the text you want to copy. Drag tabs to expand or reduce the range of selected text. Any selected text will appear highlighted.

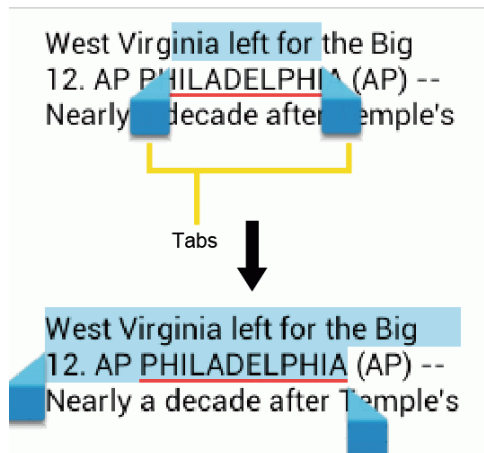




Tip: Touch **SELECT ALL** to select all the text on the Web page.

3. Touch  and select the following options.
 - **Copy** to copy the selected text.
 - **Share** to share the selected text via Bluetooth, Gmail, messaging, etc.
 - **Find** to find the selected text on the Web page.
 - **Web Search** to search the selected text on Internet.

Adjust Browser Settings




You can change the settings for your browser, including setting your home page, and more.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings** > **General**.
3. Select from one of the following browser general settings.
 - **Set homepage:** Sets the current home page for the Web browser.

- **Form auto-fill:** Fills out Web forms with a single touch.
- **Auto-fill text:** Sets up text to auto-fill in Web forms.




Adjust Browser Privacy and Security Settings

You can adjust your browser's privacy and security settings such as whether or not to save passwords, history, or cache.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings > Privacy & security**.
3. Select from one of the following browser privacy and security settings.
 - **Clear cache:** Deletes all currently cached data. Touch **OK** to complete the process.
 - **Clear history:** Clears the browser navigation history. Touch **OK** to complete the process.
 - **Show security warnings:** Notifies you if there is a security issue with the current website. Clear the check mark to disable this function.
 - **Accept cookies:** Allows sites that require cookies to save and read cookies from your device.
 - **Clear all cookie data:** Clears all current browser cookie files. Touch **OK** to complete the process.
 - **Remember form data:** Allows the device to store data from any previously filled-out forms. Clear the check mark to disable this function.
 - **Clear form data:** Deletes any stored data from previously filled out forms. Touch **OK** to complete the process.
 - **Enable location:** Allows sites to request access to your current location (using the built-in GPS function).
 - **Clear location access:** Clears location access for all websites. Touch **OK** to complete the process.
 - **Remember passwords:** Stores usernames and passwords for visited sites. Clear the check mark to disable this function.
 - **Clear passwords:** Deletes any previously stored usernames or passwords. Touch **OK** to complete the process.




Adjust Browser Accessibility Settings

You can adjust your browser's accessibility settings such as font size or screen inversion.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings** > **Accessibility**.
3. Select from one of the following browser accessibility settings.
 - **Force enable zoom:** Overrides a website's request to control zoom behavior.
 - **Text scaling:** Changes text size as you see on its preview screen.
 - **Zoom on double-tap:** Sets the zoom magnification when you double-tap the screen.
 - **Minimum font size:** Sets the minimum font size on the Web as you see on its preview screen.
 - **Inverted rendering:** Inverts the screen image. Black becomes white and vice versa. When enabled, you can set the contrast using the Contrast slider.

Adjust Browser Advanced Settings




You can adjust your browser's advanced settings such as setting search engine or default zoom.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings** > **Advanced**.
3. Select from one of the following browser advanced settings.
 - **Set search engine:** Sets the search engine. See [Set Search Engine](#).
 - **Open in background:** New pages are launched in a separate page and displayed behind the current one. Clear the check mark to disable this function.
 - **Enable JavaScript:** Enables JavaScript for the current Web page. Without this feature, some pages may not display properly. Clear the check mark to disable this function.
 - **Enable plug-ins:** Allows you to determine the way your device handles program enhancements. Select **Always on**, **On demand**, or **Off**.
 - **Website settings:** Allows you to configure advanced settings for individual websites.
 - **Default zoom:** Sets the default browser viewing size. Choose from: **Far**, **Medium**, or **Close**.
 - **Open pages in overview:** Provides an overview of recently opened pages.
 - **Auto-fit pages:** Allows Web pages to be resized to fit as much of the screen as possible.
 - **Block pop-ups:** Prevents pop-up advertisements or windows from appearing onscreen. Clear the check mark to disable this function.

- **Text encoding:** Adjusts the current text encoding.
- **Reset to default:** Resets the browser settings to default.




Adjust Browser Bandwidth Management Settings

You can adjust your browser's bandwidth management settings.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings** > **Bandwidth management**.
3. Select from one of the following browser bandwidth management settings.
 - **Search result preloading:** Allows browser to preload high confidence search results in the background.
 - **Load images:** Displays images on Web pages.




Adjust Browser Labs Settings

You can adjust your browser's labs settings.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings** > **Labs**.
3. Select from one of the following browser labs settings:
 - **Quick controls:** Opens the Quick controls and hides application and URL bars.
 - **Fullscreen:** Enables the full screen mode and hides the status bar.




Set Search Engine

You can select the default search engine.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings** > **Advanced**.
3. Touch **Set search engine** and select a search engine you want to use.




Create Website Settings

You can create settings for individual websites.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings** > **Advanced** > **Website settings**.
3. Touch the website you want to create settings. These advanced settings can be configured for individual sites.
4. Touch the settings(for example, **Clear location access**) to complete the process.




Reset the Browser to Default

You always have the option to restore your browser to its default settings.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings** > **Advanced** > **Reset to default**.
3. Touch **OK** to complete the process.




Set the Browser Home Page

Customize your Web experience by setting your browser's home page.





1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings** > **General** > **Set homepage**.
3. Select the page you want to set as a home page. Touch **Current page** to select the current page as the home page.

Read Web Page Offline

You can save Web pages for offline reading.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **Save for offline reading**. The Web page will be saved in **SAVED PAGES** of the bookmark.




To view the saved pages:

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **Bookmarks**.
3. Touch the **SAVED PAGES** tab and select the page you want to view. If you want to view the page online, press **Menu** , and touch **Go live**.




Manage Bookmarks

Make browsing easier by setting up and using custom bookmarks.




Show Bookmarks

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **Bookmarks**. Three tabs are revealed.
 - **BOOKMARKS**: Displays a list of your current Web bookmarks.
 - **HISTORY**: Displays a record of your browsing history. These records are organized into folders such as: **Today**, **Yesterday**, **Last 7 days**, and **Most visited**.
 - **SAVED PAGES**: Displays a list of websites you saved for offline reading. Touch an entry to launch the selected page.

Create Bookmarks

1. Press **Home** , and touch  > **Browser**.
2. Open the Web page you want to bookmark.
3. Press **Menu** , and touch **Save to bookmarks**.
4. Enter a descriptive name for the new bookmark.
5. Select an account you want to add the bookmark to.
6. Select where to save the bookmark and touch **OK**.

Create Bookmarks From History Tab

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **Bookmarks**.
3. Touch the **HISTORY** tab.
4. Touch the star mark at the right of the entry and touch **OK**.

Camera and Video



You can use the camera or camcorder to take and share pictures and videos. Your device comes with a 3.2 megapixel camera that lets you capture sharp pictures and videos.

Camera Basics

Learn how to take open the camera and take and review pictures with your phone's camera.

Open the Camera

 
Follow the instructions below to open the camera in photo mode and take photos.

- Press **Home** , and touch  > **Camera**.



Tip: You can open the camera from the lock screen. Flick .

Camera Viewfinder Screen

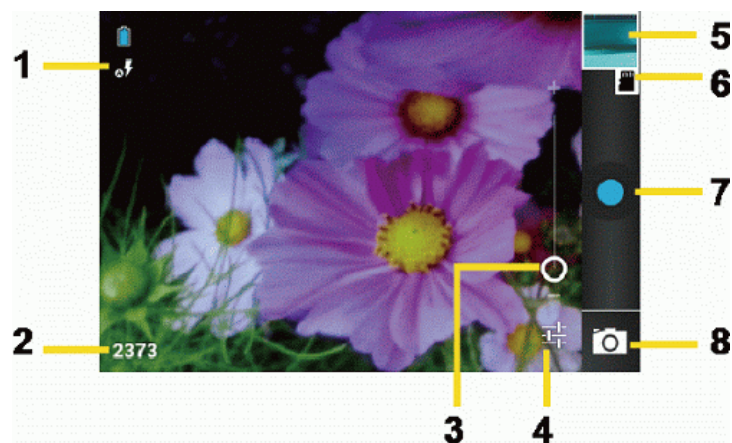You'll find the following controls on the camera viewfinder screen.

 




1. **Camera mode icons:** Displays the current camera modes.
 2. **Available shots:** Displays the number of shots left available (depending on the capacity of the microSD card).
 3. **Zoom slider:** Drag this slider to change the zoom settings. You can also change the zoom settings by pressing the volume button up or down.
 4. **Settings button:** Reveals additional camera mode buttons (9-13).
 5. **Thumbnail:** Thumbnail of the latest data. Touch to view and manage.
 6. **Storage destination:** Displays the storage destination (microSD  or Phone .
 7. **Shutter button:** Touch to take a picture.
 8. **Switch button:** Touch to select camera or camcorder.
 9. **Close button:** Touch to close the camera mode buttons (10-13) and return to the zoom slider.
 10. **Flash mode button:** Touch to select the flash mode.
 11. **White balance button:** Touch this button to change the white balance to enable the camera to capture colors more accurately by adjusting to your current lighting.
 12. **Scene mode button:** Touch to select a scene mode.
- Note:** If you select items other than **Auto**, you cannot select **Auto Exposure**, **Flash mode**, **Select ISO**, and **White balance**.
13. **Camera settings button:** Opens the camera settings menu and lets you change the camera settings. For more information, see [Camera/Video Settings](#).

Review Screen

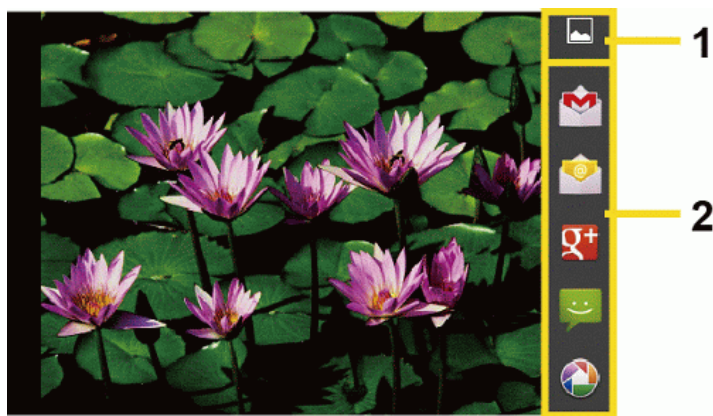

After capturing a photo or video, touch the thumbnail to display the review screen. You can instantly share your photos or videos. See [Share Photos and Videos](#). Touch the Gallery icon to edit your photos or replay your videos. See [View Pictures and Videos Using Gallery](#).




1. **Gallery:** Opens the Gallery application to edit your photo or replay your video.
2. **Share:** Displays the available applications to share your photo or video.

Take a Picture

You can take high-resolution pictures using your device's camera.

1. Press **Home** , and touch  > **Camera**.
2. Change the settings if necessary.
3. Frame your subject on the screen.

Tip: Hold the device vertically when taking portrait shots or hold the device horizontally when taking landscape shots. Then you will not need to rotate the photo after capturing it.

4. Touch  to take the photo.
5. Choose what you want to do with the photo you've just taken. See [Review Screen](#) for details.

Close the Camera

 
On the camera screen, press **Home**  or **Back** .



Record Videos

Record high-quality videos (up to WVGA resolution) using your device's video camera.

Video Viewfinder Screen

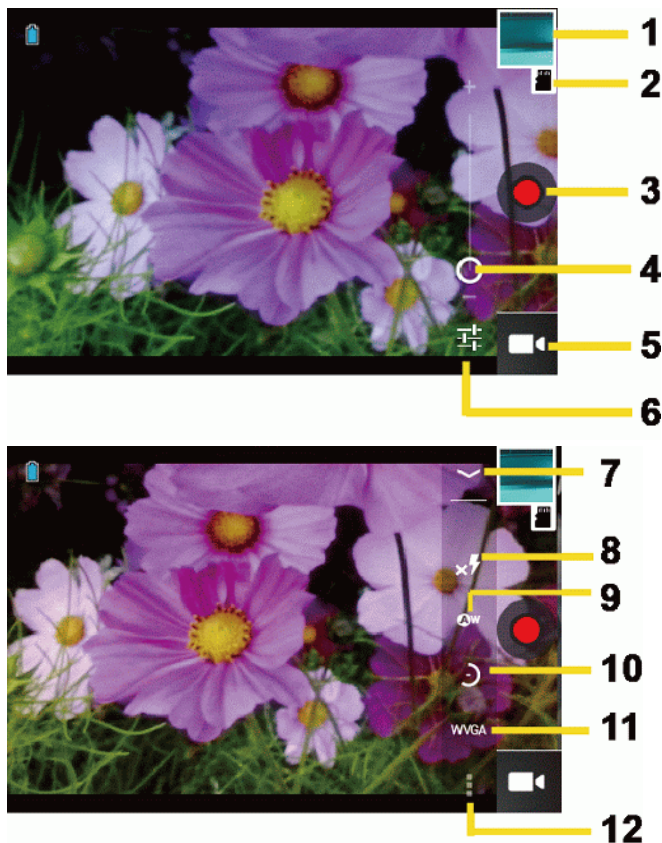You'll find the following controls on the video viewfinder screen.









1. **Thumbnail:** Thumbnail of the latest data. Touch to view and manage.
2. **Storage destination:** Displays the storage destination (microSD  or Phone )
3. **Recorder button:** Touch to take a video. Touch again to stop.
4. **Zoom slider:** Drag this slider to change the zoom settings. You can also change the zoom settings by pressing the volume button up or down.
5. **Switch button:** Touch to select camera or camcorder.
6. **Settings button:** Reveals additional video mode buttons (7-12).

7. **Close button:** Touch to close the video mode buttons (8-12) and return to the zoom slider.
8. **Flash mode button:** Touch to select the flash mode.
9. **White balance button:** Touch this button to change the white balance to enable the video to record colors more accurately by adjusting to your current lighting.
10. **Time lapse interval:** Touch to select a time lapse interval for recording.
11. **Video quality button:** Touch to select a video quality.
12. **Video settings button:** Touch this button to change the video settings. For more information, see [Camera/Video Settings](#).



Record a Video

Follow the instructions below to record videos on your phone's camera.

1. Press **Home** , and touch  > **Camera**.
2. Touch  and then touch  to activate camcorder mode.
3. Select **MMS** or **Long video**.
 - **MMS:** Select this option to attach the captured video to your mail. The quality will be automatically set to QCIF (176x144) and the maximum length of a video is 30 seconds.
 - **Long video:** Select this option to capture a long video. The quality can be selectable.
4. Frame your subject on the screen.
5. Touch  to start capturing video.
6. Touch  to stop capturing.
7. Choose what you want to do with the video you've just captured. See [Review Screen](#) for details.



Camera/Video Settings

Follow the steps below to change the camera/video settings.

1. Press **Home** , and touch  > **Camera**.

— or —

Press **Home** , and touch  > **Camera** >  > , and then select **MMS** or **Long video**.

2. Touch  and then touch  to show the camera/video settings menu.

- **Store location:** Stores the location information of the picture/video.
- **Picture size:** Selects from: **3.2M(2048x1536)**, **2.0M(1600x1200)**, **0.8M(1024x768)**, **VGA(640x480)**, or **HVGA(480x320)** (camera only).
- **Picture quality:** Selects the quality of the pictures from: **Super fine**, **Fine**, or **Normal** (camera only).
- **Color effect:** Adds a color effect to the picture. Choose from: **None**, **Mono**, **Sepia**, **Negative**, or **Aqua**.
- **Auto exposure:** Selects the exposure metering range from: **Frame average**, **Center weighted**, or **Spot metering**.
- **Select ISO:** Selects the ISO value from: **AUTO**, **100**, **200**, **400**, **800**, or **1000** (camera only).
- **Restore defaults:** Restores all of the camera/video settings to their default values.



View Pictures and Videos Using Gallery

 
Using the Gallery application, you can view photos and watch videos that you've taken with your device's camera, downloaded, or copied onto your microSD card.

For photos that are on your microSD card, you can do editing. You can also easily make a photo as your contact picture or wallpaper and share photos with your friends.

Open Gallery

The Gallery application opens in the Albums view where your photos and videos organized by albums for easy viewing.

- Press **Home** , and touch  > **Gallery**.

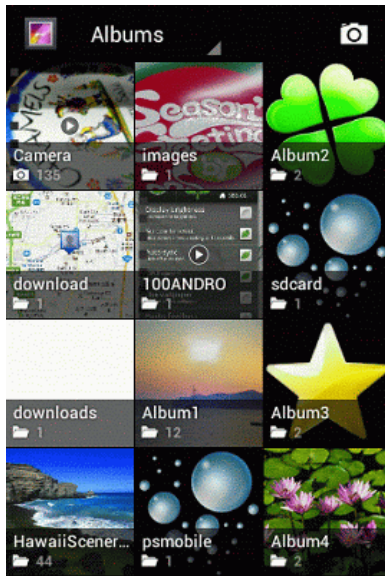

Photos or videos you took with the internal camera are stored in **Camera** album.

 
Folders in your storage card that contain photos and videos will also be treated as albums and will be listed below **Camera**. The actual folder names will be used as the album names. If you have downloaded any photos and videos, these will be placed in the **download** album.


When viewing pictures in Gallery, scroll left or right the screen to view more albums. Simply touch an album to view the photos or videos in that album.

Note: Depending on the number of pictures stored on the microSD card, it may take some time for Gallery to load all your photos on the screen.

View Photos and Videos

After selecting an album, you can browse through the photos and videos of that album in grid view. Touch a photo or video to view.

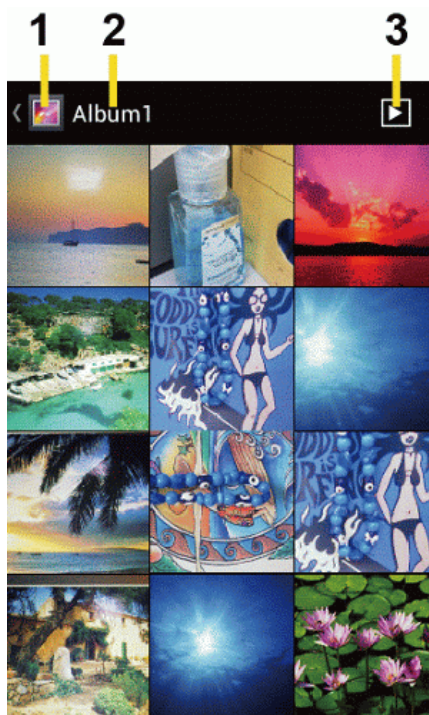

1. Touch to go back to the Gallery screen.
 2. Name of the album.
 3. Touch to show the slideshow of pictures in this album.
- Press **Menu**  to select pictures or sort pictures.

Zoom In or Out on a Photo

There are two ways you can zoom in or out of a photo.


- Touch the screen twice quickly to zoom in, then touch the screen twice quickly again to zoom out.
- or –

Pinch the screen using your thumb and forefinger to zoom out or spread the screen to zoom in.

Watch a Video

Use the onscreen controls to play, pause, or stop the video.

- Touch  to play the video.

- Touch  to pause the video.

Close Gallery

Use the Home key to close the Gallery and return to the Home screen.

- While in the Gallery screen, press **Home** .

Working with Photos

You can manage your photos or videos.



Photo Options Menu

With the picture displayed, press **Menu**  to show the following menu.

 
- **Delete:** Deletes the selected picture/video.
- **Slideshow:** Starts the slideshow of the pictures stored.
- **Edit:** Edits the picture. See [Edit a Photo](#).
- **Rotate left/Rotate right:** Rotates the picture. See [Rotate and Save a Photo](#).
- **Crop:** Crops the picture. See [Crop a Photo](#).
- **Details:** Shows the details of the picture.
- **Set picture as:** Sets the picture as the contact photo or wallpaper.
- **Show on map:** Shows the location where you took the picture in Google Maps if Store location is set to ON. See [Camera/Video Settings](#).

Edit a Photo





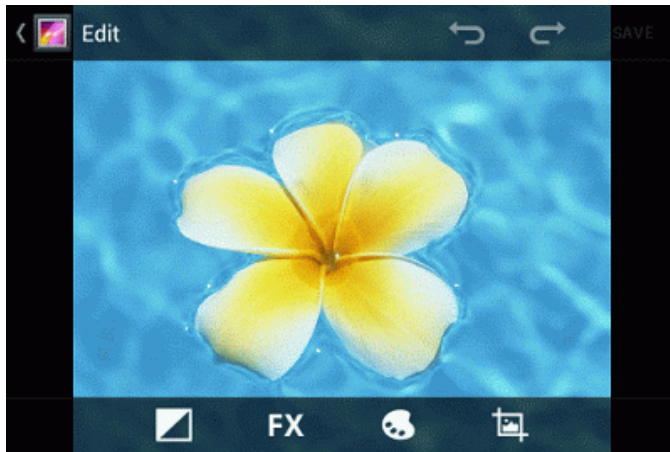

Your device has a built in editing tool and you can alter the picture you took easily.

1. Press **Home** , and touch  > **Gallery**.
2. Touch an album and then touch a picture.

3. Press **Menu**  > **Edit**.






4. Touch the following icon to edit the picture and scroll left and right to select your favorite effect.

-  to add exposure effect.
-  to add artistic effect.
-  to add color effect.
-  to add additional effect.
-  to undo the action.
-  to redo the action.

5. When finished, touch **SAVE**.




Rotate and Save a Photo

 
Follow these steps to rotate photos in your gallery.

1. Press **Home** , and touch  > **Gallery**.
2. Touch an album and then touch a picture.
3. Press **Menu** , and touch **Rotate left** or **Rotate right**.

Crop a Photo

Follow these steps to crop a photo in your gallery.

1. Press **Home** , and touch  > **Gallery**.
2. Touch an album, and then touch a picture.
3. Press **Menu** , and touch **Crop**. A crop box then appears on the photo.

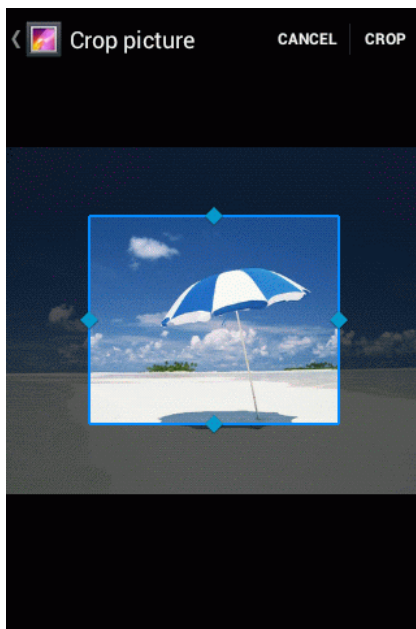

4. To adjust the crop box size, press and hold the edge of the box. When directional arrows appear, drag your finger inward to or outward to resize the crop box.
5. To move the crop box to the part of the photo that you want to crop, drag the crop box to the desired position.
6. Touch **CROP** to apply the changes to the picture.





The cropped picture is saved on the storage card as a copy. The original picture remains unedited.

Share Photos and Videos

The Gallery application lets you send photos and videos using email or multimedia messages. You can share photos on your social networks such as Picasa and share videos on YouTube. You can also send them to another phone or your computer using Bluetooth.

Send Photos or Videos by Email/Gmail





You can send several photos, videos, or both in an email/Gmail message. They are added as file attachments in your email.

1. Press **Home** , and touch  > **Gallery**.
2. Touch the album that contains the photos or videos you want to share.
3. Touch and hold the photo or video until you see a blue frame around it. Touch multiple photos and videos to select them.
4. Touch  > **Gmail** or **Email**. If you cannot find it, touch **See all....**
5. Compose your message and then touch .

Note: If you selected **Email** and you have multiple email accounts, the default email account will be used.

Send Photos or Videos by Multimedia Message


Although you can send several photos or videos in a multimedia message, it may be better to just send one at a time, especially if the files are large in size.

1. Press **Home** , and touch  > **Gallery**.
2. Touch the album that contains the photos or videos you want to share.
3. Touch and hold the photo or video until you see a blue frame around it. Touch multiple photos and videos to select them.
4. Touch  > **Messaging**. If you cannot find it, touch **See all....**
5. Compose your message and then touch  .

Send Photos or Videos Using Bluetooth




You can select several photos, videos, or both and send them to another phone or your computer using Bluetooth.

1. Press **Home** , and touch  > **Gallery**.
2. Touch the album that contains the photos or videos you want to share.

3. Touch and hold the photo or video until you see a blue frame around it. Touch multiple photos and videos to select them.
4. Touch  > **Bluetooth**.
5. In the next few steps, you'll be asked to turn on Bluetooth on your device and connect to the receiving Bluetooth device so the files can be sent. For more information, see [Bluetooth](#).





Share Photos or Videos on Google+

You need to be signed in to a Google account to share photos, videos, or both on Google+.

1. Press **Home** , and touch  > **Gallery**.
2. Touch the album that contains the photos or videos you want to share.
3. Touch and hold the photo or video until you see a blue frame around it. Touch multiple photos and videos to select them.
4. Touch  > **Google+**.
5. Follow the instructions on the screen.




Share Photos on Picasa

You need to be signed in to a Google account to upload pictures to the Picasa™ photo organizing service.

1. Press **Home** , and touch  > **Gallery**.
2. Touch the album that contains the photos you want to share.
3. Touch and hold the photo until you see a blue frame around it. Touch multiple photos to select them.
4. Touch  > **Picasa**.
5. Select the online album where you want to upload the pictures, or touch  to create a new album.
6. Touch **Upload**. You can view the photos online at picasaweb.google.com.

Share Videos on YouTube

You can share your videos by uploading them to YouTube™. Before you do this, you must create a YouTube account and sign in to that account on your device.

1. Press **Home** , and touch  > **Gallery**.
2. Touch the album that contains the videos you want to share.
3. Touch and hold the video until you see a blue frame around it. Touch multiple videos to select them.
4. Touch  > **YouTube**.
5. Enter the prompted information, such as description and tags, and select a privacy option.
6. Touch **Upload**.

Tools and Calendar




Learn how to use many of your device's productivity-enhancing features.

Calendar

Use Calendar to create and manage events, meetings, and appointments. Your Calendar helps organize your time and reminds you of important events. Depending on your synchronization settings, your device's Calendar stays in sync with your Calendar on the Web, or the corporate calendar.

Add an Event to the Calendar

Add events to your calendar directly from the Calendar application.

1. Press **Home** , and touch  > **Calendar**.
2. On any Calendar view, press **Menu** , and touch **New event**.
3. If you have more than one calendar, select a calendar in which to add the event.

Note: You can create multiple Google Calendars only in Google Calendar on the Web. After creating them in Google Calendar on the Web, you'll be able to see them in the Calendar application on your device. For more information about creating and managing multiple Google Calendars, visit the Google website: calendar.google.com.

Note: If you have synchronized your device with a corporate account, you can also select these calendars.

4. Enter a name for the event.
5. Enter the event location.
6. To specify the date and time of the event, do one of the following:
 - If there is a time frame for the event, touch the **FROM** and **TO** dates and times to set them.
 - If the event is a special occasion such as a birthday or an all-day event, set the **FROM** and **TO** dates, and then select the **ALL DAY** check box.
7. Select the time zone for the event.
8. Enter email addresses to invite guests to your event and add the event descriptions. See [Invite Guests to Your Event](#).

9. If the event occurs on a regular basis, touch the **REPETITION** box and then choose how often the event occurs.
10. Set the event reminder time and select how you are notified.

Note: You can add another reminder time in a Google Calendar event. Touch **Add reminder** to add another reminder.

11. Select your status to be displayed on your calendar.
12. Set the privacy status of this event.
13. Touch **DONE**.

Invite Guests to Your Event

If you want to invite guests to your event, you need to create and add the event in your Google Calendar.

An email invitation will be sent to your guests using your Google or Corporate account.


1. Open Calendar and create a new event. Select your Google account (or one of your other Google Calendars). See [Add an Event to the Calendar](#).
2. Add details about the event, such as date and time, location, and more.
3. In the **GUESTS** field, enter the email addresses of everyone you want to invite to the event. Separate multiple addresses with commas.
4. Add the description of the event to be displayed on the email to your guests.
5. Touch **DONE** to add the event to your Google Calendar.

If the people to whom you send invitations use Google Calendar, they'll receive an invitation in Calendar and by email.


Event Alerts

When your device is turned on and you have an event alarm scheduled, your device alerts you and displays the event summary.

There are several ways your device alerts you to scheduled events:

- By playing the assigned ringtone or vibration.
- By showing the  icon on the status bar.
- By showing the Alert pop-up screen.


Event Reminders

If you have set at least one reminder for an event, the upcoming event icon  will appear in the notifications area of the status bar to remind you of the upcoming event.


To view, dismiss, or postpone the reminder:

1. Slide the status bar down to open the Notifications panel.
2. Touch the upcoming event name to display the event.

Note: If you have other pending event reminders, these events will also appear on the screen.


3. Do one of the following:
 - Touch **Snooze all** to postpone all event reminders for five minutes.
 - Touch **Dismiss all** to dismiss all event reminders.
 - Press **Back**  to keep the reminders pending in the notifications area of the status bar.

To set reminder settings:

- On any Calendar view, press **Menu** , and touch **Settings > General settings**, and set the items under **REMINDER SETTINGS**.

 
View Events

You can display the Calendar in daily, weekly, monthly, or agenda view. To change the Calendar view, touch the month and year displayed at the upper left corner, and touch **Day**, **Week**, **Month**, or **Agenda**.

The color of the events indicate the type of calendar that includes the event. To find out what each color represents, press **Menu** , and then touch **Calendars to display**.

Day View and Agenda Views


Day view displays a list of the events of one day. Agenda view shows a list of all your events in chronological order.

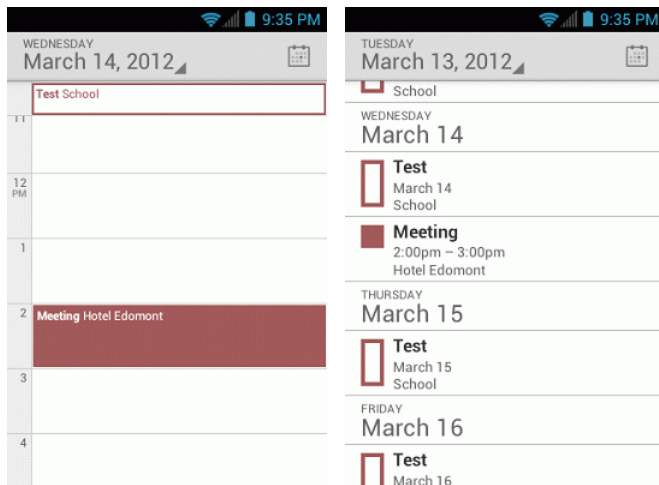

When in Day view, slide left or right across the screen to view earlier or later days.

Week View

Week view displays a chart of the events of one week.

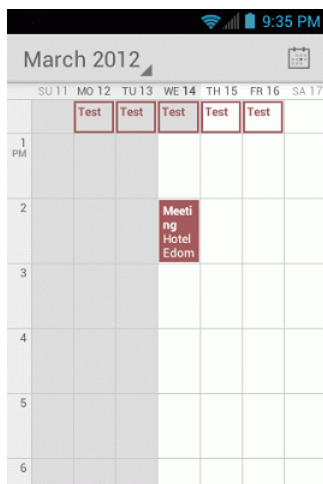 

When in Week view:

- You can touch and hold on a time slot to create an event.
- Touch an event to view its details.
- Slide left or right across the screen to view earlier or later weeks.

Month View

In Month view, you'll see markers on days that have events.






When in Month view:

- Touch a day to view the events of that day.
- Slide up or down the screen to view earlier or later months.

Erase Events

Follow the steps below to erase calendar events.

1. Press **Home** , and touch  > **Calendar**.
2. Open the calendar event details.
 - In **Agenda**, **Day**, and **Week** views, touch the calendar event you want to delete.
 - In **Month** view, touch the date where the calendar event occurs, and touch the calendar event.
3. Touch  > **OK**.

— or —

If the calendar event is recurring, select **Only this event**, **This and future events**, or **All events**, and touch **OK**.

Show or Hide Calendars




You can choose to display or hide calendars.

- In any Calendar view, press **Menu** , touch **Calendars to display**, and then touch a calendar to check to display or uncheck to hide it.

Synchronize Calendars with Your Device

You can choose which Google Calendars to keep synchronized on your phone or which ones to stop synchronizing.

Synchronize a Google Calendar

1. Press **Home**  > **Menu** , and touch **System settings** > **Accounts & sync**.
2. Touch the account you want to sync with.
3. Touch **Sync Calendar**.
4. In any Calendar view, press **Menu** , and touch **Calendars to display** > **Calendars to sync**.
5. Check the calendar to sync and touch **OK**.

Synchronize a Corporate Calendar

If you have set up a corporate account on your device, you can also synchronize corporate calendar events on your device. Calendar events on your corporate account will also show in Calendar if you chose to synchronize with the Exchange ActiveSync Server.

 
Clock & Alarm

The Clock application functions as a desk clock that shows the date and time. You can also use it to turn your device into an alarm clock.

Open Clock




The instructions below show how to open the Clock application.

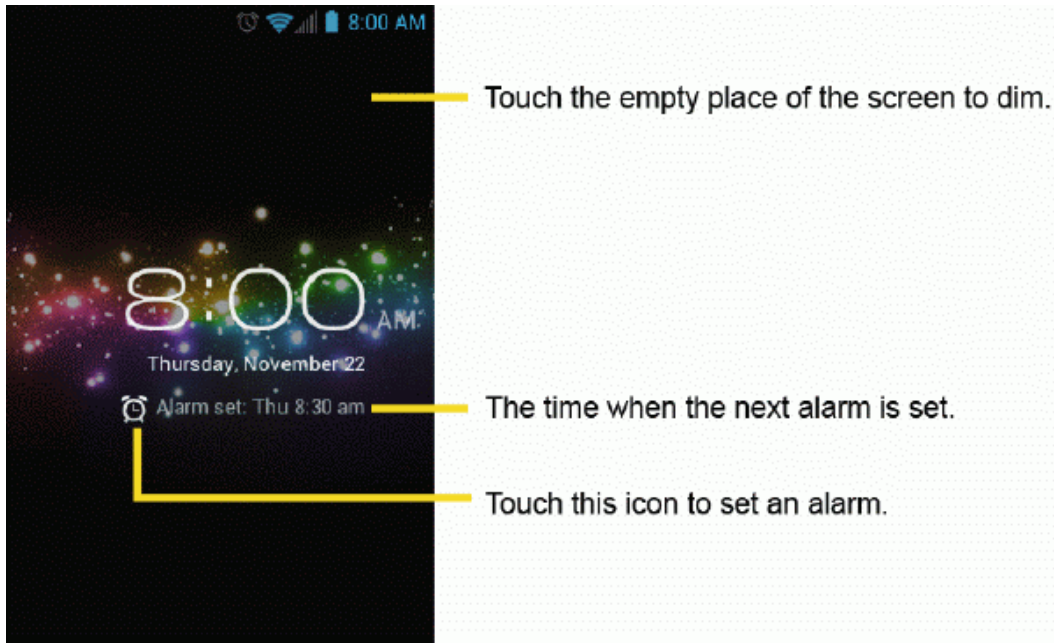
- Press **Home** , and touch  > **Clock**.



Set an Alarm

 You can use your device as an alarm clock.

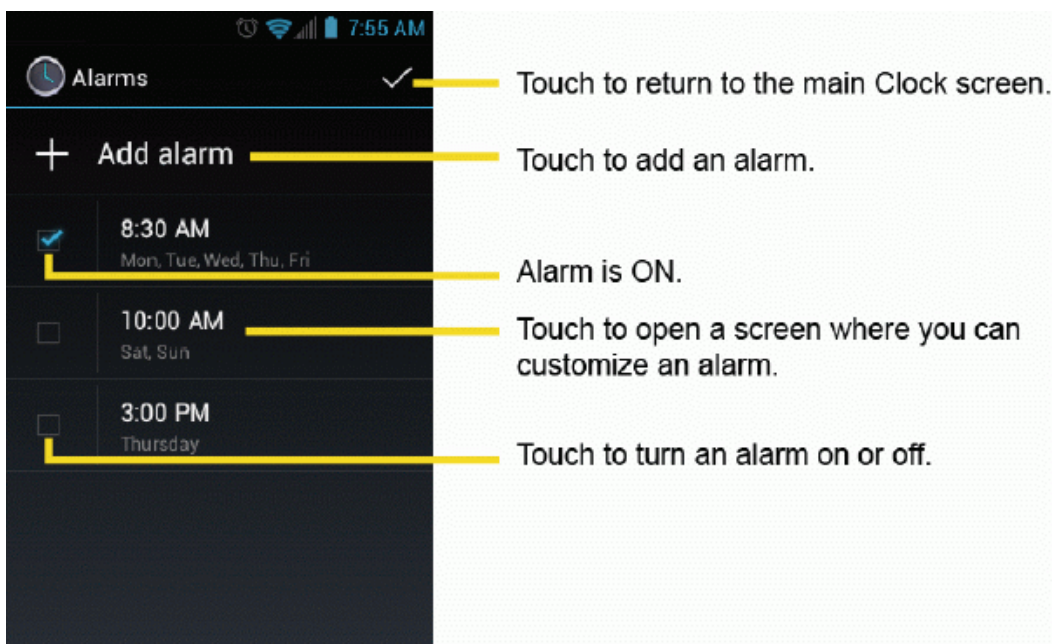


1. Press **Home** , and touch  > **Clock**.
2. Touch  on the screen.



Note: When you first open the alarms, two alarms are set up by default and ready for you to customize. These alarms are turned off by default.





3. Touch an existing alarm to change the settings or touch **Add alarm** to add a new one and set the alarm time.
4. Touch **Time** to adjust the hour, minute, and AM or PM by touching ▲ or ▼, or by sliding each item vertically. When finished, touch **Set**.
5. Touch **Repeat** to select a repeat status for the alarm. When finished, touch **OK**.
6. Touch **Ringtone** to select a ringtone that will play as an alarm. When finished, touch **OK**.
7. Touch **Vibrate** to check or uncheck the check box to turn the vibration feature for the alarm on or off.
8. Touch **Label** to enter a name for the alarm. When finished, touch **OK**.
9. Touch **Turn alarm on** to check or uncheck the check box to set the alarm on or off.
10. When finished all of the above, touch **OK**. (Alarms that are set are checked in blue.)
 - Touch the check mark next to an alarm to turn it on or off.

To delete an Alarm:

1. Press **Home** , and touch  > **Clock**.
2. Touch  on the screen.
3. From the Alarms screen, touch a desired alarm, and then touch **Delete**.
4. Touch **OK** to confirm the deletion.

Change Alarm Settings





Use the alarm settings menu to adjust settings for your alarm.

1. Press **Home** , and touch  > **Clock**.
2. Touch  on the screen.
3. From the Alarms screen, press **Menu** , and touch **Settings**.
4. Configure the following options.
 - **Alarm in silent mode:** Select to sound the alarm even when the device is in silent mode.
 - **Alarm volume:** Select to set the alarm volume.

- **Snooze duration:** Select to set the snooze duration from 5 to 30 minutes in 5-minute intervals.
- **Auto-silence:** Select to set how long the alarm sounds.
- **Volume button behavior:** Select to set the behavior of the volume button when pressed while the alarm sounds. Choose from: **None**, **Silence**, **Snooze**, or **Dismiss**.
- **Set default ringtone:** Select to set the ringtone for the alarm.

Calculator

Your device comes with a built-in calculator.

1. Press **Home** , and touch  > **Calculator**.
2. Enter numbers by touching the onscreen keys.
3. Touch **DELETE** to clear a number. Touch and hold to clear an entire number.
 - To access more advanced features, flick the screen left or press **Menu** , and touch **Advanced panel**.
4. Press **Back**  to close the calculator.

Voice Service

Your phone's voice services allow you to use Automatic Speech Recognition (ASR) and voice search to perform phone functions and launch Web searches.

Automatic Speech Recognition (ASR)

You can use your device's built-in automatic speech recognition (ASR) software (Voice Dialer) to dial a phone number in your People or to launch device functions. All you have to do is talk into the device, and ASR will recognize your voice and complete tasks by itself.

Activate the Voice Dialer



- Press **Home** , and touch  > **Voice Dialer**.

The device prompts you to say a command from the list displayed on the screen. To complete your task, simply follow the onscreen prompts or touch an onscreen option.



If the application does not recognize the number, name, or application name, it will find the most likely matches and display a list. Touch a selection or touch **Cancel** to exit the Voice Dialer.

Tip: Use ASR in a quiet environment so it can accurately recognize your commands.



Make a Voice Call with the Voice Dialer

1. Press **Home** , and touch  > **Voice Dialer**.
2. When prompted to speak, say “**Call** [contact]” or “**Dial** [number].”
3. For example, say “**Call John Smith on mobile**,” to call John Smith’s mobile phone. Your device dials the number stored for the contact “John Smith” with the label “Mobile.”

Open an Application with the Voice Dialer




1. Press **Home** , and touch  > **Voice Dialer**.
2. When prompted to speak, say “**Open** [application name].”
 - For example, say “**Open Calendar**,” to open the Calendar. The application screen is displayed.

Open a Settings Menu with the Voice Dialer

1. Press **Home** , and touch  > **Voice Dialer**.
2. When prompted to speak, say “**Open** [settings menu name].”
3. For example, say “**Open sound settings**.” The Sound settings menu screen is displayed.

Text-to-speech Settings

Your device can convert text into speech in some downloaded applications. You may select the language you hear or adjust its speed.


1. Press **Home**  > **Menu** , and touch **System settings** > **Language & input**.
2. Touch **Text-to-speech output** under **SPEECH**.
3. Select your engine. Touch  to configure the settings of the selected engine.
4. Touch **Speech rate** and select a speed.
5. Touch **Listen to an example** to play a short demonstration of the set speech synthesis.

Voice Search

Voice Search allows you to find information on the Web as well as items and information on your device by speaking your search terms.

1. Touch  on the Google Search Bar.



– or –

Press **Home** , and touch  > **Search** > .

2. Speak clearly into the device's microphone. If an error occurs, touch **Speak again** or **Try again**.
3. Touch a matching item from the onscreen list.



Voice Search Settings

You can configure the settings of the voice search feature.

1. Press **Home** , > **Menu** , and touch **System settings** > **Language & input**.
2. Touch **Voice Search** under **SPEECH**.
 - **Language** to set the language used when entering text by speaking.
 - **SafeSearch** to filter explicit text and images from the search results. Select from **Off**, **Moderate**, or **Strict**.
 - **Block offensive words** to replace recognized offensive words in transcriptions with [#] when entering text by speaking.
 - **Personalized recognition** to improve speech recognition accuracy.
 - **Google Account dashboard** to manage your collected data.

Eco Mode

The Eco Mode allows you to save battery life while using your device.

1. Press **Home** , and touch  > **Eco Mode**.
2. Drag the onscreen slider to select when you use the Eco Mode.
 - **Never:** Disables the Eco Mode.

- **10-90%:** Selects the remaining battery power when the Eco Mode activates. For example, 40% means the Eco Mode activates when the remaining battery power reaches 40%.
 - **Always:** Sets your device to always use the Eco Mode.
3. Touch **Eco settings** to select the Eco level.
 4. Touch the leaf of the following items to select.
 - **Sleep** to set the screen timeout to 15 seconds.
 - **Display brightness** to decrease the display brightness.
 - **Wallpaper** to select the Eco wallpaper.
 - **Auto-sync** to disable automatic synchronization with applications.
 - **Haptic feedback** to turn off Haptic feedback feature.
 - **Auto-rotate screen** to disable the Auto-rotate screen feature.
 5. Touch **Close**.

When Eco Mode is on, the Eco Mode icon  appears on the status bar.



Configured settings in the Eco Mode are automatically reflected in the respective **Settings** menu, and vice versa.

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually approximately 30 feet.

Turn Bluetooth On or Off



Use the Bluetooth menu to enable or disable your device's Bluetooth capabilities.

1. Press **Home**  > **Menu** , and touch **System settings**.
2. If **OFF** is displayed at the right of **Bluetooth**, touch it to turn Bluetooth on. **ON** is displayed and the device will scan for available Bluetooth devices.


Note: Turn off Bluetooth when not in use to conserve battery power, or in places where using a wireless device is prohibited, such as aboard an aircraft and in hospitals. Touch **ON** and confirm that **OFF** is displayed.

The Bluetooth Menu

You can access information and controls for your device's Bluetooth feature.





1. Press **Home**  > **Menu** , and touch **System settings** > **Bluetooth**.
2. Touch your device name (at the top of the list) to set your device visible to other devices.

Note: Touch again to set your device not visible to other devices. The time duration in which your device is visible can be changed.

3. Press **Menu**  and set the following options.
 - **Rename phone** to rename your device.
 - **Visibility timeout** to select the time duration in which your device is visible to other devices.
 - **Show received files** to show the files received using the Bluetooth feature.

Change the Device Name




The device name identifies your device to other devices.


1. Press **Home**  > **Menu** , and touch **System settings > Bluetooth**.
2. If the **Bluetooth** is not turned on, touch  to turn Bluetooth on.
3. Press **Menu** , and touch **Rename phone**.
4. Enter the name for your device in the dialog box, and then touch **Rename**.

Connect a Bluetooth Headset or Car Kit

You can listen to music over a Bluetooth stereo headset, or have hands-free conversations using a compatible Bluetooth headset or car kit. It's the same procedure to set up stereo audio and hands-free devices.

To listen to music with your headset or car kit, the headset or car kit must support the A2DP Bluetooth profile.

1. Press **Home**  > **Menu** , and touch **System settings > Bluetooth**.
2. If the **Bluetooth** is not turned on, touch  to turn Bluetooth on.
3. Make sure that the headset is discoverable, so that your device can find the headset. Refer to the instructions that came with the headset to find out how to set it to discoverable mode.
4. Touch **SEARCH FOR DEVICES**. Your device will start to scan for Bluetooth devices within range.
5. When you see the name of your headset displayed in the Bluetooth devices section, touch the name. Your device then automatically tries to pair with the headset.
6. If automatic pairing fails, enter the passcode supplied with your headset.




The pairing and connection status is displayed below the hands-free headset or car kit name in the Bluetooth devices section. When the Bluetooth headset or car kit is connected to your device, the Bluetooth connected icon  is displayed in the status bar. Depending on the type of headset or car kit you have connected, you can then start using the headset or car kit to listen to music or make and receive phone calls.

Note: Due to different specifications and features of other Bluetooth compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.

Reconnect a Headset or Car Kit

When you have paired a headset with your device, you should be able to reconnect it automatically by turning on Bluetooth on your device and then turning on the headset. However, sometimes you



will need to reconnect manually, for example if you have been using your headset with another Bluetooth device.

1. Press **Home**  > **Menu** , and touch **System settings > Bluetooth**.
2. If Bluetooth is not turned on, touch  to turn Bluetooth on.
3. Make sure that the headset is discoverable.
4. Touch the headset's name in the Bluetooth devices section.
5. If prompted to enter a passcode, try 0000 or 1234, or consult the headset or car kit documentation to find the passcode.
6. If you still cannot reconnect to the headset or car kit, follow the instructions in [Disconnect or Unpair From a Bluetooth Device](#), and then follow the instructions in [Connect a Bluetooth Headset or Car Kit](#).

Disconnect or Unpair From a Bluetooth Device




You can manually disconnect or unpair from a Bluetooth device through the Bluetooth settings menu.

Disconnect a Bluetooth Device

1. Press **Home**  > **Menu** , and touch **System settings > Bluetooth**.
2. On the **PAIRED DEVICES** list, touch the device you want to disconnect.
3. Touch **OK**.

Unpair From a Bluetooth Device

You can make your device forget its pairing connection with another Bluetooth device. To connect to the other device again, you may need to enter or confirm a passcode again.







1. Press **Home**  > **Menu** , and touch **System settings > Bluetooth**.
2. On the **PAIRED DEVICES** list, touch  next to the device you want to unpair.
3. Touch **Unpair**.

Send and Receive Information Using Bluetooth

You can use Bluetooth to transfer information between your device and another Bluetooth-enabled device such as a phone or notebook computer. The first time you transfer information between your device and another device, you need to enter or confirm a security passcode. After that, your device and the other device are paired, and you will not need to exchange passcodes to transfer information in the future.

Send Information From Your Device to Another Device

You can send the following types of information, depending on the device you are sending to.

- Images and videos
 - Contacts information
1. Set the receiving device to discoverable mode. You may also need to set it to “Receive Beams” or “Receive Files.” Refer to the device’s documentation for instructions on receiving information over Bluetooth.
 2. On the device, open the application that contains the information or file you want to send. For example, if you want to send a photo, press **Home** , and touch  > **Gallery**.
 3. Follow the steps for the type of item you want to send:
 - Photo or video (in Camera): After capturing a photo, on the preview screen, touch . (You may need to slide the applications bar on the preview screen to find the  icon. See [Review Screen](#).)
 - Photos and videos (in Gallery): On the Albums tab, touch an album, and select the items you want to share. Touch , and then touch **Bluetooth**.
 - Contacts information: Touch the entry, and then press **Menu** , and touch **Share** > **Bluetooth**.
 4. If you are prompted to turn on Bluetooth, touch **Turn on**.
 5. Touch the name of the receiving device.
 6. If prompted, accept the connection on the receiving device, and enter the same passcode on both your device and the other device, or confirm the auto-generated passcode.
 7. On the receiving device, accept the file.







The location where the information is saved depends on the type of information and the receiving device:

- If you send a contact, it is normally added directly to the contact application on the receiving device.
- If you send another file type to a Windows computer, it is normally saved in the Bluetooth Exchange folder within your personal document folders.
 - On Windows XP, the path may be: C:\Documents and Settings\[your username]\My Documents\Bluetooth Exchange.
 - On Windows Vista, the path may be: C:\Users\[your username]\Documents.
- If you send a file to another device, the saved location may depend on the file type. For example, if you send an image file to another wireless phone, it may be saved in a folder named “Images.”

Receive Information From Another Device

Your device is capable of receiving a wide variety of file types with Bluetooth, including photos, videos, or contacts.

To receive files from another device:

1. Press **Home**  > **Menu** , and touch **System settings > Bluetooth**.
2. If the Bluetooth is not turned on, touch  to turn Bluetooth on.
3. Touch your device name to set it visible to other devices.
4. Press **Menu** , and touch **Visibility timeout**.
5. Select the time duration in which your device is visible to others.
6. On the sending device, send one or more files to your device. Refer to the device's documentation for instructions on sending information over Bluetooth.
7. If prompted, enter the same passcode on both your device and the other device, or confirm the auto-generated passcode. If a Bluetooth authorization request is displayed on your device, touch **Pair**.
8. When your device receives a file transfer request notification, the Bluetooth share (Incoming file) icon  is displayed on the status bar. Slide down the notifications panel, and then touch **Bluetooth share: Incoming file > Accept**.
9. When your device receives a file, the Bluetooth share (Received files) icon  is displayed on the status bar. To import a file immediately, slide down the notifications panel, and then touch **Bluetooth share: Received files**.

When you open a received file, what happens next depends on the file type:

- For a vCard contact file, if there are multiple vCard files on your storage card, you can choose to import one, several, or all of those contacts to your People list.

microSD Card

You can use an optional microSD™ (Secure Digital) or microSDHC™ memory card to store images, videos, music, documents, and voice data on your device. The microSD cards are sold separately and are not included with this device.

 
Note: In this guide, the name of microSD™ memory card and microSDHC™ memory card is abbreviated as microSD card, microSD, or memory card.

Note: Be sure to use only recommended microSD cards. Using non-recommended microSD cards could cause data loss and damage your device.


Insert the microSD Card

Remove the battery cover and battery to insert a compatible microSD card into your device.

1. Remove the battery cover. See [Set Up Your Phone](#).
2. Remove the battery by grasping the white pull-tab extending from the battery pack and pulling the battery out of its compartment.
3. Slide the card holder in the direction of arrow to unlock it (①).
4. Raise the card holder with your finger (②).
5. Insert a microSD card into the holder. Make sure to check the position of the gold terminals (③).

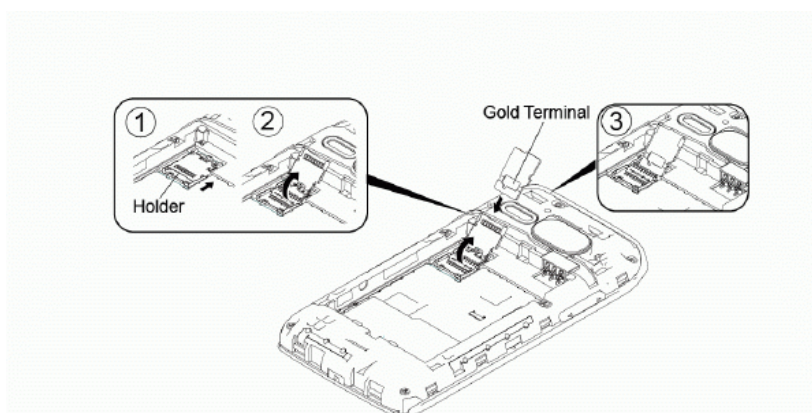

 6. Replace the card holder and gently press it, and then slide the holder in the direction of arrow to lock it (④ and ⑤).

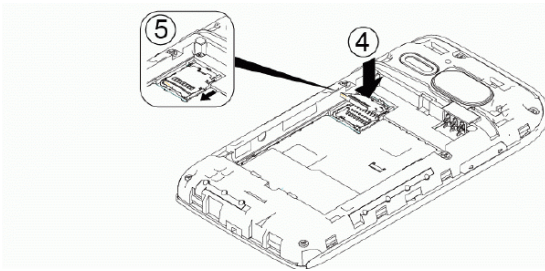


7. Place the battery back into its compartment and replace the battery cover.


Remove the microSD Card

Remove the battery cover and battery to remove a compatible microSD card into your device.

 1. Unmount the microSD card. See [Unmount the microSD Card](#).
2. Remove the battery cover. See [Set Up Your Phone](#).
3. Remove the battery by grasping the white pull-tab extending from the battery pack and pulling the battery out of its compartment.
4. Slide the card holder in the direction of arrow to unlock it (①).
5. Raise the card holder with your finger (②).
6. Gently pull out the card from the holder (③).

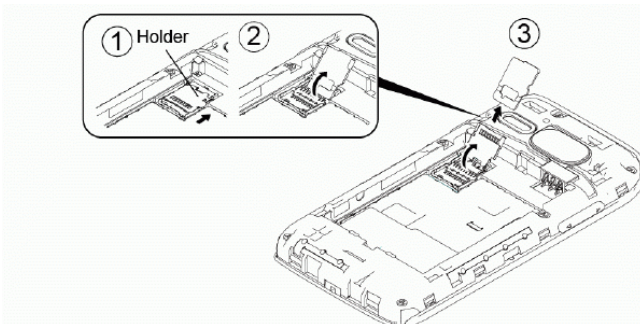

 7. Replace the card holder and gently press it, and then slide the holder in the direction of arrow to lock it (④ and ⑤).

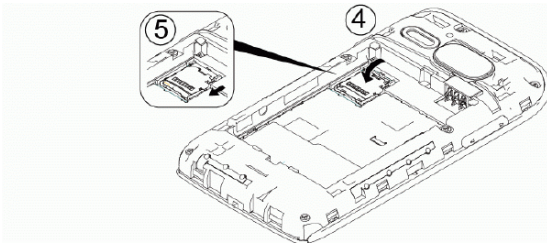



8. Place the battery back into its compartment and replace the battery cover.

Note: You can easily damage the microSD card by improper operation. Please be careful when inserting, removing, or handling the microSD card.

Note: Make sure your battery is fully charged before using the microSD card. Your data may become damaged or unusable if the battery runs out while using the microSD card.



View the microSD Card Memory

The Apps settings menu gives you access to your microSD card memory information.

1. With the microSD card inserted, press **Home**  > **Menu** , and touch **System settings** > **Apps**.
2. Touch the **ON SD CARD** tab. The total and available memory space will be displayed at the bottom of the screen.

Format the microSD Card



Formatting a microSD card permanently removes all files stored on the card.

1. Press **Home**  > **Menu** , and touch **System settings** > **Storage**.
2. Scroll down the screen, touch **Erase SD card** > **Erase SD card** > **Erase everything**.

Note: The formatting procedure erases all the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

Unmount the microSD Card

When you need to remove the microSD card, you must unmount the microSD card first to prevent corrupting the data stored on it or damaging the microSD card. Before removing the microSD card, close all running applications on your device and save any data first.


1. Press **Home**  > **Menu** , and touch **System settings > Storage**.
2. Touch **Unmount SD card > OK**.
3. Remove the microSD card. See [Remove the microSD Card](#).

Use the Device's microSD Card as a USB Drive

To transfer music, pictures, and other files from your computer to your device's microSD card, you need to set the device's microSD card as a USB drive.

1. Connect the device to your computer using the supplied USB cable.
2. The PC connection screen automatically opens.

– or –

If you see  on the status bar, slide it down to open the Notifications panel and touch the USB connection notification.

3. Touch **Mass Storage > Done > OK**. See [PC Connection](#).
4. On your computer, the connected device and the inserted microSD card are recognized as two removable disks. Navigate to these removable disks and open the one containing the data from the microSD card.
5. Do one of the following.
 - Copy files from the computer to the root folder on the device's storage card.
 - Copy files from the device's storage card to a folder on your computer or computer desktop.
6. After copying the files, unmount the removable disks (that is, the connected device) as required by your computer's operating system to safely remove your device, and disconnect the device from the computer.


Note: The device will not recognize the microSD card when it is connected to a computer as a disk drive. You will not be able to use some of the device's applications such as Camera or Play Music.

Use the Device's microSD Card as a Media Device

You can connect your device as a media device to your computer.

1. Connect the device to your computer using the supplied USB cable.
2. The PC connection screen automatically opens.

– or –

If you see  on the status bar, slide it down to open the Notifications panel and touch the USB connection notification.

3. Touch **Media Transfer > Done**. See [PC Connection](#).

Notes

See the following notes regarding this guide and your phone.

- Instructions to perform tasks in this guide may change depending on the software version on your phone.
- All screens in this guide are simulated. Actual displays may vary.
- Certain mobile phone features are dependent on the capabilities and settings of the network. Additionally certain features may not be activated by Sprint and/or Sprint's network settings may limit the feature's functionality. Always contact Sprint Prepaid about feature availability and functionality. All features, functionality and other specifications, as well as the information contained in this user guide are based upon the latest available information and are believed to be accurate at the time of issuing. Kyocera Communications, Inc. reserves the right to change or modify any information or specifications without notice or obligation.

Copyrights

© 2014 Sprint. Sprint and the logo are trademarks of Sprint. All other trademarks are the property of their respective owners. KYOCERA is a registered trademark of Kyocera Corporation.

Android, Google Play, Google Maps, Gmail, Google Talk, and YouTube are trademarks of Google Inc.

Swype and the Swype logos are registered trademarks or trademarks of Nuance Communications, Inc. © 2013 Nuance Communications, Inc. All rights reserved.

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kyocera Corporation is under license. Other trademarks and trade names are those of their respective owners.



microSD and microSDHC Logos are trademarks of SD-3C, LLC.



Index

3

3-Way Calling 43

A

About Phone 63
Access Gmail 75
Access People 66
Accessibility 62
Accessory Jack 9
Account
 Google Account 28
 Internet Calling 34
Account Management
 Sprint Prepaid 4
Accounts & Sync 56
Activation 3
Add a Corporate Account 77
Add a New People Entry 67
Add an Entry to Favorites 71
Add Email account 77
Add or Edit Information for a People Entry 69
Airplane Mode 49
Android Keyboard
 Settings 26
 User Dictionary 25
 Voice Input 25
Answer a Call 35
Applications 91
Apps 55
Assign a New Picture to a People Entry 70
Assign a Ringtone to a People Entry 71
Assign a Stored Picture to a People Entry 70
Assign a Vibration to a People Entry 71
Auto-rotate Screen 53

B

Back Key 9
Backup & Reset 60
Battery 54
 Charge 2
 Install 1
Bluetooth 140
 Car kit 141
 Device Name 140

Disconnect 142
Headset 141
Menu 140
Receive Information 144
Reconnect 141
Send and Receive Information 143
Send Information 143
Send Photos or Videos 125
Turn on or off 140
Unpair 142

Bluetooth Settings 48

Brightness 52

Browser 104

 Accessibility Settings 108

 Advanced Settings 109

 Bandwidth Management Settings 110

 Bookmarks 112

 General Settings 107

 Labs Settings 110

 Menu 105

 Navigate 105

 Offline Reading 111

 Open 104

 Privacy Settings 108

 Reset 111

 Search Engine 110

 Security Settings 108

 Select Text 107

 Set the Home Page 111

 Website Settings 111

C

Calculator 136

Calendar 128

 Add an Event 128

 Erase Events 132

 Event Alerts 129

 Event Reminders 130

 Invite Guests 129

 Show or Hide 132

 Synchronize 133

 View Events 130

Call Log 46

 Clear 46

Call Waiting 43

- Caller ID 42
- Camcorder 117
 - Record 118
 - Settings 118
 - Share Videos 124
 - Viewfinder 117
 - Watch 121
- Camera 114
 - Close 116
 - Lens 9
 - Open 114
 - Review Screen 116
 - Settings 118
 - Share Photos 124
 - Take a Picture 116
 - Viewfinder 114
 - Zoom 121
- Camera Basics 114
- Charge Battery 2
- Charger/Accessory Jack 9
- Clock & Alarm 133
 - Change Alarm Settings 135
 - Open 133
 - Set an Alarm 134
- Compose and Send Email 79
- Compose Text Messages 82
- Copyrights 152
- Create a Google Wallet Account 92
- Create Another Email Account 78
- Credential Storage 60
- Customize People List 72

D

- Data Connection
 - Status and Indicators 104
- Data Services 103
- Data Usage 48
- Date & Time 61
- Delete a People Entry 72
- Delete an Email Account 82
- Developer Options 63
- Device Administration 59
- Device Layout (illustration) 8
- Device Settings 50
- Display 52
- Display Options 73
- Drag 11

E

- Eco Mode 138
- Edit a People Entry 69
- Email 77
 - Send Photos or Videos 125
- Email Account Settings 81
- Email General Settings 80
- Emergency Call 33
- Enhanced 9-1-1 (E 9-1-1) 33
- Enter Text 16
 - Speaking 20, 25
- Entertainment 91

F

- Factory Data Reset 61
- Favorites Tray 13
- Find and Install an Application 91
- Folder 14
- Font Size 53

G

- Gallery 119
 - Close 122
 - Open 119
 - View 120
 - Watch a Video 121
- Gestures 11
- Get Help with Google Play 94
- Get Started with People 66
- Gmail 75
 - Send Photos or Videos 125
- Google
 - Hangouts 89
- Google Account 28
 - Add 29
 - Create 28
 - Settings 30
 - Sign In 29
- Google Hangouts 89
- Google Play 91
- Google+ 126

H

- Hangouts 89
- Home Key 9
- Home Screen 12
 - Add Items 13

- Customize 13
 - Move or remove items 13
 - Overview 12
- I**
- Incoming Calls
 - Answer 35
 - Reject 36
 - Internet Calling 34
- K**
- Key Backlight 54
 - Key Functions 8
 - Keyboard
 - Android 22
 - Swype 16
- L**
- Language & Input 60
 - Location
 - Settings 56
- M**
- MagniFont 53
 - Manage Your Email Inbox 80
 - Managing Message Conversations 85
 - Menu Key 9
 - Messaging 75
 - Send Photos or Videos 125
 - microSD Card 146
 - Format 148
 - Insert 146
 - Memory Information 148
 - Remove 147
 - Unmount 148
 - Use as a Media Device 149
 - Use as a USB Drive 149
 - Mobile ID 6
 - Install 6
 - Switch 7
 - Mobile Networks 50
 - Music
 - Play Music 97
 - Mute
 - Ringtone 36
 - My Location 56
- N**
- Navigation 94
 - Google Maps 94
 - New Messages Notification 85
 - Notification Icons 15
- O**
- Open an Installed Application 93
 - Other Call Settings 43
- P**
- Passwords 4
 - PC Connection 55
 - People 66
 - People List Options 67
 - Personal Settings 56
 - Phone 31
 - Phone Call Options 42
 - Phone Calls
 - From People 32
 - From Recent Calls 32
 - From Text Messages 32
 - In-Call Options 45
 - Make Calls 31
 - Plus Code Dialing 34
 - Receive 35
 - Using Internet Calling 34
 - Using the Phone Dialpad 31
 - With Pauses 33
 - Picasa 126
 - Pictures 114
 - Crop 124
 - Edit 122
 - Options Menu 122
 - Rotate 123
 - Share 124
 - Take 116
 - Pinch and Spread 11
 - PINs and Passwords 4
 - Play Music 97
 - Back Up Downloaded Music Files 101
 - Library 97
 - Now Playing Screen 98
 - Play 97
 - Playlist 100
 - Queue 99
 - Search for Music 99
 - Power Button 9

Power Off 10
Power On 10
Proximity Sensor 9

R

Read and Reply to Gmail Messages 76
Recent Calls
 Options 46
 View 46
Reject a Call 36
Reject an Incoming Call 36
Reload Account 5
Request a Refund 93
Reset Phone 61
Rotate 11

S

Save a Phone Number 69
Save and Resume a Draft Message 85
Screen Lock
 With Password 58
 With Pattern 57
 With PIN 58
Screen Proximity Safety 54
Screen Timeout 53
Security 57
Select People List 72
Send a Gmail Message 76
Send a Text Message 36
Send an Entry's Call to Voicemail 72
Send Multimedia Message 83
Set Up
 Visual Voicemail 5, 36
 Voicemail (Traditional) 5, 41
 Your Phone 1
Settings 48
 Android Keyboard 26
 Swype 21
Share a People Entry 74
Silent Mode 51
Sleep 53
Slide or Flick 11
Social Networking Accounts 88
Sound 50
Speaker 9
Sprint Account Information 4
Sprint Prepaid
 Account management 4

PINS and Passwords 4
Reload account 5

Status Bar 14
Status Icons 14
Storage
 Settings 54
Swype 16
 Settings 21
 User Dictionary 20
 Voice Input 20
Synchronize People Entries 73
System Settings 61
 Activate This Device 63
 System Update 63
System Update 63

T

Text and MMS Options 87
Text Entry 16
 Copy 26
 Paste 26
 Speaking 20, 25
Text Messaging and MMS 82
Tools 128
Touch 11
Touch and Hold 11
Touchscreen
 Keyboard 16
 Navigation 11
 Turn Off 10
 Turn On 10
Trademarks 152
TTY mode 44
Turn Device Off 10
Turn Device On 10
Turn Your Device On and Off 9
Turn Your Screen On and Off 10

U

Uninstall an Application 94
User Dictionary
 Android Keyboard 25
 Swype 20

V

Video 117
 Record 118
 Settings 118

- Share 124
- Viewfinder 117
- Watch 121
- View and Reply to Email 79
- Visual Voicemail 36
 - Change Greeting 40
 - Compose a Message 39
 - Edit the Display Name 40
 - Listen to Multiple Messages 39
 - Password 5, 36
 - Retrieve Messages 42
 - Review 37
 - Set Up 5, 36
 - Settings 39
- Voice Input
 - Android Keyboard 25
 - Swype 20
- Voice Service 136
 - Automatic Speech Recognition (ASR) 136
 - Text-to-speech Settings 137
 - Voice Dialer 136
 - Voice Search 138
- Voicemail (Traditional) 41
 - Notification 41
 - Password 5, 41
 - Retrieve Messages 42
 - Set Up 5, 41
- Volume 50
 - Button 9

W

- Wallpaper 13, 53
- Web 102
- Wi-Fi 102
 - Check Status 103
 - Connect to a Different Network 103
 - Turn On and Connect to a Network 102
- Wi-Fi Settings 48
- Wireless & Network Settings 48
- Working with Photos 122

Y

- Your Phone at a Glance 1
- YouTube 88, 127