

## ***User Guide***



***[www.sprint.com](http://www.sprint.com)***

*©2011 Sprint. SPRINT and the logo are trademarks of Sprint.  
KYOCERA is a registered trademark of Kyocera Corporation.  
Other marks are the property of their respective owners.*



**Consejo:** Para encontrar una guía para usuarios en español, por favor visita a [www.sprint.com](http://www.sprint.com) y haz clic en **Support > Devices**.

---

To find a User Guide in Spanish, please visit [www.sprint.com](http://www.sprint.com) and click **Support > Devices**.

**Important Privacy Message** – Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

# Table of Contents

*Tip:* Looking for something? If you don't see it in the headings listed here, try the Index on page 183.

Introduction .....	i
Your Device's Menu .....	i
Section 1: Getting Started .....	1
1A. Setting Up Service .....	2
Setting Up Your Device .....	2
Activating Your Device .....	3
Setting Up Your Voicemail .....	4
Sprint Account Passwords .....	5
Getting Help .....	5
Section 2: Your Device .....	7
2A. Device Basics .....	8
Your Device .....	8
Viewing the Display Screen .....	10
Turning Your Device On and Off .....	12
Battery and Charger .....	13
Opening and Closing the Device .....	17

Navigating Through the Onscreen Menus ....	18
Home Screen Overview .....	21
Your Device's Screen Modes .....	27
Making and Answering Calls .....	33
Displaying Your Phone Number .....	39
Entering Text Using the Onscreen Keyboards ..	39
Creating a Google Account .....	48
2B. Settings .....	49
Sound Settings .....	49
Display Settings .....	52
Location Settings .....	53
Adding and Synchronizing Accounts .....	54
Call Settings .....	58
Airplane Mode .....	59
TTY Use With Sprint Service .....	60
Using the Hearing Device Compatibility Function .....	61
Security Settings .....	61
PC Connection Settings .....	64
Application Settings .....	65
Privacy Settings .....	66
Eco Mode .....	67

<b>2C. Call Log</b>	<b>68</b>
Viewing the Call Log	68
Call Log Options	69
Making a Call From the Call Log	69
Saving a Number From the Call Log	69
Editing a Call Log Number	70
Erasing the Call Log	70
<b>2D. Contacts</b>	<b>71</b>
Displaying the Contacts List	71
Adding a New Contacts Entry	72
Contacts Entry Options	73
Editing a Contacts Entry	73
Adding a Number to a Contacts Entry	73
Editing a Contacts Entry's Number	74
Assigning a Ringer Type for an Entry	74
Assigning a Picture to an Entry	74
Finding Contacts Entries	75
Deleting Entries	75
Adding Entries to Your Favorites	75
Import and Export Contacts	75
Sending Contacts	75
Synchronizing and Displaying Contacts	76

Searching the Global Address List	77
<b>2E. Calendar &amp; Tools</b>	<b>78</b>
Calendar	78
Clock	82
Calculator	85
Document Viewer	85
Updating Your Device	86
<b>2F. Voice Services</b>	<b>87</b>
Automatic Speech Recognition (ASR)	87
Voice Search	89
Text-to-Speech	89
<b>2G. microSD Card</b>	<b>90</b>
Your Device's microSD Card and Adapter	90
microSD Card Settings	92
Use the Device's microSD Card as a USB Drive	93
Important Connection Information	94
<b>2H. Camera</b>	<b>95</b>
Taking Pictures	95
Recording Videos	100
Opening Gallery	102

<b>2I. Bluetooth</b>	<b>104</b>
Turning Bluetooth On and Off	104
Using the Bluetooth Settings Menu	105
Pairing Bluetooth Devices	105
Sending Items via Bluetooth	107
<b>Section 3: Sprint Service</b>	<b>109</b>
<b>3A. Sprint Service: The Basics</b>	<b>110</b>
Voicemail	110
Messaging	112
Caller ID	116
Call Waiting	116
Making a 3-Way Call	117
Call Forwarding	117
Roaming	118
<b>3B. Web and Data Services</b>	<b>121</b>
Getting Started With Data Services	121
Wi-Fi	129
Sprint Hotspot	131
Email	133
Gmail	136
Corporate Email	139

Removing an Account	141
Using Google Talk	142
Using Android Market	145
Applications	148
Data Services FAQs	150
<b>3C. Entertainment: TV and Music</b>	<b>152</b>
TV	152
Music	155
VueQue	158
<b>3D. GPS Navigation</b>	<b>160</b>
GPS Services	160
TeleNav GPS Navigator	160
Google Maps	162
Places	165
Google Navigation	165
<b>Section 4: Safety and Warranty Information</b>	<b>167</b>
<b>4A. Important Safety Information</b>	<b>168</b>
General Precautions	168
Maintaining Safe Use of and Access to Your Device	169

Using Your Device With a Hearing Device . . .	170
Caring for the Battery . . . . .	172
Radio Frequency (RF) Energy . . . . .	172
Owner's Record . . . . .	175
User Guide Proprietary Notice . . . . .	175
<b>4B. Manufacturer's Warranty . . . . .</b>	<b>176</b>
Manufacturer's Warranty . . . . .	176
<b>4C. End User License Agreement . . . . .</b>	<b>179</b>
End User License Agreement . . . . .	179
<b>Index. . . . .</b>	<b>183</b>

## Introduction

---

This **User Guide** introduces you to Sprint® service and all the features of your new device. It's divided into four sections:



- ◆ Section 1: Getting Started
- ◆ Section 2: Your Device
- ◆ Section 3: Sprint Service
- ◆ Section 4: Safety and Warranty Information







**WARNING:** Please refer to the **Important Safety Information** section on page 168 to learn about information that will help you safely use your device. Failure to read and follow the Important Safety Information in this guide may result in serious bodily injury, death, or property damage.

## Your Device's Menu

---

The following table outlines your device's main menu structure. For more information about using your device's menus, see "Navigating Through the Onscreen Menus" on page 18.

Pressing **Home**  provides access to your device's Main Home screen. From the Home screen, press **Menu**  to open the following menus:

- **Add** ()
- **Manage apps** ()
- **Wallpaper** ()
- **Search** ()
- **Notifications** ()
- **Settings** ()

Tap these onscreen buttons to view additional options and features.

<b>Add</b>	
<b>1: Shortcuts</b>	
1: Applications 3: Contact 5: Direct message 7: Latitude 9: Settings	2: Bookmark 4: Direct dial 6: Directions & Navigation 8: Music playlist 10: Tablet Mode Extension
<b>2: Widgets</b>	
<b>3: Folders</b>	
1: New folder 3: Bluetooth received 5: Starred contacts	2: All contacts 4: Contacts with phone numbers
<b>4: Wallpapers</b>	
1: Gallery 3: Wallpapers	2: Live wallpapers
<b>Manage apps</b>	
<b>Wallpaper</b>	
<b>1: Gallery</b>	
<b>2: Live wallpapers</b>	
<b>3: Wallpapers</b>	
<b>Search</b>	

<b>Notifications</b>	
<b>Settings</b>	
<b>1: Wireless &amp; networks</b>	
<b>1: Airplane mode (On/Off)</b>	
<b>2: Wi-Fi (On/Off)</b>	
<b>3: Wi-Fi settings</b>	
1: Wi-Fi (On/Off) 3: Add Wi-Fi network	2: Network notification (On/Off)
<b>4: Bluetooth (On/Off)</b>	
<b>5: Bluetooth settings</b>	
1: Bluetooth (On/Off) 3: Discoverable (On/Off)	2: Device name 4: Scan for devices
<b>6: Tethering &amp; portable hotspot</b>	
1: Tethered mode (On/Off) 2: Portable Wi-Fi hotspot (On/Off) 3: Portable Wi-Fi hotspot settings 4: Help	
<b>7: Mobile networks</b>	
1: Data enabled (On/Off) 2: Roaming mode 3: Domestic voice (On/Off) 4: Domestic data (On/Off) 5: International voice (On/Off) 6: International data (On/Off) 7: Roaming guards	



2: Call settings	
1: Voicemail service	
2: Voicemail settings	
3: North American dialing (On/Off)	
4: International dialing	
5: TTY mode	
1: TTY Off 3: TTY HCO	2: TTY Full 4: TTY VCO
6: Accounts	
7: Use Internet calling	
1: For all calls 3: Ask for each call	2: Only for Internet calls
3: Sound	
1: Silent mode (On/Off)	
2: Vibrate	
1: Always 3: Only in Silent mode	2: Never 4: Only when not in Silent mode
3: Volume	
4: Phone ringtone	
5: Notification ringtone	

6: Audible touch tones (On/Off)
7: Audible selection (On/Off)
8: Screen lock sounds (On/Off)
9: Haptic feedback (On/Off)
10: Hearing Aid (On/Off)
<b>4: Display</b>
1: Brightness
2: Auto-rotate screen (On/Off)
3: Animation
4: Screen timeout
5: Auto backlight (On/Off)
<b>5: Location &amp; security</b>
1: Use wireless networks (On/Off)
2: Use GPS satellites (On/Off)
3: Set up screen lock
4: Visible passwords (On/Off)
5: Select device administrators
6: Use secure credentials (On/Off)

7: Install from SD card
8: Set password
9: Clear storage
6: PC connection
1: Default connection type
1: Charging only      2: Mass Storage 3: Tethered mode
2: Ask me (On/Off)
7: Applications
1: Unknown sources (On/Off)
2: Manage applications
3: Running services
4: Storage use
5: Battery use
6: Development
1: USB debugging (On/Off)   2: Stay awake (On/Off) 3: Allow mock locations (On/Off)

8: Accounts & sync
1: Background data (On/Off)
2: Auto-sync (On/Off)
9: Privacy
1: Back up my data (On/Off)
2: Automatic restore (On/Off)
3: Factory data reset
10: Storage
1: Total space
2: Available space
3: Mount SD card / Unmount SD card
4: Erase SD card
5: Available space
11: Language & keyboard
1: Select language
1: English      2: Español

<b>2: User dictionary</b>	
<b>3: Swype (settings)</b>	
1: Language	2: Audio feedback (On/Off)
3: Vibrate on keypress (On/Off)	4: Enable tip indicator (On/Off)
5: Word suggestion	6: Auto-spacing (On/Off)
7: Auto-capitalization (On/Off)	
8: Show complete trace (On/Off)	
9: Speed vs. accuracy	10: Swype help
11: Tutorial	12: Version
<b>4: Android keyboard (settings)</b>	
1: Vibrate on keypress (On/Off)	
2: Sound on keypress (On/Off)	
3: Popup on keypress(On/Off)	
4: Touch to correct words(On/Off)	
5: Auto-capitalization (On/Off)	
6: Show settings key	
7: Voice input	
8: Input languages	
9: Quick fixes (On/Off)	
10: Show suggestions (On/Off)	
11: Auto-complete (On/Off)	
<b>12: Voice input &amp; output</b>	
<b>1: Voice recognizer settings</b>	
1: Language	2: SafeSearch
3: Block offensive words (On/Off)	
4: Personalized recognition (On/Off)	
5: Google Account dashboard	

<b>2: Text-to-speech settings</b>	
1: Listen to an example	2: Always use my settings (On/Off)
3: Default Engine	4: Install voice data
5: Speech rate	6: Language
7: Pico TTS	
<b>13: Accessibility</b>	
<b>1: Accessibility (On/Off)</b>	
<b>2: Power button ends call (On/Off)</b>	
<b>14: Date &amp; time</b>	
<b>1: Automatic (On/Off)</b>	
<b>2: Set date</b>	
<b>3: Select time zone</b>	
<b>4: Set time</b>	
<b>5: Use 24-hour format (On/Off)</b>	
<b>6: Select date format</b>	
<b>15: About phone</b>	
<b>1: Status</b>	

1: Battery status	2: Battery level
3: My phone number	4: MSID
5: ESN	6: Network
7: Signal strength	8: Mobile network type
9: MEID	10: Service state
11: Roaming	12: Mobile network state
13: SID	14: Wi-Fi MAC address
15: Bluetooth address	16: Up time
<b>2: Battery use</b>	
<b>3: Legal information</b>	
1: Open source licenses 2: Google legal	
<b>4: Model number</b>	
<b>5: Software Version</b>	
<b>6: Hardware</b>	
<b>7: PRL Version</b>	
<b>8: Android version</b>	
<b>9: Baseband version</b>	
<b>10: Kernel version</b>	
<b>11: Build number</b>	

<b>16: System Update</b>	
<b>1: Update Android</b>	
1: Check Now	2: Scheduled Check (On/Off)
<b>2: Update Kyocera software</b>	
<b>3: Update Profile</b>	
<b>4: Update PRL</b>	

*Section 1*  
***Getting Started***



 
## 1A. Setting Up Service

- ◆ Setting Up Your Device (page 2)
- ◆ Activating Your Device (page 3)
- ◆ Setting Up Your Voicemail (page 4)
- ◆ Sprint Account Passwords (page 5)
- ◆ Getting Help (page 5)

 
### Setting Up Your Device

#### 1. Install the battery.

 
- Firmly press your thumbs against the battery cover and push upward to remove it.

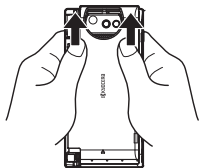


 
- Insert the top end of the battery into the opening on the back of the device, making sure the connectors align. Gently press down to secure the battery.

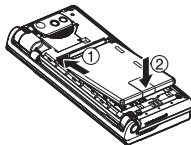


- Position the back cover over the battery compartment, making sure the notches on the top align and slide the cover downward with your thumbs until the cover is seated.

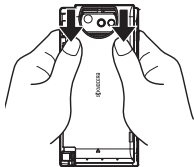




2. Press and hold the power button  to turn on your device.



- If your device is activated, it will search for Sprint service and show the Lock screen. To unlock the screen, flick the Unlock icon .

- If your device is not yet activated, see the following section “Activating Your Device” for more information.

### 3. Make your first call.

- Press **Home**  to access the Home screen and tap the Phone icon  to access the onscreen phone keypad.
- Use your phone keypad to enter a phone number.
- Tap .

*Note:* You should fully charge your battery before setting up your device. See “Charging the Internal Battery” on page 14 for details.

## Activating Your Device

- **If you purchased your device at a Sprint Store**, it is probably activated and ready to use.
- **If you received your device in the mail, and it is for a new Sprint account or a new line of service**, your device is designed to activate automatically when you first turn it on. To confirm your activation, make a phone call.
- **If you received your device in the mail and it is going to be activated on an existing number on your account (you’re swapping phones)**, you can activate on your computer online or directly on your device.

Activating on your computer:

- Go to [www.sprint.com/activate](http://www.sprint.com/activate) and follow the instructions.

Activating on your device:

*Note:* For security reasons, you will need your Sprint phone number and PIN to use this activation method.

1. Turn on your new device. (Make sure the old one is turned off.) Your device will automatically attempt Hands-Free Activation.

*Note:* Your device will need to complete one hands-free activation attempt before you can continue.

2. Tap **Activate** to override auto-activation and start the manual activation wizard.




*Note:* If you don't override Hands-Free Activation, your device will attempt to auto-activate five times. Wait for **Retry** to appear on your screen. Tap **Retry** and then tap **Activate**.

3. Follow the onscreen prompts to complete the activation process.
4. After you have completed the wizard, make a phone call to confirm your activation.

If your device is still not activated, contact Sprint Customer Service at **1-888-211-4727** for assistance.

## Setting Up Your Voicemail

Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off. You should set up your Sprint Voicemail and personal greeting as soon as your device is activated. Always use a password to protect against unauthorized access.

1. Press **Home**  and tap  to access the onscreen phone keypad.
2. Tap and hold .
3. Follow the system prompts to:
  - Create your password.
  - Record your name announcement.
  - Record your greeting.

### *Note:* **Voicemail Password**

Sprint strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your device is able to access your voicemail messages.

For more information about using your voicemail, see “Voicemail” on page 110.



## Sprint Account Passwords

---

As a Sprint customer, you enjoy unlimited access to your personal account information, your voicemail account, and your data services account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

### Account User Name and Password

If you are the account owner, you will create an account user name and password when you sign on to [www.sprint.com](http://www.sprint.com). (Click **Sign in** and then click **Sign up now!** to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at [www.sprint.com](http://www.sprint.com).

### Voicemail Password

You'll create your voicemail password when you set up your voicemail. See "Setting Up Your Voicemail" on page 4 for more information on your voicemail password.

### Data Services Password

With your Sprint device, you may elect to set up an optional data services password to control access and authorize Premium Service purchases.

For more information, or to change your passwords, sign on to [www.sprint.com](http://www.sprint.com) or call Sprint Customer Service at **1-888-211-4727**.

## Getting Help










---

### Managing Your Account

Online: [www.sprint.com](http://www.sprint.com)

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint phones.
- View available Sprint service plans and options.
- Learn more about data services and other products like games, ringers, screen savers, and more.

## From Your Sprint Phone

- Tap    to check minute usage and account balance.
- Tap    to make a payment.
- Tap    to access the Sprint Zone, where you can check your account, update your device, watch video tutorials, or contact Sprint Customer Service.

## From Any Other Phone

- Sprint Customer Service: **1-888-211-4727**.
- Business Customer Service: **1-800-927-2199**.

## *Sprint 411*

Sprint 411 gives you access to a variety of services and information, including residential, business, and government listings; movie listings or showtimes; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

► Tap    .

## *Sprint Operator Services*

Sprint Operator Services provides assistance when you place collect calls or when you place calls billed to a local telephone calling card or third party.

► Tap  .

For more information or to see the latest in products and services, visit us online at [www.sprint.com](http://www.sprint.com).

*Section 2*  
***Your Device***

 


 
## 2A. Device Basics

- ◆ Your Device (page 8)
- ◆ Viewing the Display Screen (page 10)
- ◆ Turning Your Device On and Off (page 12)
- ◆ Battery and Charger (page 13)
- ◆ Navigating Through the Onscreen Menus (page 18)
- ◆ Home Screen Overview (page 21)
- ◆ Your Device's Screen Modes (page 27)
- ◆ Making and Answering Calls (page 33)
- ◆ Displaying Your Phone Number (page 39)
- ◆ Entering Text Using the Onscreen Keyboards (page 39)
- ◆ Creating a Google Account (page 48)

**Tip: Device Software Upgrades** – Updates to your device's software may become available from time to time. Sprint will automatically upload critical updates to your device. You can also use the menu to check for and download updates. Press **Home** (🏠) > **Menu** (☰), and then tap **Settings** (⚙️) > **System Update** > **Update Android**, **Update Kyocera software**, **Update Profile**, or **Update PRL** to search for and download available updates.

### Your Device

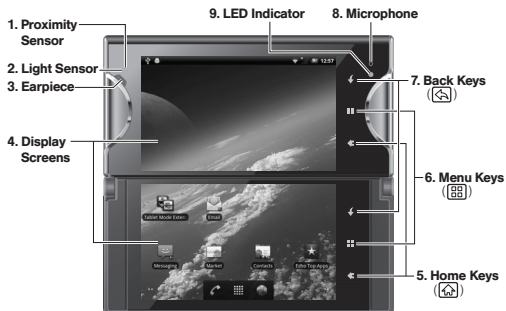

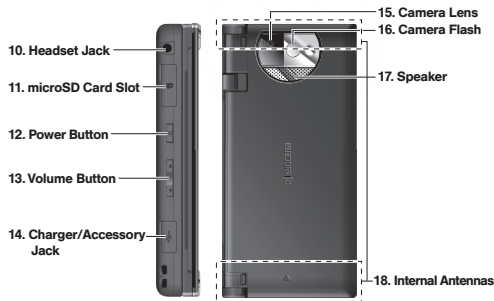


## Key Functions

1. **Proximity Sensor** automatically decreases the display brightness when you hold the device near your face. This prevents you from unintentionally activating device functions during a call.
2. **Light Sensor** automatically brightens the display when you are in sunlight or a bright room and dims it in darker places.
3. **Earpiece** lets you hear the caller and automated prompts.

4. **Display Screens** (upper and lower) display all the information needed to operate your device. Use finger gestures to navigate and interact with items on the screen.
5. **Home Keys** (🏠) return you to the Home screen. Tap and hold to show the recently used applications.
6. **Menu Keys** (☰) let you open the menus of the current screen or application.
7. **Back Keys** (⏮) return you to the previous screen or closes the dialog box.
8. **Microphone** allows other callers to hear you clearly when you are speaking to them.
9. **LED Indicator** shows your device's battery status. It also flashes for incoming calls or pending notifications.
10. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations. CAUTION! Inserting an accessory into the incorrect jack may damage the device.
11. **microSD Card Slot** allows you to insert a microSD card to support external memory.

*Note:* Your device comes with the microSD card preinstalled.










12. **Power Button** () lets you turn the device on or off, or turn the screen backlight on or off. This button can be configured to end a call. ( See “Ending Calls Using the Power Button” on page 34. )
13. **Volume Button** allows you to adjust the ringer and media volumes when you are not on a call, or the voice volume during a call.
14. **Charger/Accessory Jack** allows you to connect the device charger to charge the battery or a micro-USB cable (included) to transfer files to and from a computer. CAUTION! Inserting an accessory into the incorrect jack may damage the device.
15. **Camera Lens**, as part of the built-in camera, lets you take pictures and videos.
16. **Camera Flash** allows you to take pictures in low light conditions.
17. **Speaker** lets you hear the different ringers and sounds. It also lets you hear the caller’s voice in speakerphone mode.
18. **Internal Antennas** facilitate reception and transmission. To maximize performance, do not obstruct while using the device.

## Viewing the Display Screen
















Your device’s display screen provides information about your device’s status and options.

### Status Bar Icons






 



The following list identifies the symbols you may see on the status bar at the top of your device’s display screen:

<b>Status Bar Icons</b>	
	Your device’s current signal strength. (More bars = stronger signal.)
	Your device cannot find a usable signal.
	Your device is “roaming” off the Nationwide Sprint Network.
	Sprint data service is available. When active, the icon is animated.
	A Wi-Fi connection is available.
	An open Wi-Fi network is available.
	Bluetooth is enabled.
	The Bluetooth data connection is active.
	A voice call is in progress.

**Status Bar Icons**

	A chat is in progress.
	The battery is completely discharged.
	The battery is fully charged. (The less blue showing, the less charge there is remaining.)
	The battery is charging.
	An error has occurred.
	You have missed voice calls.
	A download is in progress.
	An upload is in progress.
	Phone is connected via USB cable.
	Phone is sharing its data connection via USB (USB tethering)
	GPS is active.
	Silent mode is active.
	Silent mode and Vibrate mode are active.
	Airplane mode is active.
	Speakerphone is on.

**Status Bar Icons**

	TTY mode is enabled.
	You have new voicemail messages. The total number of unread messages will appear above the icon.
	You have new Text/Multimedia messages.
	You have new Email messages.
	You have new Gmail™ messages.
	You have calendar notifications.
	An alarm is set.
	Alarm is in snooze mode.
	Eco mode is on.

## Turning Your Device On and Off

### Turning Your Device On

 
- ▶ Press and hold  for approximately two seconds.

Once your device is on and finds a signal, it automatically enters standby mode – the device's idle state. At this point, you are ready to begin making and receiving calls.

If your device is unable to find a signal after five minutes of searching, a Power Save feature is activated and your device searches for a signal periodically without your intervention. When a signal is found, your device automatically returns to standby mode.

*Tip:* The Power Save feature conserves your battery power when you are in an area where there is no signal.



### Turning Your Device Off

1. Press and hold  until you see the **Phone options** window.
2. Tap **Power off** > **OK** to turn the device off.



### Turning Screen Lock On or Off

 To save your battery or prevent accidental touches, your device automatically turns off the display screen and lock the screen after the time specified for the screen timeout. (See “Changing the Backlight Time Length” on page 52 for details.)

To unlock the display screen:

1. Press  to wake up the screen.
2. From the lock screen, flick .

To lock the display screen manually:

- ▶ Press . (Once your backlight turns off, your device locks.)
  - To wake up the screen, just press  again.

*Note:* During a call, the screen will automatically turn off when no operation is performed for about 15 seconds (regardless of the screen timeout setting).

If you've locked your screen, you must draw an unlock pattern or enter a PIN or password to unlock it. See “Setting the Screen Lock” on page 61.



## Battery and Charger

**WARNING:** Use only Sprint-approved or Kyocera-approved batteries and chargers with your device. The failure to use a Sprint-approved or Kyocera-approved battery and charger may increase the risk that your device will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.

Sprint-approved or Kyocera-approved batteries and accessories can be found at Sprint Stores or through Kyocera; or call 1-866-866-7509 to order. They are also available at [www.sprint.com](http://www.sprint.com).

### Battery Capacity

Your device is equipped with two Lithium Ion (Li-Ion) batteries. It allows you to recharge your battery before it is fully drained.

When the battery level drops to 15%, a pop-up window warns you that the battery is low. When the battery level drops to 0%, the device shuts down.

**Note:** Long backlight settings, searching for service, vibrate mode, browser use, and other variables may reduce the battery's talk and standby times.

**Tip:** Watch your device's battery level indicator and charge the battery before it runs out of power.

### Installing the Battery

- See “Setting Up Your Device” on page 2.

### Removing the Battery

1. Make sure the device is off so that you do not lose any stored numbers or messages.
2. Firmly press your thumbs against the battery cover and push upward to remove it.
3. Grasp the white pull-tab extending from the battery pack and pull the battery out of its compartment.

 
**WARNING:** Do not handle a damaged or leaking Li-Ion battery as you can be burned.

## Charging the Internal Battery

Keeping track of your battery's charge is important. If your battery level becomes too low, your device automatically turns off, and you will lose any information you were just working on.

Always use a Sprint-approved or Kyocera-approved battery charger, desktop charger, travel charger, or vehicle power adapter to charge your battery.

1. Plug the smaller end of the micro-USB cable into the device's charger/accessory jack.
  2. Plug the other end of the USB cable into the wall/USB charger, and then plug the wall/USB charger into an electrical outlet.
- A **solid red indicator light** means the battery is charging.
  - A **flashing red indicator light** means the battery is low.
  - A **solid green indicator light** means the battery is fully charged.
  - A **flashing green indicator light** means you have new pending notifications.

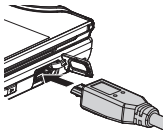

**WARNING:** Do not remove the battery while it is charging. Always remove the charger from the electrical outlet first before removing the micro-USB cable from the device.


With the Sprint-approved Li-Ion battery, you can recharge the battery before it becomes completely run down. With the use of the included battery charger, you can charge a spare battery without its having to be inserted in the device. See "Using the External Battery Charger" below.

## Using the External Battery Charger

 Your device comes with a spare battery and external battery charger. You can use your device with one battery while the other one charges, assuring you will have access to your device where you need it and when you need it.


To install a battery in the external charger:

1. Holding the charger with the printed logo right side up, slide the cover to the right until it locks into open position.
2. Insert the battery contacts end first, making sure they align with the charger's contact points.
3. Slide the cover to the left until you hear a click.



To charge the battery in the external charger:

 1. Slide the switch on the charger to the **DC IN 5V** position.
2. Plug the smaller end of the micro-USB cable into the micro-USB jack on the charger.
3. Plug the other end of the micro-USB cable into the wall/USB charger, and then plug the wall/USB charger into an electrical outlet.
  - The red lamp light is on while the battery is charging.
  - The red lamp light goes off when the battery is fully charged.

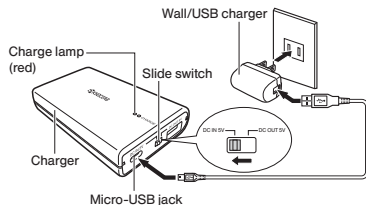


**Note:** If the charge lamp starts flashing red, you may have a high battery temperature, battery problem, wall/USB charger problem, or battery charger problem.

To use the battery charger as an external battery:

1. Slide the switch on the charger to the **DC OUT 5V** position. (The charge lamp turns green.)

**Note:** If the green charge lamp does not light up, the installed battery is not sufficiently charged. Make sure your battery is fully charged prior to use.

 2. Plug the smaller end of the micro-USB cable into the device's charger/accessory jack and the other end into the USB jack on the charger.
  - The green lamp on the charger remains on while charging the battery. (The green lamp will not go off until the external battery completely discharges.)
  - The LED indicator on the device will light red while charging and it will change to green when fully charged.

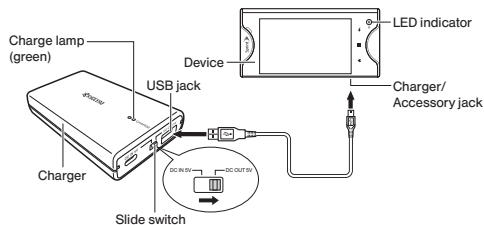

3. When you have finished charging, slide the switch on the charger to the **DC IN 5V** position to conserve energy.

**Note:** After use, make sure you slide the switch to the **DC IN 5V** position to prevent battery drain.

It will take much longer to charge the device using the battery charger than with the AC charger. If you need the use of your device right away, replace the original battery with a fully charged battery when your primary battery becomes discharged.

**Tip:** You can also charge your battery by plugging the USB cable into your computer. Simply plug the smaller end of the micro-USB cable into the micro-USB jack on the charger and plug the other end into a free USB port on your desktop or laptop computer. Charging through USB will take twice the time as the wall charger. Charging from a computer will take about twice as long as the electrical outlet.

## Extending Your Battery Life

Active applications, backlight levels, Bluetooth, and GPS use all contribute to draining your battery. The following is a list of helpful tips that can help conserve your battery's charge:

- Reduce your backlight on time. See “Changing the Backlight Time Length” on page 52.
- Turn Bluetooth off when not in use. See “Turning Bluetooth On and Off” on page 104.
- Turn Wi-Fi off when not in use. See “Turning Wi-Fi On and Off” on page 129.
- Turn GPS off when not needed. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery. See “Location Settings” on page 53.
- Do not wait until your battery is completely depleted before charging your device. Repeated complete discharging and recharging can reduce the storage capacity of any battery over time.
- Turn off Automatic application sync. See “Adding and Synchronizing Accounts” on page 54.
- Add a Power Control Widget to your Home screen to deactivate features such as Wi-Fi, Bluetooth, GPS, and synchronization and to reduce the screen's brightness setting.
- Check running services and close any unnecessary applications. See “To see which applications are placing the heaviest demands on your battery:” on page 66.

## Opening and Closing the Device

Your device features dual touchscreens and allows you to work on two displays at the same time. The lower display is located beneath the upper display and is accessed by sliding it open. With both screens open, you can extend one application across two screens (Tablet mode) or use them as separate displays in Simul-Task or Optimized mode. See “Your Device’s Screen Modes” on page 27 for details.

To open the device:

 
- Using both hands, slowly slide the upper display in the direction of the arrow until it locks in tilt position.



**Note:** When opening the device, make sure you are sliding in the correct direction.


To make a flat display screen:

1. As you slide the device open, slide the upper (right) display right until it lies flat.
2. Close the gap between the two displays by pushing inward until you hear a click.

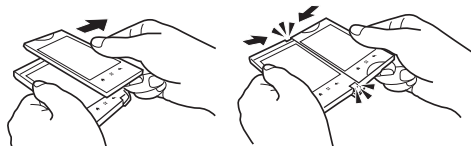

To close the device:

 1. Grasp the right edge of the upper (right) display and pull it slightly to the right to release the lock.
2. Slide the upper (right) display back to its original position as shown in the second figure below.

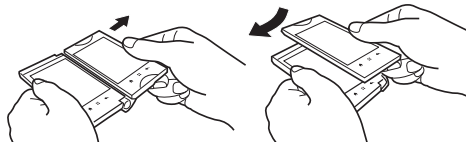

## Navigating Through the Onscreen Menus

---

There are different ways to navigate around the device's Home screen, menus, and application screens by using your finger. Here are some tips to move around your device's menus and screens:

### Using the Touchscreen

#### Tap

Tap once with your finger to select or launch a menu, option, or application. A light tap works best.



#### Tap and Hold

To open the available options for an item (for example, a link in a Web page), simply tap and hold the item.



#### Drag

Tap and hold your finger before you start to move it. Do not release your finger until you have reached the target position.



#### Slide or Flick

To slide, quickly move your finger vertically or horizontally across the screen. To flick, move your finger in lighter, quicker strokes than sliding. This finger gesture is always used in a vertical motion, such as when scrolling through contacts or a message list.

 


## Pinch and Spread

“Pinch” the screen using your thumb and forefinger to zoom out or “spread” the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)



Pinch

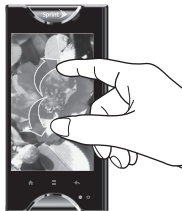




Spread

## Rotate the Screen

Your device is capable of automatically changing the orientation of some onscreen content. With this feature, you can view the screen in either portrait or landscape orientation by turning the device sideways. By default, the screen orientation automatically changes when the device is rotated.



To manually activate the Auto-rotate feature:




1. Press **Home**  > **Menu** , and then tap **Settings**  > **Display**.
2. Tap the **Auto-rotate screen** check box. (A check mark indicates this feature is enabled.)

*Note:* Some screens may not automatically change.

## Selecting Menu Items

As you navigate through the menu, you activate menu options by tapping the onscreen item. Select any option by tapping it.



For example, to view the current battery usage:

1. Press **Home**  to display the Home screen.
2. Press **Menu**  to display available menu options.
3. Tap **Settings**  to display settings menu.
4. Scroll down the screen and tap **About phone** to make a selection.
5. Tap **Battery use**. (Your device's battery usage is displayed.)

For the purposes of this guide, the above steps condense into:

 
- Press **Home**  > **Menu**  > **Settings**  > **About phone** > **Battery use**.

## Sub-Options Menus

Some menu items have additional options for just those items. Device menus with additional options (“sub-options”) appear with  adjacent to the list entry. Tap  to reveal additional options.

## Context Menus

Context menus (sometimes called “pop-up” menus) contain tools that apply to a specific item on the screen. You can open a context menu by tapping and holding an onscreen item.

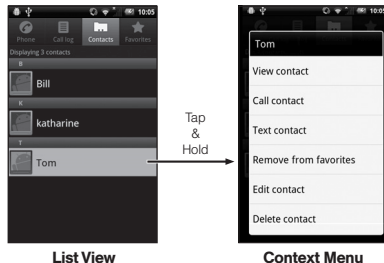

## Backing Up Within a Menu

To go back to the previous screen:


- Press **Back** .

To return to the Home screen:

- Press **Home** .



# Home Screen Overview

The Home screen is the starting point for all the features on your device. You can access applications and view call notifications and battery or connection status. The Home screen is accessible from any menu by pressing **Home** .



- 1. Status Bar:** Displays the time, notification, and device status icons. Drag down to display the Notifications panel.

 
- 2. Google Search Bar:** Allows users to enter text or spoken keywords for a quick search on the device or on the Internet.
- 3. Main Home Screen:** Displays shortcut icons, widgets, wallpapers, and folders.
- 4. Shortcuts:** Icons that launch applications such as Contacts, Phone, Email, and Clock. These function the same as shortcuts on your computer.
- 5. Phone Icon:** Tap to open the phone-related screen functions (Phone Dialer, Call log, Contacts, and Favorites).
- 6. Browser Icon:** Tap to start browsing the Web.
- 7. Applications Launcher Icon:** Tap to display available applications on the device.

## Viewing the Extended Screens


The Home screen extends beyond the visible screen width in either landscape or portrait mode. Apart from the main Home screen, there are four additional screens (two left and two right) to provide ample space for icons, widgets, shortcuts, and other items.

To display the extended screens:

- ▶ Flick your finger left or right across the Home screen.
  - The small dots you see on the lower left and right corner of the screen indicate the number of available screens to either side. Tap and hold them to display all five screens as thumbnails. You can tap a thumbnail to open the associated screen.

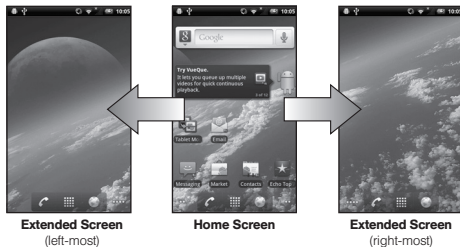

○○○○ indicates which screen you are viewing.

*Tip:* While on an extended screen, you can return to the Home screen by pressing **Home** .

## Using the Function Keys



Your device has three main keys on both the upper and lower display screens and these can be used on any screen for added convenience and usability:

### Home Key

Press the Home key to close any menu or application and return to the home screen. In the home screen, press and hold the Home key to display the most recently used applications screen.

### Menu Key

Press the Menu key to open menu options. When on the Home screen, the following menu options are available:

- **Add**  lets you add one of the following elements to a selected screen: Shortcuts, Widgets, Folders, or Wallpapers.
- **Manage apps**  lets you open the Manage applications of the Settings menu. See “Application Settings” on page 65.

- **Wallpaper** (🖼️) lets you change the current screen's wallpaper image. Suitable images can be obtained from your picture gallery, live wallpapers, or preset wallpapers. See "Changing the Wallpaper" on page 25.
- **Search** (🔍) displays the Quick Search Box that can be used to search for a key term both on the device or online. See "Search" on page 23.
- **Notifications** (📢) opens the Notifications panel. It does the same thing as dragging the status bar down on the Home screen. See "Using the Notifications Panel" on page 32.
- **Settings** (⚙️) provides quick access to the device's Settings menu. (See "2B. Settings" on page 49. )

 
### 🏠 Back Key

Press the Back key to go back to the previously active screen. If the onscreen keyboard is open, this key closes the keyboard.





## Search

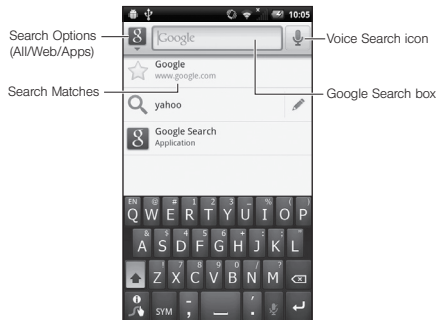You can launch a Google search directly from the Home screen.


1. From the Home screen, tap the Google search box or press **Menu** (☰) > **Search** (🔍) to display the keyboard.



2. Tap **☰** and select an option to narrow the search field, if necessary.

3. Enter the information you want to search. The Voice Search icon changes into  and, as you type, matching information is displayed on the screen.
4. To select a matched item, tap the item. Tap  to copy the listed term to the search box. To search the Internet using Google, tap .
  - Tapping  initiates the search function but without the need to use the onscreen keyboard. Tap **Watch a video** to learn how to use the application.




## Configuring the Search Settings

1. Open Google Search, then press **Menu**  > **Search settings**.
2. Tap one of the following options:
  - **Google search** opens a screen where you can set your Google search preferences.
    - **Show web suggestions** also includes search matches from Google's online search engine.
    - **Use My Location** to give permission to use your location for some Google services, such as Google Search, Google Maps™, etc.

- **Search history** determines whether you also wish to include personalized search history results in the list of matches.
- **Manage search history** helps to manage the personalized search history associated with your current registered Google account.
- **Searchable items** opens a screen where you can choose the search categories included in device searches.
- **Clear shortcuts** erases the history of recently selected search results.

## Customizing Your Home Screen

### Adding a Home Screen Item

1. Tap and hold an empty spot on the Home screen.
  - or –Press **Home**  > **Menu**  > **Add** .
2. In the **Add to Home screen** window, tap the type of item you want to add:
  - **Shortcuts**: Select to add a shortcut option: Applications, Bookmark, Contact, Direct dial, Direct message, Directions & Navigation, Latitude,

Music playlist, Settings, or Tablet Mode Extension. (Most of these options will expand to allow you to choose specific items.)



- **Widgets:** Select to add a widget (a mini-version of an application) such as an analog clock, calendar, digital clock, Eco Mode, etc.
- **Folders:** Select to add a folder to organize your Home screen items. See “Creating a Folder” on page 26.
- **Wallpapers:** Select to change the Home screen's wallpaper. See “Changing the Wallpaper” on page 25.

## Repositioning an Item on the Home Screen



1. Tap and hold the item you want to reposition until it visibly expands. (The item becomes movable.)
2. Drag the item to the desired location.
3. When the item is where you want it, release your finger.

**Note:** To reposition an item to an extended screen, drag the item to the edge of the Home screen. Then release your finger to reposition the item to your desired location.

## Removing an Item From the Home Screen



1. Tap and hold the item you want to remove until it vibrates. (The item becomes movable and the applications tab changes to a trash can .)
2. Drag the item to the Trash Can icon .
3. When the item and the icon turn red, release your finger.

## Changing the Wallpaper

1. From the Home screen, press **Menu**  > **Wallpaper** .
2. Select one of the following options:
  - **Gallery:** Select to use saved or captured pictures on your device. You can crop the picture before setting it as wallpaper.
  - **Live wallpapers:** Select to use Live wallpapers.
  - **Wallpapers:** Select to use preset wallpapers.
3. Tap **Save** or **Set wallpaper**.

## Creating a Folder

You can create folders on the Home screen to hold application icons or shortcuts.

1. From the Home screen, press **Menu**  > **Add**  > **Folders**.
2. On the **Select folder** window, select one of the following options:
  - **New folder**: Select to create a new folder.
  - **All contacts**: Select to create a contacts folder.
  - **Bluetooth received**: Select to create a folder of files received using Bluetooth.
  - **Contacts with phone numbers**: Select to create a folder of contacts that have phone numbers.
  - **Starred contacts**: Select to create a folder of your favorite contacts.

To access the items inside a folder, tap the folder to open it and then tap the icon of the application you want to access.

## Renaming a Folder

1. Tap a folder to open it.
2. Tap and hold the folder's title bar to open the Rename folder window.
3. Enter the new folder name and tap **OK** when done.


*Tip:* To delete a folder, follow the same procedure as you would for removing an item from the Home screen.

## Applications Launcher

The Applications Launcher on your device contains pre-installed and downloaded applications.

You can access a wide variety of applications in many different categories. To open an application, simply tap its icon on the Home screen or in the Launcher.

To open the Applications Launcher:

- ▶ On the Home screen, tap the Applications Launcher icon  to open it.

To close the Applications Launcher:

- ▶ Tap the Home icon  or press **Home**  to close.

 
## Your Device's Screen Modes

You can use your device's screens in any of four different modes:


- **Single-screen mode** — Use the upper screen by itself when your device is closed, providing all the functions of a single-display touchscreen device.
- **Simul-Task™ mode** — Run two applications at the same time, one on each screen. Choose from seven core apps, as described in the following section, “Switching Screen Modes.”
- **Optimized mode** — Run two functions of a single application, one on each screen. For example, you can compose email on one screen and display the keyboard on the other; or view Gallery images on one display while browsing thumbnails on the other. This mode works with any of the seven core functions described in the next section, “Switching Screen Modes.”
- **Tablet mode** — Spread one application across both displays, for full 4.7-inch viewing area. Tablet mode is ideal for viewing maps, videos, Web sites, and more.

## Switching Screen Modes

With Simul-Task™ mode, you can run two different applications at the same time, one in each display screen. Simul-Task works with many of your most commonly used applications: Browser, Contacts, Email, Gallery, Messaging, Phone, and VueQue. You can easily switch applications from one screen to the other.

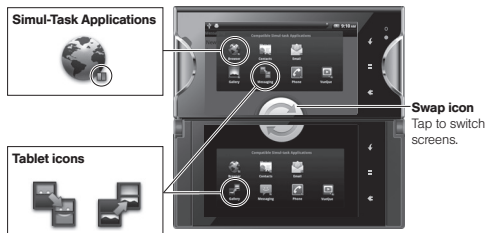


To launch Simul-Task applications:

1. On the Home screen with both screens open, tap the Launcher icon .
2. Tap a compatible Simul-Task application (**Browser, Contacts, Email, Gallery, Messaging, Phone, or VueQue**).
3. If required, tap **OK** in the message that appears in the lower message.
4. Touch both the upper screen and the lower screen at the same time. (Icons for compatible Simul-Task applications will be displayed on both screens.)
5. Tap the second application icon on the screen you want to work on.
6. You can work on either screen independently, or you can change the configuration for one or both screens.

To close Simul-Task applications :

- Press **Home** .

To switch applications on the upper and lower screens:

1. Touch both screens at the same time.
2. Tap the Swap icon , which is centered between the two screens.

To extend one application across both screens (Tablet mode):

*Note:* Not all third-party applications (those you download from Android Market) will work in Tablet mode unless you run the one-time Tablet Mode Extension utility. (See “Tablet Mode Extension” below.)



1. Touch both screens at the same time. (The Tablet icons for the currently running applications will be displayed on both screens.)
2. Tap the Tablet icon for the application you want to maximize.

## Tablet Mode Extension

Some applications that you download from Android Market™ may not display properly in Tablet mode until you install and run the Tablet Mode Extension utility.



To install and launch the utility:

1. Tap  on your device's Home screen.
2. Follow the instructions to install the utility.
3. After the utility is installed, launch it by tapping  again.

**Note:** You will only need to run the Tablet Mode Extension utility one time. After that, most apps that you download from Android Market should display correctly in Tablet mode.

**Tip:** If a downloaded app still doesn't display or function correctly after running the Tablet Mode Extension utility, you will need to run that app with the device closed (in Single-screen mode).








## Accessing Recently Used Applications










Your device keeps a running list of your eight most recently used applications.










1. Press and hold **Home**  to open the recently used applications window.
2. Tap an icon to open the related application.









## Applications Descriptions









The following is a listing of the default applications may be available on the Home/Extended screens, the Applications screen, or both.


<b>Application Icons</b>	
	<b>Battery use</b> – Allows you to view the battery usage for the running applications or for all the applications installed on the device.
	<b>Books</b> – Launches the Google eBooks application.
	<b>Browser</b> – Launches the Internet browser.
	<b>Calculator</b> – Launches the onscreen calculator application which allows you to perform basic mathematical functions.
	<b>Calendar</b> – Launches the calendar application.
	<b>Camera</b> – Launches the built-in camera.
	<b>Clock</b> – Launches the clock application which allows you to set multiple alarms.

<i>Application Icons</i>	
	<b>Contacts</b> – Displays the Contacts tab listing your contacts.
	<b>Document Viewer</b> – Allows you to open multiple file formats.
	<b>Downloads</b> – Displays the list of files that have been downloaded to your device.
	<b>Echo Top Apps</b> – Provides access to Echo top applications.
	<b>Eco Mode</b> – Allows you to set the Eco Mode.
	<b>Email</b> – Provides access to your Internet email accounts.
	<b>Gallery</b> – Displays images and videos stored on the microSD card.
	<b>Get Namco Games</b> – Provides access to Pac-Man and Pool Pro Online 3 from Namco Bandai.
	<b>Gmail</b> – Provides access to your Gmail account.

<i>Application Icons</i>	
	<b>Google Search</b> – Searches applications and contacts on your device, and the Internet using Google Search.
	<b>HD Games</b> – Provides access to Gameloft's website.
	<b>jibe - Social Messenger</b> – Launches the jibe application.
	<b>Latitude</b> – Launches Latitude application that enables you to find your friends' locations and share yours with them.
	<b>Maps</b> – Launches Google Maps.
	<b>Market</b> – Allows you to browse and download games and applications on Android Market.
	<b>Messaging</b> – Provides access to your text and multimedia messages
	<b>Music</b> – Launches the built-in music player.
	<b>MyBooks</b> – Provides access to the GoSpoken website.

<i>Application Icons</i>	
	<b>NASCAR</b> – Launches the Web-based NASCAR Sprint Cup Mobile application.
	<b>Navigation</b> – Launches Google Maps Navigation to get directions.
	<b>News &amp; Weather</b> – Allows you to view the weather in your location and read the latest stories, sports, and entertainment news headlines on your device.
	<b>Phone</b> – Launches the phone dialer.
	<b>Places</b> – Launches an application that enables you to find establishments around you.
	<b>Settings</b> – Provides access to the Settings menu.
	<b>Sprint Football Live</b> – Launches the Sprint Football Live services.
	<b>Sprint Hotspot</b> – Allows you to set up Sprint Hotspot.
	<b>Sprint TV &amp; Movies</b> – Allows you to watch live mobile TV and videos.

<i>Application Icons</i>	
	<b>Sprint Zone</b> – Launches Sprint Zone, which enables you to manage your account, download new apps, etc.
	<b>Tablet Mode Extension</b> – Allows you to use Tablet mode with many applications downloaded from Android Market.
	<b>Talk</b> – Launches a Web-based application that lets you chat with family and friends over the Internet for free.
	<b>TeleNav GPS Navigator</b> – Allows you to launch a TeleNav GPS Navigator.
	<b>The Sims 3</b> – Launches the Sims 3 application.
	<b>Voice Dialer</b> – Launches the built-in voice dialer, which allows you to make calls, open applications, and more, using voice commands.
	<b>Voice Search</b> – Allows you to launch a Google search using voice commands.
	<b>VueQue</b> – Provides access to the VueQue application.
	<b>YouTube</b> – Provides access to the YouTube website.

*Tip:* Compatible Simul-Task applications are indicated by  next to the application icon. All these applications can be run at the same time on separate screens.

## Using the Notifications Panel

The Notifications panel indicates new message events (data sync status, new messages, calendar events, call status, etc).

1. Drag the status bar down the screen.
2. Tap a notification entry to open the associated application.



# Making and Answering Calls

 
## Making Calls

### Opening the Phone

- ▶ Press **Home**  > .

#### Phone tab

Tap to open, and then tap the keys on the phone keypad to enter a phone number.

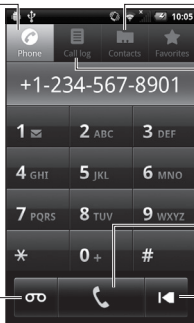

#### Contacts tab

Tap to open, and then tap an entry to call.

#### Call log tab

Tap to open, and then tap an entry to call.

#### Talk

Enter a phone number and tap here to call it.






#### Voicemail

Tap to call your voicemail.

#### Delete


Tap to delete a digit you entered.

To make a call by dialing:

1. Press **Home**  > .
2. Enter a phone number using the phone keypad. (If you make a mistake while dialing, tap  to erase the numbers.)
3. Tap . (To make a call when you are roaming and Roaming Guard is enabled, tap **OK**. See “Roaming Guard” on page 119.)
4. When you are finished, tap .

You can also place calls from your device by using your Contacts (page 38), Call log listings (page 69), and Automatic Speech Recognition (ASR) (page 87).


## Dialing Options

When you enter numbers on the phone keypad, additional dialing options may be available by pressing **Menu** .

- **Add to contacts:** to add the number to the Contacts list.
- **Add 2-sec pause:** to insert a two-second pause. (See “Dialing and Saving Phone Numbers with Pauses” on page 37.)

- **Add wait:** to insert a wait pause. (See “Dialing and Saving Phone Numbers with Pauses” on page 37.)

## Answering Calls



1. Make sure your device is on. (If your device is off, incoming calls go to voicemail.)
2. On the incoming call screen, flick the Answer icon .

Your device notifies you of incoming calls in the following ways:

- The device rings or vibrates.
- The indicator light flashes.
- The screen displays an incoming call message.

If the caller is listed in your Contacts, the contact's name appears. You may also see the caller's phone number, if available.

You may also select one of the following options:

- Press the volume button to mute the ringer.
- Flick the Ignore icon  to send the call to your voicemail box.
- Flick the Ignore & Text icon  to ignore the call and send a message to the caller.

## Answering a Roam Call With Roaming Guard Enabled

Roaming Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the Nationwide Sprint Network. See “Roaming” on page 118 for more information about roaming.

- ▶ Tap **OK** to answer the call. (See “Roaming Guard” on page 119 for additional information.)



*Note:* When your device is off, calls go directly to voicemail.

## Ending a Call

- ▶ Tap .


## Ending Calls Using the Power Button

To use the power button to end a call:




1. Press **Home**  > **Menu**  >  **Settings** > **Accessibility**.
2. Check the **Power button ends call** check box. (Clear the check box to disable this feature.)

*Note:* When the screen is turned off, you will need to press the power button twice to end a call.





## Missed Call Notification

When you do not answer an incoming call,  appears on the status bar.

To display a Missed Call entry from the Home screen:

1. Drag the status bar down to open the Notifications panel.
2. Tap the Missed Call icon (). This opens the Call log screen.
3. Tap an entry with a Missed Call icon () to open it. (To dial the phone number, tap  next to the entry.)

## Calling Emergency Numbers



You can place calls to 911 (dial    ) , even if your device is locked or your account is restricted.

**Note:** After you have placed an emergency call, your device automatically enters Emergency mode.

During an emergency call, tap **Speaker** to turn the speaker on. Tap again to turn it off.

**Tip:** Your phone number will be displayed on the screen during an emergency call.

To exit Emergency mode:

1. Tap  to end a 911 call.
2. Press **Menu** , and then tap **Exit Emergency mode > Yes**.

## Enhanced 911 (E911) Information

This device features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.


When you place an emergency 911 call, the GPS feature of your device seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

**Important:** Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your device.

## In-Call Options

Once you initiate a call, you will see the following onscreen options. Tap an option to select it.

- Tap **Mute On/Off** to toggle between turning the microphone on or off.
- Tap **Speaker On/Off** to toggle between turning the speaker on or off.
- Tap **End** to end the call.
- To send DTMF (Dual Tone Multi Frequency) tones during a call, tap **Dialpad** to display the onscreen dialpad. Tap **Hide** to hide it.
- Tap **Add call** to place a second call while putting the current caller on hold.
- Tap **Switch calls** to switch from the current call to the one on hold.
- Tap **Merge calls** to merge two open calls to start a three-way call.

Further options may be available by pressing **Menu**  during a call:

- **Contacts** to display your Contacts list.

- **Bluetooth** to route the device's audio through a connected Bluetooth device.

**WARNING:** Because of higher volume levels, do not place the device near your ear during speakerphone use.

## End-of-Call Screen

After you finish a call, the device briefly displays the caller's or recipient's name (if it is in your Contacts), phone number, and the duration of the call on the End call screen. Then the screen displays the **Call log** where further options may be available. See "Viewing the Call Log" on page 68.


## Saving a Phone Number

The number of Contacts entries you can store in your device is limited only by available memory space. Your device automatically sorts the Contacts entries alphabetically. (For more information, see "2D. Contacts" on page 71.)

To save a number from the Home screen:






1. Press **Home**  > .



2. Enter a phone number, and then press **Menu**  > **Add to contacts**.
3. Tap **Create new contact** or an existing contact.
4. Tap any field to enter the details.
5. Enter all the necessary details and tap **Done** to save the entry.

## Finding a Phone Number

You can search Contacts for entries by name.

1. Press **Home**  >  > **Contacts** .  
– or –  
On the **Phone** screen, tap the **Contacts** tab.
2. Press **Menu**  > **Search** .
3. Enter the first letter or letters of an entry. (The more letters you enter, the more specific the search.) All Contacts entries matching the entered letters will be displayed.
4. To display the contact details, tap an entry from the list.

## Dialing and Saving Phone Numbers with Pauses





You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.


There are two types of pauses available on your device:

- **Add 2-sec pause:** Automatically sends the next set of numbers after two seconds.
- **Add wait:** Sends the next set of numbers when you tap **Yes** in the pop-up window.

*Note:* You can have multiple pauses in a phone number and combine wait and two-second pauses.




To dial or save phone numbers with pauses:

1. Press **Home**  >  and enter all or part of a number.
2. Press **Menu**  > **Add 2-sec pause** or **Add wait**.
3. Enter additional numbers.
4. Tap  to dial the number.  
– or –

Press **Menu**  > **Add to contacts** to save the number in your Contacts.




*Note:* When dialing a number with a wait pause, tap **Yes** in the pop-up window.

## Dialing From the Contacts List


1. Press **Home**  >  > **Contacts** .  
– or –  
On the **Phone** screen, tap the **Contacts** tab.
2. Scroll through the list and tap the entry you want to call.
3. Tap **Call** [Type of Number]. (For example, **Call mobile**.)

## Dialing From the Favorites List

You can quickly dial contacts you call frequently by adding them to your Favorites list. See “Adding Entries to Your Favorites” on page 75.





1. Press **Home**  >  > **Contacts** , and then tap the **Favorites** tab.  
– or –

On the **Phone** screen, tap the **Favorites** tab.




2. Scroll through the list and tap .
  - If the Favorite has multiple phone numbers registered, tap the number you want to dial to make a call.

## Plus (+) Code Dialing

When placing international calls, Plus Code Dialing automatically enters the international access code for your location (for example, 011 for international calls made from the U.S.). You can also change the international access code from the Settings menu. See “Changing the International Dialing Code” on page 58 for details.

1. Press **Home**  > .
2. Tap and hold  until you see a “+” on the display screen.
3. Enter the country code and phone number, and then tap . (The device automatically prepends the access code for international dialing, followed by the country code and phone number.)

## Displaying Your Phone Number

- ▶ Press **Home**  > **Menu**  > **Settings**  > **About phone** > **Status**. (Your phone number and other information about your device and account will be displayed.)

## Entering Text Using the Onscreen Keyboards

### Selecting the Keyboard Type

 
Your device provides convenient ways to enter letters, numbers, and symbols whenever you are prompted to enter text. To manually display the keyboard, simply tap a text field where you want to enter text. There are two ways of entering text on your device: **Swype** and **Android keyboard**.

1. From a screen where you can enter text, tap and hold a text entry field, and then tap **Input method**.
2. Choose from the following options:
  - **Swype** to enter text using the Swype keyboard.

- **Android keyboard** to enter text using the Android keyboard.

*Note:* Swype is turned on by default on your device.

## Swype Keyboard Overview

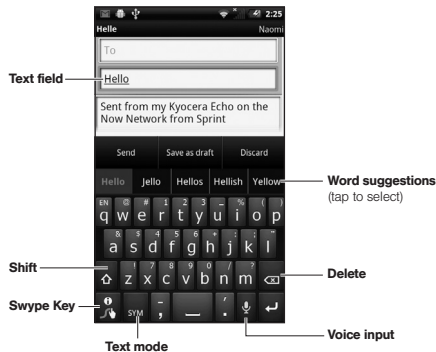

*Note:* Key appearance may vary depending on the selected application.

## Entering Text Using Swype

Swype allows you to enter text by sliding your finger from letter to letter rather than tapping on the keys. To enter text, slide your finger from one letter to the next.




Example: dog  
Place your finger on the key with the first letter of the word and glide to the following letters. Lift your finger after the last letter.











Example: cool  
For double letters, circle the letter.

 


Example: You  
To capitalize the letter, slide up over the keyboard.


**Tip:** For tips on using Swype, tap the Swype key  and follow the onscreen information.



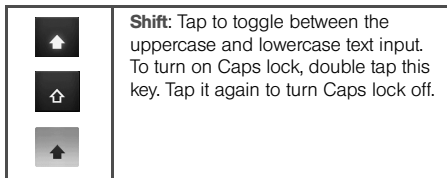


You can do the following with the Swype keyboard:

 	<b>Text mode:</b> Tap to toggle between the Alphabet keyboard and Number & Symbol keyboard.
	<b>Swype Key:</b> Tap to access the tips, tutorial, and settings of Swype.
	<b>Voice input mode:</b> Tap to enter text using your voice.
	<b>Delete:</b> Tap to delete a character. Tap and hold to delete multiple characters.
	<b>Smiley:</b> Tap to insert a smiley. Tap and hold to view and select other smileys.
	<b>Space:</b> Tap to insert a space.
	<b>Enter:</b> Tap to confirm your entry.





## ABC Mode


In ABC mode, you can enter only letters from the onscreen keyboard. While in this mode, the text mode key displays .

1. Select the ABC mode by tapping .
  - Capitalization in ABC mode can be altered by tapping the shift key .
    -  (Unshifted) to make all letters in a word lowercase.
    -  (One-character-shifted) to capitalize only the first letter of a word.
    -  (Caps Lock) to make all letters in a word uppercase.



2. Enter text using the keyboard.

- If you make a mistake, tap  to erase a single character. Tap and hold  to erase an entire word.

## Entering Numbers and Symbols

In Number & Symbol mode, you can enter only numbers and symbols from the onscreen keyboard. While in this mode, the text mode key displays .

 
To enter numbers and symbols in Swype mode:

1. Select the Number & Symbol mode by tapping .
2. Tap the key for the number or symbol you want to enter. To select from additional symbol characters, tap the shift key .

## Entering Text Using the Android Keyboard

When entering text, you can choose to use the Android keyboard. To switch from the Swype keyboard to Android keyboard, tap and hold a text entry field, and then tap **Input method > Android keyboard**.

### Android Keyboard Overview

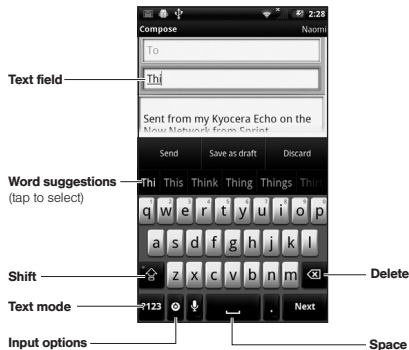


You can do the following with the Android keyboard:






	<b>Shift</b> : Tap to toggle between lower case, upper case, and Caps lock. Indicates the first letter will be entered in upper case, but succeeding characters will be entered in lower case.
	<b>Caps Lock</b> : Indicates Caps lock is turned on. Tap once to turn off Caps lock.
	<b>Unshift</b> : Indicates all letters will be entered in lower case.
 	<b>Text mode</b> : Tap to toggle between the Alphabet keyboard and Number & Symbol keyboard.
	<b>Next</b> : Tap to go to the next text entry field.
	<b>Alternate</b> : Tap to display more symbols. Tap again to toggle back to Number & Symbol keyboard.
	<b>Go</b> : Tap to go to a Web address.




**Input options:** Tap to select input method or Android keyboard settings.

## ABC Mode


In ABC mode, you can enter only letters from the onscreen keyboard. While in this mode, the text mode key displays .

1. Select the ABC mode by tapping .
  - Capitalization in ABC mode can be altered by tapping the shift key .
    -  (Unshifted) to make all letters in a word lowercase.
    -  (One-character-shifted) to capitalize only the first letter of a word.
    -  (Caps Lock) to make all letters in a word uppercase.
2. Tap the corresponding alphabet keys to enter the word.


## Entering Numbers and Symbols


In Number & Symbol mode, you can enter only numbers and symbols from the onscreen keyboard. While in this mode, the text mode key displays .

To enter numbers:

1. Select the Number & Symbol mode by tapping .
2. Tap the appropriate numeric key.




To enter symbols:

1. Select the Number & Symbol mode by tapping .
2. Tap the appropriate symbol key.  
– or –

Tap  to select from additional symbol characters. (A blue light will appear in the key when the additional character set is active.)

## Using Landscape Mode

For added convenience, you can switch to landscape mode by rotating the device 90° to the left (counterclockwise). This would only widen the keyboard if you were using one display screen. When you are using both display screens, the keyboard is about the same size either in landscape or in portrait orientation.



**Note:** To use this feature, ensure that the **Auto-rotate screen** check box is selected in **Home**  **> Menu**  **> Settings**  **> Display.**

## Changing Language & Keyboard Settings

### Selecting the Language

1. Press **Home**  **> Menu**  **> Settings**  **> Language & keyboard > Select language.**
2. Select **English** or **Español**.





### Swype Settings

1. Press **Home**  **> Menu**  **> Settings**  **> Language & keyboard > Swype.**
2. Choose from the following options:

- **Language:** Tap to select Swype language.
- **Audio feedback:** Tap to turn on sounds from Swype.
- **Vibrate on keypress:** Tap to activate vibration when a key is touched.
- **Enable tip indicator:** Tap to turn on flashing indicator for quick tip.
- **Word suggestion:** Tap to display suggested words as you type.
  - **Auto-correction:** Tap to enter suggested word automatically if a space is typed.
  - **Show suggested :** Tap to show suggested word in the text field as you type.
- **Auto-spacing:** Tap to automatically insert spaces between words.
- **Auto-capitalization:** Tap to automatically capitalize the first letter of sentence.
- **Show complete trace:** Tap to display the complete Swype path.
- **Speed vs. accuracy:** Tap to set how quickly Swype responds to input.
- **Swype help:** Tap to open user manual for Swype.
- **Tutorial:** Tap to learn Swype in quick steps.



## Android Keyboard Settings

1. Press **Home**  > **Menu**  > **Settings**  > **Language & keyboard** > **Android keyboard**.  
– or –  
Tap  on the Android keyboard, and then tap **Android keyboard settings**.
2. Choose from the following options:
  - **Vibrate on keypress**: Tap to activate vibration when a key is touched.
  - **Sound on keypress**: Tap to activate a clicking sound when a key is touched.
  - **Popup on keypress**: Tap to display a larger image of the key above it when you touch it.
  - **Touch to correct words**: Tap to turn on the feature that underlines a word in a text field if you touch the word and the keyboard has suggestions for other words you may have intended.
  - **Auto-capitalization**: Tap to automatically set the first letter of a sentence to upper case.
  - **Show settings key**: Tap to select the option from “Automatic”, “Always show” or “Always hide.”

- **Voice input**: Tap to select the Voice Input option from “On main keyboard,” “On symbols keyboard,” or “Off.”
- **Input languages**: Tap to select the input languages from **English (United States)** or **Español (Estados Unidos)**.




### Word Suggestion Settings

- **Quick fixes**: Tap to add a period when you press the space key twice to indicate sentence completion.
- **Show suggestions**: Tap to display suggested words as you type.
- **Auto-complete**: Tap to enter a highlighted word automatically if a space or a punctuation symbol is typed.


### Entering Text by Speaking

You can use voice input to enter text by speaking, anywhere that you can enter text with the onscreen keyboard. Voice input is an experimental feature that uses Google’s speech-recognition service, so you must have a data or Wi-Fi connection to use it.

To turn on voice input:





1. Press **Home**  > **Menu**  > **Settings**  > **Language & keyboard** > **Android keyboard** > **Voice input**.
2. Tap **On main keyboard** or **On symbols keyboard**.

To enter text by speaking:

1. Tap a text field.
2. Tap  (the microphone key) on the keyboard.
3. When prompted to “**Speak now**,” speak what you want to enter into the microphone.

## Adding a Word to the User Dictionary

You can use the user dictionary option to add new words into the dictionary.

 
1. Press **Home**  > **Menu**  > **Settings**  > **Language & keyboard** > **User dictionary**.
2. Press **Menu**  > **Add** to add a word.
3. Type the word you want to add, and tap **OK**. (A list of words you have added to the dictionary is displayed.)
  - Tap a word to edit or delete it.

## Editing Text

You can edit the text you enter in text fields and use menu commands to cut, copy, and paste text, within or across most applications.

To cut, copy, and paste the text:

1. Open the application or received message that you want to copy text from.
2. Tap and hold the text field to display the options menu.
3. Tap **Select word** or **Select all**. (The selected text is highlighted, with a tab at each end of the selection.)

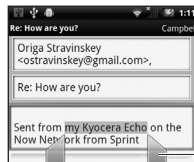

Drag a selection tab to expand or reduce the range of selected text.

4. Drag a selection tab to expand or reduce the range of selected text.

5. Tap the selected text to display the options menu.
6. Tap **Cut** or **Copy**. The selected text is then copied to the clipboard.
7. Tap the text field in the same or other application.
8. Place the cursor in the text field where you want to paste the text
9. After positioning the cursor, tap and hold the text field.
10. Tap **Paste**.

#### To copy text from a Web page:

1. When viewing a Web page, tap and hold the text that you want to copy.
2. Drag a selection tab to expand or reduce the range of selected text.
3. Tap the highlighted text. The selected text is then copied to the clipboard.
4. Open the application that you want to paste the selected text to.
5. Tap and hold the text box where you want to paste the text, and tap **Paste**.

#### To copy a URL:

1. To copy a URL, tap and hold the URL to display the options menu.
2. Tap **Copy link URL** or **Copy page url**.
3. Open the application that you want to paste the URL to.
4. Tap and hold the text box where you want to paste the URL, and tap **Paste**.

## Creating a Google Account

---

You will need a Google account to access several device features such as Gmail, Google Maps™, Google Talk™, and the Android Market applications. Before you are able to access Google applications, you must enter your account information. These applications sync between your device and your online Google account.

1. From a computer, or from your device's Browser, navigate to [www.google.com](http://www.google.com).
2. On the main page, select **Sign-in > Create an account now**.
3. Follow the onscreen prompts to create your free account.
4. Log into your provided email address, locate the email from Google, and respond to the new email to both confirm and activate your new account.

## Signing Into Your Google Account

1. Launch the application that requires a Google account (such as Android Market or Gmail).
2. Tap **Next > Sign in**.

*Note:* If you do not already have a Google account, tap **Create** and follow the onscreen prompts to create your new account.

3. Tap the **Username** and **Password** fields and enter your information.
4. Tap **Sign in**.

For additional information about synchronizing accounts, see “Adding and Synchronizing Accounts” on page 54.

## 2B. Settings

- ◆ Sound Settings (page 49)
- ◆ Display Settings (page 52)
- ◆ Location Settings (page 53)
- ◆ Adding and Synchronizing Accounts (page 54)
- ◆ Call Settings (page 58)
- ◆ Airplane Mode (page 59)
- ◆ TTY Use With Sprint Service (page 60)
- ◆ Using the Hearing Device Compatibility Function (page 61)
- ◆ Security Settings (page 61)
- ◆ PC Connection Settings (page 64)
- ◆ Application Settings (page 65)
- ◆ Privacy Settings (page 66)
- ◆ Eco Mode (page 67)

## Sound Settings

### Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to voice calls and notifications.

### Selecting Ringer Types for Voice Calls




1. Press **Home**  > **Menu**  > **Settings**  > **Sound > Phone ringtone.**

*Note:* The Settings menu can also be accessed from the Applications Launcher screen.

2. Tap a ringtone from the available list. The ringtone briefly plays when selected.
3. Tap **OK** to assign a ringer.




*Tip:* You can assign individual ringtones to your Contacts. See “Assigning a Ringer Type for an Entry” on page 74.

## Selecting Ringer Types for Notifications

1. Press **Home**  > **Menu**  > **Settings**  > **Sound** > **Notification ringtone**.
2. Tap a ringtone from the available list. The ringtone briefly plays when selected.
3. Tap **OK** to assign a ringer.




## Enabling Other Sound Features

You can set the device to play an audible tone or to vibrate when you use the phone keypad or tapping the screen.

1. Press **Home**  > **Menu**  > **Settings**  > **Sound**.
2. Tap **Audible touch tones**, **Audible selection**, **Screen lock sounds**, or **Haptic feedback** to activate the feature.
  - **Audible touch tones** plays a tone while using the phone keypad.
  - **Audible selection** plays a sound when making any onscreen selection.
  - **Screen lock sounds** plays sounds when locking and unlocking the device.
  - **Haptic feedback** vibrates when pressing keys and in certain other situations.

## Adjusting the Volume Settings

Adjust your device's volume settings to suit your needs and your environment.

1. Press **Home**  > **Menu**  > **Settings**  > **Sound** > **Volume**.
2. Drag the onscreen slider to adjust the volume level of **Ringtone**, **Media**, or **Alarm**.

*Note:* If you clear the "Use incoming call volume for notifications," you can select the notification volume separately.

3. Tap **OK**.




*Tip:* You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume button on the left side of your device.

## Vibrate Settings

To set your device to vibrate instead of making any sounds:

- ▶ Press the volume button down in standby mode until the device vibrates.

To change the vibrate settings:

1. Press **Home**  > **Menu**  > **Settings**  > **Sound > Vibrate**.
2. Select an option from the following:
  - **Always** to always vibrate.
  - **Never** to never vibrate.
  - **Only in Silent mode** to vibrate only in silent mode.
  - **Only when not in Silent mode** to vibrate only when not in silent mode.




## Silent Mode

The silent mode option allows you to mute all sounds (except for media and alarm sounds).

To activate silent mode:

- ▶ Press the volume button down in standby mode until you see  or  on the screen.

– or –

Press **Home**  > **Menu**  > **Settings**  > **Sound > Silent mode**. (A check mark indicates this feature is enabled.)




To deactivate silent mode:

- ▶ Press the volume button up repeatedly to select a volume level.

## Display Settings




### Window Animation

This feature lets you set the amount of animation used in onscreen transitions.

1. Press **Home**  > **Menu**  > **Settings**  > **Display > Animation.**
2. Tap **No animations**, **Some animations**, or **All animations**.




### Adjusting the Brightness

Adjust your screen's brightness to suit your surroundings.

1. Press **Home**  > **Menu**  > **Settings**  > **Display > Brightness.**
2. Drag the **Brightness** slider left or right to adjust the screen brightness.
3. Tap **OK**.



*Note:* This feature is not available when **Auto backlight** is enabled. See the following section "Setting Auto Backlight."

### Setting Auto Backlight

1. Press **Home**  > **Menu**  > **Settings**  > **Display.**
2. Tap **Auto backlight** to automatically adjust the screen backlight to the ambient light conditions.

### Changing the Backlight Time Length




Select the delay time before the screen automatically turns off.

1. Press **Home**  > **Menu**  > **Settings**  > **Display > Screen timeout.**
2. Tap a duration.

*Note:* Long backlight settings reduce the battery's talk and standby times.

### Viewing Battery Use




See which applications are placing the heaviest demands on your battery.

1. Press **Home**  > **Menu**  > **Settings**  > **About phone > Battery use.**
2. Tap an item to see more detailed information.






## Display Language

You can choose to display your device's onscreen menus in English or in Spanish.

1. Press **Home**  > **Menu**  > **Settings**  > **Language & keyboard** > **Select language**.
2. Select **English** or **Español**.

## Adjusting the Date and Time Manually

Your device obtains its time and date information by using the network-provided date, time, and time zone. These values can be changed manually.

1. Press **Home**  > **Menu**  > **Settings**  > **Date & time**.
2. Clear the **Automatic** check box if necessary.
3. Tap **Set date**. Adjust the date, month, and year by tapping **+** or **-**. Tap **Set** when finished.
4. Tap **Select time zone**, and then select a time zone from the onscreen list. Scroll down the list to view additional time zones.

5. Tap **Set time**. Adjust the hour and minute by tapping **+** or **-**. Tap the **AM** or **PM** icon to change the value. Tap **Set** when finished.
6. Tap **Use 24-hour format** to toggle between 12-hour or 24-hour format.
7. Tap **Select date format** to select how the date information is displayed on your device.




## Location Settings

Your device is equipped with a Location feature for use in connection with location-based services.




The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except **911**.

**Note:** Turning Location on will allow the network to detect your position using GPS technology, making some Sprint applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

To enable your device's Location feature via wireless networks:

1. Press **Home**  > **Menu**  > **Settings**  > **Location & security**.
2. Tap **Use wireless networks**. (A check mark indicates this feature is enabled.)
3. Read the disclaimer and tap **Agree**.

To enable your device's Location feature via GPS:

1. Press **Home**  > **Menu**  > **Settings**  > **Location & security**.
2. Tap **Use GPS satellites**. (A check mark indicates this feature is enabled.)
  - This service uses available GPS to pinpoint your location within certain applications such as Google Maps.

## Adding and Synchronizing Accounts




---

The **Accounts & sync** menu lets you add and manage your accounts and synchronizes the calendar or contacts on your device.

### Synchronizing Your Google Account

If you have signed in with a Google account on your device, it will be displayed as a default Google account in **Accounts & sync**.

To add an additional Google account:

1. Press **Home**  > **Menu**  > **Settings**  > **Accounts & sync**.
2. Tap **Add account** > **Google**.
3. Tap **Next** > **Sign in**.

 
*Note:* If you do not already have a Google account, tap **Create** (instead of **Sign in**) and follow the onscreen prompts to create your new account. (See "Creating a Google Account" on page 48.)


4. Tap the **Username** (@gmail.com) and **Password** fields and enter your information.


5. Tap **Sign in**. Your device then communicates with the Google servers to confirm your information. Your new Google account then appears within the **Manage accounts** area of the screen.

To enable the auto-sync feature:



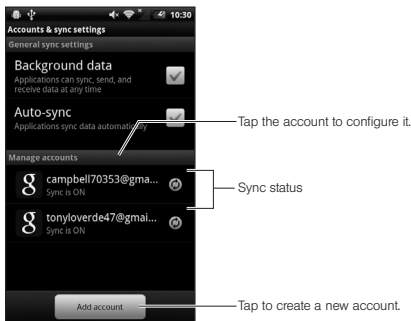

1. Press **Home**  > **Menu**  > **Settings**  > **Accounts & sync**.



-  - Indicates that some or all of an account's information is configured to sync automatically with your device.

-  - Indicates that none of an account's information is configured to sync automatically with your device.
2. Confirm the **Background data** check box is selected.
  3. Tap **Auto-sync**. (A check mark indicates the feature is enabled.)
    - If you uncheck this option, you may be able to use an application's tools to sync data manually. (See "To sync information manually:" below.)
  4. Tap the Google account you want to sync.
  5. Tap the types of data you wish to synchronize automatically. (A check mark indicates the feature is enabled.)

To sync information manually:




1. Press **Home**  > **Menu**  > **Settings**  > **Accounts & sync**.
2. Tap the account with data you want to sync.
3. Press **Menu**  > **Sync now**.

## Synchronizing Your Corporate Account





You can synchronize your device with your company's Microsoft Exchange Server to let you access your device's Exchange Server account's email, contacts, and calendar events.

*Note:* By default, your device doesn't manage any corporate accounts. These must be manually added. (See "Corporate Email" on page 139.)

To enable the auto-sync feature:

1. Press **Home**  > **Menu**  > **Settings**  > **Accounts & sync**.
2. Confirm the **Background data** check box is selected.
3. Tap **Auto-sync** to automatically synchronize your account. (A check mark indicates the feature is enabled.)
4. Tap the Corporate account you want to sync.
5. Tap the types of data you wish to synchronize automatically. (A check mark indicates the feature is enabled.)



To configure the Corporate account settings:

1. Press **Home**  > **Menu**  > **Settings**  > **Accounts & sync**.
2. Tap  within the Corporate account field to reveal the account's synchronization settings screen.
3. Toggle either the **Sync Contacts** or **Sync Calendar** fields to force the device to manually resync either the Contacts or Calendar entries.

– or –

Tap **Account settings**.

- **Account name** displays the name used by the device to track the account.
- **Your name** displays the name used in the **From** field within your outgoing email messages.
- **Signature** allows you to create an outgoing email signature attached to new email messages sent from your device.
- **Amount to synchronize** to assign the sync range for your incoming and outgoing email messages between your device and your external exchange server. How many days worth of email messages should the device and server synchronize. Choose from: **One day**, **Three days**, **One week**, **Two weeks**, or **One month**.

- **Inbox check frequency** configures the frequency which the device queries the remote server for new email changes. Choose from: **Automatic (Push)**, **Never**, **Every 5 minutes**, **Every 10 minutes**, **Every 15 minutes**, **Every 30 minutes**, or **Every hour**.
  - **Default account** assigns this account as the default used when sending out new email messages.
  - **Email notifications** enables the device to display a status bar icon  when new email messages have been received.
  - **Select ringtone** assigns an audible ringtone when a new or upcoming event is pending.
  - **Vibrate** assigns a vibration when a new or upcoming event is pending.
  - **Incoming settings** provides access to the Domain, password, and exchange server parameter fields.
  - **Out of office settings** sets your message automatically replied when you are out of your office.
  - **Sync contacts** synchronizes the contacts between your device and the remote exchange server. A check mark indicates the feature is enabled.
  - **Sync calendar** synchronizes your exchange calendar entries between your device and the remote exchange server. A check mark indicates the feature is enabled.
4. Press **Back**  to return to the previous screen.




## Call Settings

---

Your device allows you to configure call settings such as Plus Code Dialing, other international dialing options, and TTY configuration.




### *Using Plus Code Dialing While in the United States and Canada*

Your phone can automatically dial the international access code if you are in the United States or Canada. (See “Plus (+) Code Dialing” on page 38.)

1. Press **Home**  > **Menu**  > **Settings**  > **Call settings**.
2. Tap **North American dialing**. (A check mark indicates this feature is enabled.)

### *Changing the International Dialing Code*





By default, the international dialing code is set to 011. If you are calling outside the United States or Canada, you may need to modify the international dialing code according to your needs. Before using this feature, you must disable the North American dialing feature.

1. Press **Home**  > **Menu**  > **Settings**  > **Call settings**.
2. Clear the **North American dialing** check box.
3. Tap **International dialing**.
4. Use the onscreen keyboard to delete the previous value.
5. Enter a new value and tap **OK**.




### *Call Using Internet Calling*

When Wi-Fi network is available, you can make and receive calls through an Internet calling account.




To add an Internet calling account:


1. Press **Home**  > **Menu**  > **Settings**  > **Call settings** > **Accounts**.
2. Tap **Add account**.
3. Enter your account details.
4. Press **Menu**  > **Save** to save your account.
5. To set your phone to receive Internet calls on your added account, tap the **Receive incoming calls** check box.

To configure the Internet calling setting:

1. Press **Home**  > **Menu**  > **Settings**  > **Call settings** > **Use Internet calling**.
2. Select an option from the following:
  - **For all calls** to use Internet calling for all calls when data network is available.
  - **Only for Internet calls** to use Internet calling only for calls to Internet calling addresses.
  - **Ask for each call** to ask each time you make a call.

To make an Internet calling:


1. Press **Home**  >  > **Contacts** .
2. Tap a contact, and then tap **Internet call**.
  - or –




From the Call log, tap an Internet call log.
3. To end the call, tap .


**Important:** Calling a phone number using Internet calling may incur additional charges.

## Airplane Mode

Airplane mode allows you to use many of your device's applications when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When you set your device to Airplane mode, you cannot make or receive any calls or access online information.

1. Press and hold  to open the Phone options.
  2. Tap **Airplane mode** to enable or disable this feature.
- or –

1. Press **Home**  > **Menu**  > **Settings**  > **Wireless & networks**.
2. Tap **Airplane mode**. (A check mark indicates this feature is enabled. Tap **Airplane mode** again to disable the feature.)




While in Airplane mode, the Airplane mode icon () will appear on the status bar.


## TTY Use With Sprint Service

A TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities to communicate by telephone.

Your device is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it is compatible with digital cell phones. Your device and TTY device will connect via a special cable that plugs into your device's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

To turn TTY Mode on or off:

1. Press **Home**  > **Menu**  > **Settings**  > **Call settings** > **TTY mode**.
2. Tap an option:
  - **TTY Off**: Disables TTY mode.
  - **TTY Full**: Enables TTY mode.
  - **TTY HCO**: Enables TTY in Hearing Carry Over mode and you can hear.
  - **TTY VCO**: Enables TTY in Voice Carry Over mode and you can talk.

The TTY icon () will appear on the status bar when your device is in TTY mode.

To access the state Telecommunications Relay Service (TRS) for assistance with TTY calls:

► Dial **7**  **1**  **1**   to reach an operator.

For additional information about Sprint Relay Services and TTY compatibility, call Sprint Relay Customer Service at **800-676-3777** or visit [www.sprintrelay.com](http://www.sprintrelay.com).

*Note:* When enabled, TTY mode may impair the audio quality of non-TTY devices connected to the headset jack.




### **WARNING: 911 Emergency Calling**

Sprint recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.



## Using the Hearing Device Compatibility Function

Your device has been tested and rated for hearing device compatibility. To use this function effectively, set the **Hearing Aid** option to **On**.

1. Press **Home**  > **Menu**  > **Settings**  > **Sound**.
2. Tap **Hearing Aid**. (A check mark indicates this feature is enabled.)

For more information about hearing aid device compatibility, see “Using Your Device With a Hearing Device” on page 170.




## Security Settings

### Your Device's Lock Feature

You can increase your device's security by creating a screen unlock pattern, PIN, or password (disabled by default). When enabled, you must draw the correct unlock pattern on the screen, or enter your PIN or password to unlock and regain access to the device.




### Setting the Screen Lock

To create an unlock pattern:




1. Press **Home**  > **Menu**  > **Settings**  > **Location & security** > **Set up screen lock** > **Pattern**.
2. Read the information on the screen, and then tap **Next**.
3. Review the onscreen tutorial on pattern creation, and then tap **Next**.
4. Draw a pattern by touching any onscreen point, and then without removing your finger from the screen, dragging your finger over adjacent points until the points in your pattern are connected by a gray line and each is enclosed in a blue circle.

5. When you have connected at least four dots in a vertical, horizontal, or diagonal direction, lift your finger from the screen.
6. Tap **Continue** to record the pattern.
7. Confirm the new pattern by redrawing it and then tap **Confirm**.

To create an unlock PIN:


1. Press **Home**  > **Menu**  > **Settings**  > **Location & security** > **Set up screen lock** > **PIN**.
2. Enter at least four numbers (0-9) and tap **Continue**.
3. Enter the same numbers again to confirm your PIN and tap **OK**.

To create an unlock password:



1. Press **Home**  > **Menu**  > **Settings**  > **Location & security** > **Set up screen lock** > **Password**.
2. Enter at least four characters (any combination of upper- and lowercase letters, numbers, or symbols) and tap **Continue**.
3. Enter the same characters again to confirm your password and tap **OK**.

The next time you turn on your device or wake up the screen, you're prompted to draw your unlock pattern or to enter your PIN or password to unlock the screen.

## Locking Your Device Screen


- ▶ Press . Locking the screen prevents accidental screen touches from activating device functions.

## Unlocking Your Device Screen

1. Press  to wake up the screen.
2. Flick the Unlock icon  in any direction.
  - If you've locked your screen, you must draw an unlock pattern or enter a PIN or password to unlock it.

## Calling in Lock Mode




Even if the screen is locked, you will still be able to place emergency calls.

- ▶ To call an emergency number, tap the **Emergency call** button and enter the phone number, and then tap .




## Configuring the Screen Lock Settings

After an unlock pattern, PIN, or password is created, additional options are available in the Location & security menu.




To hide the unlock drawing pattern:

1. Press **Home**  > **Menu**  > **Settings**  > **Location & security**.
2. Clear the **Use visible pattern** check box.
  - Clearing this option prevents the unlock pattern from displaying on the unlock screen.




To vibrate the screen when you draw the pattern:

1. Press **Home**  > **Menu**  > **Settings**  > **Location & security**.
2. Tap the **Use tactile feedback** check box to enable this feature.

To hide passwords as you type them:

1. Press **Home**  > **Menu**  > **Settings**  > **Location & security**.
2. Clear the **Visible passwords** check box.

To change the screen lock pattern, PIN, or password:

1. Press **Home**  > **Menu**  > **Settings**  > **Location & security** > **Change screen lock**.
2. Draw the current unlock pattern or enter the current PIN or password. Tap **Continue** if required.
3. Tap **Pattern**, **PIN**, or **Password** and create a new unlock code. (Tap **None** to disable this feature. )




What to do if you have forgotten your pattern:

If you fail to draw the correct unlock pattern on the screen, or enter the correct PIN or password after five attempts, you are prompted to wait for 30 seconds before you can try again.

- ▶ If you have forgotten your screen unlock pattern, tap the **Forgot pattern?** button.
  - Sign in using your Google Account name and password, and create a new screen unlock pattern before regaining access to the Home screen.

## Setting Security Storage

This feature allows applications to access secure certificates.

1. Press **Home**  > **Menu**  > **Settings**  > **Location & security** > **Set password**.
2. Enter and confirm your password and tap **OK**. Credential storage is enabled.
3. Confirm the **Use secure credentials** check box is selected.

*Note:* You can change the password by tapping **Set password** and then entering the current and new passwords.

4. To cancel this feature, tap **Clear storage** > **OK**.




## Installing Encrypted Certificates From the SD Card

1. Press **Home**  > **Menu**  > **Settings**  > **Location & security** > **Install from SD card**.
2. Tap an available certificate.
3. Follow the onscreen instructions.

## PC Connection Settings

---

You can set your device's PC connection mode when connected to the USB port of a computer.


1. Press **Home**  > **Menu**  > **Settings**  > **PC connection**.
2. Tap **Default connection type** and select one of the following options:
  - **Charging only** to select if you want your PC only to charge your device.
  - **Mass Storage** to select if you want your device as an external hard disk drive when connected to the USB port of a computer.
  - **Tethered mode** to select if you want your device to share its Internet connection when connected to the USB port of a computer.

Tap the **Ask me** check box to set your device to always display the screen for selecting the USB connection type.




## Application Settings

Application Settings allows you to manage applications installed on the device.

To install non-Market applications:

1. Press **Home**  > **Menu**  > **Settings**  > **Applications**.
2. Tap **Unknown sources** > **OK**. (A check mark indicates this feature is enabled.)

To open the Manage applications screen:

1. Press **Home**  > **Menu**  > **Settings**  > **Applications** > **Manage applications**.
2. Tap one of the following tabs to select the applications to be displayed.
  - **Downloaded** to display downloaded application.
  - **All** to display all applications.




*Tip:* Pressing **Home**  > **Menu**  > **Manage apps** opens the **All** tab directly.

- **On SD card** to display applications stored on the microSD card.




- **Running** to display currently running applications.

*Tip:* When viewing the **Downloaded**, **All**, or **On SD card** tab, press **Menu**  and tap **Sort by size** or **Sort by name** to switch the order of the list.

To clear an application's cache or data:




1. Press **Home**  > **Menu**  > **Settings**  > **Applications** > **Manage applications**.
2. Tap an application and then tap **Clear data** or **Clear cache**.
3. Tap **OK** to confirm.

To uninstall downloaded applications:




1. Press **Home**  > **Menu**  > **Settings**  > **Applications** > **Manage applications**.
2. On the Manage applications screen, tap the application you want to uninstall.
3. On the application's information screen, tap **Uninstall** > **OK**.

*Important:* Only applications that you have installed yourself can be uninstalled. Preinstalled applications cannot be removed.




To view and control currently running services:

1. Press **Home**  > **Menu**  > **Settings**  > **Applications** > **Running services**.
2. Tap an available service to manage it further.



To see which applications are using storage space:

1. Press **Home**  > **Menu**  > **Settings**  > **Applications** > **Storage use**.
2. Tap an item to see more detailed information about that application.

To see which applications are placing the heaviest demands on your battery:

1. Press **Home**  > **Menu**  > **Settings**  > **Applications** > **Battery use**.
2. Tap an item to see more detailed information about that application's use of system resources.

To set options for application development:

1. Press **Home**  > **Menu**  > **Settings**  > **Applications** > **Development**.
2. The following options are available:

- **USB debugging:** to enable debug mode when USB is connected. Read the disclaimer and tap **OK** to confirm.
- **Stay awake:** to prevent the screen from going into sleep mode while charging.
- **Allow mock locations:** to enable a developer to set the device to a location other than its actual location.




*Note:* Unless you have a specific reason for changing these settings, you should leave them at the default settings.

## Privacy Settings

---




### Backing Up Your Settings

You can back up your settings to a Google server.

1. Press **Home**  > **Menu**  > **Settings**  > **Privacy**.
2. Tap **Back up my data**. (A check mark indicates this feature is enabled.)

## Restoring Your Settings




Check this option to restore your settings and other data when you install an application.

1. Press **Home**  > **Menu**  > **Settings**  > **Privacy**.
2. Tap **Automatic restore**. (A check mark indicates this feature is enabled.)

## Resetting Your Device




Resetting the device restores all the factory defaults, including the ringer types and display settings. All data, including downloaded applications, is deleted.


**Important:** Back up your important data before you perform a factory reset of the device.

1. Press **Home**  > **Menu**  > **Settings**  > **Privacy** > **Factory data reset**. (You will see a disclaimer.)
2. Read the disclaimer and tap **Reset phone**.
3. If you are certain that you would like to restore all factory settings, tap **Erase everything**.

## Eco Mode

Eco Mode allows you to conserve battery power when using your device.

1. Press **Home**  > **Menu**  > **Eco Mode** .
2. Drag the onscreen slider to select one of the following options:
  - **Always** to set your device to always use the Eco Mode.
  - **10-90%** to automatically switch your device to Eco mode when the remaining battery charge falls below the selected level.
  - **Never** to disable Eco Mode.

When Eco Mode is on, the Eco Mode icon  appears on the status bar. Configured settings in Eco Mode are automatically reflected in your device's main Settings menu.

## 2C. Call Log

- ◆ Viewing the Call Log (page 68)
- ◆ Call Log Options (page 69)
- ◆ Making a Call From the Call Log (page 69)
- ◆ Saving a Number From the Call Log (page 69)
- ◆ Editing a Call Log Number (page 70)
- ◆ Erasing the Call Log (page 70)

### Viewing the Call Log

The call log is a list of the phone numbers (or Contacts entries) for calls you placed, accepted, or missed. The call log makes redialing a number fast and easy. It is continually updated as your device automatically adds new numbers to the beginning of the list.

Each entry contains the phone number (if it is available) and Contacts entry name (if the number is in your Contacts).

► Press **Home**  >  > **Call log**.

*Tip:* Drag the status bar down to reveal the Notifications panel to see a missed call notification. See “Missed Call Notification” on page 35.

*Note:* The call log records only calls that occur while the device is turned on. If a call is received while your device is turned off, it will not be included in the call log.

### Call Log Icons

You can determine if an entry was an incoming, outgoing, or a missed call from the icons shown below.


 = Incoming Call

 = Outgoing Call

 = Missed Call



## Call Log Options

- ▶ Tap a call log entry to open the overview page where the call details are displayed at the top and any available options are listed underneath:
  - **Call** [contact]/**Call again**/**Call back**/**Return call** to return the phone call.
  - **Send text message** to send a text message to the entry.
  - **View contact/Add to contacts** to display the entry's information or save the number to Contacts.
- ▶ Tap and hold an entry to display the options menu:
  - **Call** [number] to return the phone call.
  - **View contact/Add to contacts** to display the entry's information or save the number to Contacts.
  - **Edit number before call** to edit the number and then call the number.
  - **Send text message** to send a text message to the entry.
  - **Remove from call log** to delete the call information from call log.
- ▶ Press **Menu**  > **Clear call log** > **OK** to delete all call log entries.

## Making a Call From the Call Log

- ▶ From the call log, tap  adjacent to the entry you would like to call.

## Saving a Number From the Call Log

1. From the call log, tap an entry.
2. Tap **Add to contacts**.
3. Tap **Create new contact** to store the number in a new Contacts entry, or tap an existing Contact entry name to save the number to an existing entry.
4. Tap any field to enter the details.
5. Enter all the necessary details and tap **Done** to save.


Once you have saved the number, the call log list reflects the newly saved data.

*Note:* You cannot save phone numbers from calls identified as **Unknown**, **No Caller ID**, **Restricted** or **Private number**.

## Editing a Call Log Number

---

If you need to make a call from the call log and you need to edit the number before dialing, you can add the appropriate prefix by prepending the number.

1. From the call log, tap and hold an entry to display the options menu.
2. Tap **Edit number before call**.
3. Edit the number using the onscreen keyboard.
4. Tap  to call the number.

– or –

Press **Menu**  > **Add to contacts** to add the new number in your Contacts.

## Erasing the Call Log


---

You can delete either an individual or all current entries from your call log list.

To delete a single call log entry:

1. From the call log, tap and hold an entry you want to delete.
2. Tap **Remove from call log**.

To delete all call log entries:

- From the call log, press **Menu**  > **Clear call log** > **OK**.

## 2D. Contacts





### Displaying the Contacts List

 
► Press **Home**  >  > **Contacts** .

Your device automatically sorts the Contacts entries alphabetically.

- ◆ Displaying the Contacts List (page 71)
- ◆ Adding a New Contacts Entry (page 72)
- ◆ Contacts Entry Options (page 73)
- ◆ Editing a Contacts Entry (page 73)
- ◆ Adding a Number to a Contacts Entry (page 73)
- ◆ Editing a Contacts Entry's Number (page 74)
- ◆ Assigning a Ringer Type for an Entry (page 74)
- ◆ Assigning a Picture to an Entry (page 74)
- ◆ Finding Contacts Entries (page 75)
- ◆ Deleting Entries (page 75)
- ◆ Adding Entries to Your Favorites (page 75)
- ◆ Import and Export Contacts (page 75)
- ◆ Sending Contacts (page 75)
- ◆ Synchronizing and Displaying Contacts (page 76)
- ◆ Searching the Global Address List (page 77)

## Adding a New Contacts Entry

1. Press **Home**  >  > **Contacts**  > **Menu**  > **New contact**.
2. Tap any field to launch the keyboard, and enter the name, phone number, email, and other contact details.

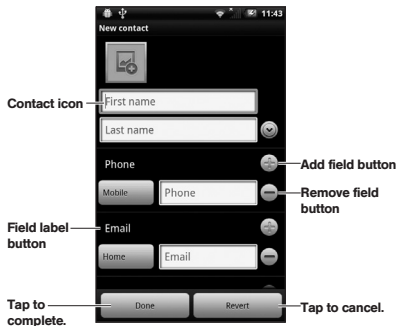


- Tap the Contact icon at the top-left corner of the screen to assign a picture to the entry. See “Assigning a Picture to an Entry” on page 74.

- To add more fields, tap the **Add field** button. To remove a field, tap the **Remove field** button.
  - To change the field label, tap the **Field label** button and tap an available option.
  - Scroll up or down to move through the contact fields.
3. To save a contact, tap **Done**.

### *Tip: ICE - In Case of Emergency*

To make it easier for emergency personnel to identify important contacts, you can list your local emergency contacts under “ICE” in your device’s Contacts list. For example, if your mother is your primary emergency contact, list her as “ICE–Mom” in your Contacts. To list more than one emergency contact, use “ICE1–\_\_\_,” “ICE2–\_\_\_,” etc.


## Contacts Entry Options

- ▶ Tap and hold a Contacts entry for the following options:
  - **View contact** to display the contact's overview page.
  - **Call contact** to call the contact.
  - **Text contact** to send a text message to the contact.
  - **Add to favorites/Remove from favorites** to add the contact to, or remove the contact from, the favorites list.
  - **Edit contact** to edit the contact's details.
  - **Delete contact** to delete the current Contacts entry from your device.
- ▶ Tap a Contacts entry and then press **Menu** :
  - **Edit contact** to edit the entry.
  - **Share** to share the data via Bluetooth, Email, or Gmail.
  - **Options** to assign a ringtone to the entry or to send calls from the entry directly to voicemail.
  - **Delete contact** to delete the entry.

## Editing a Contacts Entry

1. From the Contacts list, tap and hold the entry you want to edit, and tap **Edit contact**.
2. Tap the field you wish to edit, and then add or edit the information.
3. Tap **Done** to save your changes.

## Adding a Number to a Contacts Entry

1. From the Contacts list, tap and hold the entry you want to edit, and tap **Edit contact**.
2. Tap  within the Phone numbers area to create a new empty Phone field.
3. Tap the label button (to the left of the Phone field) and select a label for the number.
4. Tap the **Phone** field and use the onscreen keyboard to enter the new number.
5. Tap **Done** to save the new number.

## *Editing a Contacts Entry's Number*


---

1. From the Contacts list, tap and hold the entry you want to edit, and tap **Edit contact**.
2. Tap an existing phone number field.
3. Re-enter or edit the number using the onscreen keyboard.
4. Tap **Done** to save your changes.

## *Assigning a Ringer Type for an Entry*

---

Assign a ringer type to a Contacts entry so that you can identify the caller by the ringer type.

1. From the Contacts list, tap an entry.
2. Press **Menu**  > **Options**, and then tap **Ringtone**.
3. Scroll through available ringtones.
4. Tap a ringtone to select it and tap **OK** to save.

## *Assigning a Picture to an Entry*



---

Assign a picture to display each time a certain contact calls you.

1. From the Contacts list, tap and hold the entry you want to assign a picture to, and tap **Edit contact**.
2. Tap the Contact icon at the top-left corner of the screen.
3. Tap **Take photo** or **Select photo from Gallery**.
  - If you selected **Take photo**, the camera will launch and you will use it to take a new picture.
  - If you selected **Select photo from Gallery**, scroll through available pictures and tap one to select it.
4. Crop or resize the picture as required and tap **Save** to assign it.

## Finding Contacts Entries

---

1. From the Contacts list, press **Menu**  > **Search** .
2. Enter the contact's name. As you type, contacts with matching names appear below the search box.
3. Tap a matching contact in the list to open its Details screen.

## Deleting Entries

---

1. From the Contacts list, tap and hold the entry you want to delete, and tap **Delete contact**.
2. Tap **OK** to confirm the deletion.

## Adding Entries to Your Favorites

---


The Favorites tab is a listing that can help you quickly access your most used or preferred Contacts entries.

1. From the Contacts list, tap the contact you want to add to Favorites.
2. Tap the star to the right of the contact's name. The star turns blue.

## Import and Export Contacts

---

Importing Entries From the Memory Card:


1. From the Contacts list, press **Menu**  > **Import/Export** > **Import from SD card**.
2. If you have more than one account on your device, tap the account into which you want to import the contacts.
3. Tap the importing option, and then tap **OK**.

Exporting Entries to the Memory Card:

1. From the Contacts list, press **Menu**  > **Import/Export** > **Export to SD card**.
2. When asked to confirm, tap **OK**.

## Sending Contacts

---

1. From the Contacts list, press **Menu**  > **Import/Export** > **Share visible contacts**.
2. Tap the method of sharing (Bluetooth or Gmail), then continue following the onscreen prompts to finish the task.





# Synchronizing and Displaying Contacts

## Synchronizing Contacts

Syncing data from your managed accounts allows you to add and manage a new or existing contact from your online or remote accounts to your device. Prior to syncing, you must first have an active Google or Corporate account with current Contact entries, and be signed into your account via the device.

With syncing, any Contacts entries (with phone numbers, email addresses, pictures, etc.) are updated and synced with your device.

For more information about syncing existing managed accounts, see “Adding and Synchronizing Accounts” on page 54.

1. Press **Home**  > **Menu**  > **Settings**  > **Accounts & sync.**
2. Tap  to open an account's synchronization settings screen.


3. Tap the **Sync Contacts** check box to select the feature. (A check mark indicates this feature is enabled.)

*Note:* The process of updating your Contacts tab can take several minutes. If after 10-20 minutes, your list has not been updated, repeat steps 2 and 3.

4. Your **Contacts** tab then reflects any updated Contact information.
  - This update process works both ways. For example, any changes on the device are updated to your Gmail Contacts list after sync. To enable the auto-sync feature, see “To enable the auto-sync feature:” on page 55.

## Displaying Contacts

You can choose your Contacts to be displayed or not.



1. From the Contacts screen, press **Menu**  > **Display options.**
2. Tap an account and select the types of contacts to be displayed by checking them, or uncheck those types you don't wish to display.



## Searching the Global Address List

---

You can search the global address list (GAL) stored on your company's Exchange server.

1. From the Contacts screen, press **Menu**  >  
**Search GAL.**
2. Enter at least three letters of a contact's name and tap . (All Contacts entries matching the entered letters will be displayed.)
3. Tap an entry from the list.
4. Tap **Add to contacts** to add a contact to your Contacts list or tap **View detail** to view contact details.

## 2E. Calendar & Tools

- ◆ Calendar (page 78)
- ◆ Clock (page 82)
- ◆ Calculator (page 85)
- ◆ Document Viewer (page 85)
- ◆ Updating Your Device (page 86)

### Calendar

Your Calendar helps organize your time and reminds you of important events.


### Viewing the Calendar

 
To open your Calendar:

- Press **Home**  >  > **Calendar** .


*Note:* If you have not already signed into your Google and Corporate accounts via your device, you may be asked to do so before you can access the Calendar. Follow the onscreen instructions to continue.

To change your calendar view:

- Press **Menu**  and tap **Day, Week, Month, or Agenda**.
- To view more information about an event in Agenda, Day, or Week view, tap an event.
  - To view the events of a day in Month view, tap a day.

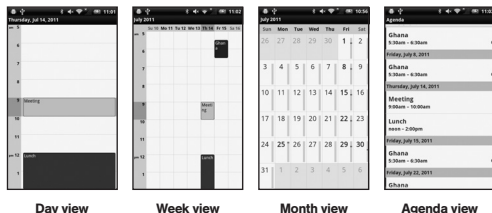


## Adding an Event to the Calendar

1. On the Calendar screen, tap a day to which you would like to add an event and press **Menu**  **> More > New event.**
2. Enter a name for the event in the **What** field.
3. To specify the date and time of the event, set the following:
  - If there is a time frame for the event, tap the **From** and **To** dates and times to set them.
  - You can use the default time zone or set a different one for the event by tapping **Time zone.**
  - To assign an event as an all day event, tap the **All Day** check box. If assigned, the time and Time zone fields are removed.
4. Enter a location for the event in the **Where** field.
5. Enter a description for the event in the **Description** field.
6. Select a calendar you want to restore this event in the **Calendar** field.
7. Enter the email addresses of the people you want to invite to the event in the **Guests** field. If they use Google Calendar, they'll receive an invitation in their calendar as well as by email.


8. Select a recurrence cycle for the event by tapping the **Repetition** field.
9. Select a reminder time by tapping the **Reminders** field. (A maximum of five Reminder fields can be added.)
10. Tap **Done** to save the event.

## Event Reminders


When you have an upcoming event, the calendar icon appears on the status bar.

1. Tap the status bar, and then slide your finger down the screen to open the Notifications panel.
2. Tap an upcoming event name from the onscreen list to display the event within the Calendar notifications screen.
3. Choose from the following options:
  - Tap an event item on the list to view its details.
  - Tap **Snooze all** to postpone all event reminders for five minutes.
  - Tap **Dismiss all** to dismiss all event reminders.
  - Press **Back**  to keep these reminders in place and close the Notifications panel.





## Changing Calendar Settings

1. From the Calendar screen, press **Menu**  > **More > Settings**.
2. Choose from the following options:
  - **Hide declined events** to hide or display those events that have been declined via the calendar application.
  - **Use home time zone** to display calendar event times in your home time zone even if you are traveling.
  - **Home time zone** to select your home time zone displayed on calendar events.
  - **Set alerts & notifications** to specify how you are reminded of upcoming events: **Alert**, **Status bar notification**, or **Off**.
  - **Select ringtone** to select an audio ringtone that will sound as a reminder.
  - **Vibrate** to add a vibration signal to the reminder.
  - **Default reminder time** to assign a default time for every new event reminder.
  - **Default calendar** to set the default calendar if you have multiple calendars when you add a new event.






- **Amount to synchronize** to set the amount to synchronize between your device and exchange server. Choose from **2weeks**, **1 month**, **3 months**, **6 months**, or **All**.


3. Press **Back**  to return to the calendar.

## Viewing Events






1. Press **Home**  >  > **Calendar** .
2. Press **Menu**  > **Agenda**.
3. Tap an event to display the details.

## Editing an Existing Event

1. Press **Home**  >  > **Calendar** .
2. Press **Menu**  > **Agenda**.
3. Tap an event to reveal the event details.
4. Press **Menu**  > **Edit event**. If the event is a repeating event, you will be prompted to select **Change only this event**, **Change all events in the series**, or **Change this and all future events**.
5. Edit the name, location, repetition, reminders, etc.





- Press **Menu**  > **Show extra options** for further options.
  - **Show me as:** Select your status to display as **Busy** or **Available**.
  - **Privacy:** Select your privacy setting from **Default**, **Private**, or **Public**.
- Scroll to the bottom of the page and tap **Done** to save the changes.

## Erasing a Day's Events

- Press **Home**  >  > **Calendar** .
- Press **Menu**  > **Agenda**.
- Tap an event to reveal the event details.
- Press **Menu**  > **Delete event** > **OK**.

**Note:** If the day for which you are erasing events contains a repeating event, you will be prompted to select **Only this event**, **This & future events**, or **All events**. Select **Only this event** to erase a single occurrence, **This & future events** to erase this event going forward, **All events** to erase all occurrences of the event (past/present/future), or **Cancel** to cancel the deletion of the repeating event.

## Hiding Declined Events





- Press **Home**  >  > **Calendar** .
- Press **Menu**  > **More** > **Settings** > **Hide declined events**. (A check mark indicates this feature is enabled.)

## Synchronizing and Displaying Calendar Events

Initially, all calendars that you create or subscribe to through Google Calendar on the Web are also displayed in the Calendar application on your device. You can select which calendar events to show or hide on the device and which to keep synchronized.

**Tip:** You can also control whether any data is synchronized to your device by using the Accounts & sync settings menu. (See "Adding and Synchronizing Accounts" on page 54.)

To synchronize calendar events and show or hide them:

 
1. In any Calendar view, press **Menu**  **> More > Calendars.**
2. Tap the button to the right of the name of an account.
  -  - calendar events are synchronized with and visible on your device.
  -  - calendar events are synchronized with but not visible on your device.
  -  - calendar events are not synchronized with or visible on your device.
3. Tap **OK**.



## Clock

The Clock application functions as a desk clock that shows the date, time, and weather information. You can also use it to turn your device into an alarm clock.

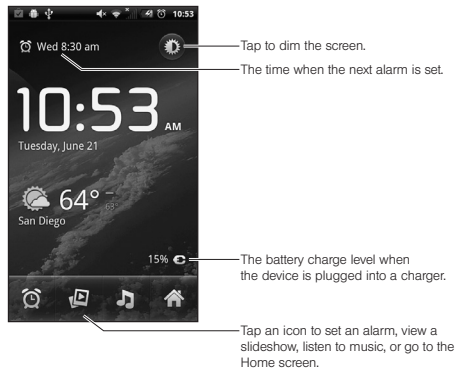

To open the Clock application:

- Press **Home**  **> App Drawer**  **> Clock** . (You will see date, time, and weather information.)




- Tap the Dimmer icon  to dim the screen.
- To return to the Home screen, tap the Home tab  at the bottom of the Clock screen.





To play a slideshow of the pictures in your Gallery albums:


- ▶ Tap the Slideshow tab  at the bottom of the Clock screen.
- Press **Back**  to end the slideshow.

To play music while the Clock is displayed:

- ▶ Tap the Music tab  at the bottom of the Clock screen. (The Music application opens. Select desired music to play. For more information, see “Music” on page 155.)


## Setting an Alarm

 
1. Press **Home**  >  > **Clock** .
2. Tap the Alarms tab  on the bottom of the screen.

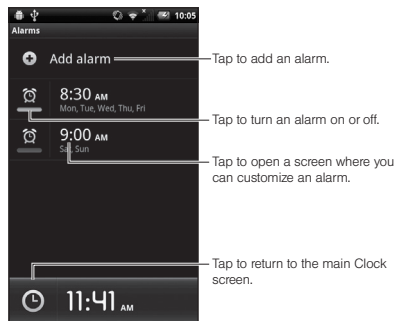


*Note:* When you first open the alarms, two alarms are set up by default and ready for you to customize. These alarms are turned off by default.

3. Tap an existing alarm to change the settings or tap **Add alarm** to add a new one.




*Tip:* From the Alarms screen, you can also create a new alarm by pressing **Menu**  > **Add alarm**.

4. Tap **Time** to adjust the hour and minute by tapping + or -.
5. Tap **Repeat** to select a repeat status for the alarm.
6. Tap **Ringtone** to select a ringtone that will play as an alarm.
7. Tap **Vibrate** to add a vibration feature to the alarm.
8. Tap **Label** to enter a name for the alarm.
9. When you're finished, tap **Done**. (Alarms that are set are underlined in blue.)
  - Tap the alarm icon  next to an alarm to turn it on or off.

To delete an Alarm:

1. Tap  at the bottom of the Clock screen.
2. From the Alarms screen, tap and hold a desired alarm, and then tap **Delete alarm**.
3. Tap **OK** to confirm the deletion.

## Changing Alarm Settings

 
1. Tap  at the bottom of the Clock screen.
2. From the Alarms screen, press **Menu**  > **Settings** .
3. Configure the following options:
  - **Alarm in silent mode** to sound the alarm even while the device is in silent mode.
  - **Alarm volume** to set the alarm volume.
  - **Snooze duration** to set the snooze duration from 5 to 30 minutes in 5 minute intervals.
  - **Volume button behavior** to select the behavior of the volume buttons when pressed while the alarm sounds. Choose from: **None**, **Silence**, **Snooze**, or **Dismiss**.





## Calculator

Your device comes with a built-in calculator.

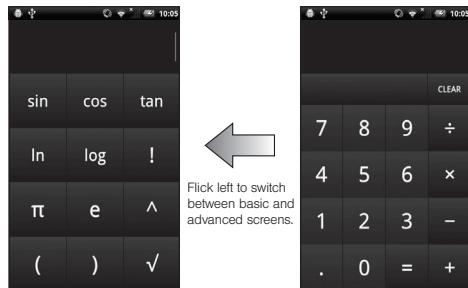1. Press **Home**  >  > **Calculator** .



Flick left to switch between basic and advanced screens.

2. Enter numbers by tapping the onscreen keys.
  - Tap **CLEAR** to clear a number. Tap and hold **CLEAR** to clear an entire number.
  - To access more advanced features, flick the screen left or press **Menu**  > **Advanced panel**.
3. Press **Back**  to close the calculator.






## Document Viewer

Document Viewer allows you to launch a file if the associated application is already on your device.

### Accessing Document Viewer



- Press **Home**  >  > **Document Viewer** .

### Opening Files in Document Viewer

1. Press **Home**  >  > **Document Viewer** .
2. Tap **Folders** and navigate to the folder that contains a specific file, or tap a file extension (.doc, .xls, etc.) to display a list of all files with that extension.
  - Press **Back**  to back up into a higher directory.
3. Once you have located your file, tap the file name to launch the associated application.
  - Press **Menu**  for these additional options: **Go to**, **Find**, **Page display**, **Copy**, **Settings**, and **More**.

## Updating Your Device

You can update your device using the System Update options.




- ▶ From the Home screen, press **Menu**  > **Settings**  > **System Update**.
  - **Update Android** to download and install Android updates. Select **Check Now** or **Scheduled Check**.
  - **Update Kyocera software** to automatically download and install any available updates. You may be required to power your device off and back on to complete the software upgrade.

*Note:* Updating your device software may erase all user data from your device. Please make sure to back up all important data before updating your device software. (See “Backing Up Your Data Before Updating” on page 86.)

- **Update Profile** to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your device.
- **Update PRL** to automatically update the PRL (preferred roaming list).

*Note:* You can also update your device from the Sprint Zone. (See page 150.)

## Backing Up Your Data Before Updating

1. Press **Home**  > **Menu**  > **Settings**  > **Accounts & sync**.
2. Tap the desired account field to open an account's synchronization settings screen.
3. Tap the types of data you wish to synchronize. (A check mark indicates the feature is enabled. You will see a rotating sync symbol. This process manually synchronizes the selected data.)

## 2F. Voice Services

- ◆ Automatic Speech Recognition (ASR) (page 87)
- ◆ Voice Search (page 89)
- ◆ Text-to-Speech (page 89)

### Automatic Speech Recognition (ASR)

You can use your device's built-in automatic speech recognition (ASR) software (Voice Dialer) to dial a phone number in your Contacts or to launch device functions. All you have to do is talk into the device, and ASR will recognize your voice and complete tasks by itself.

#### Activating the Voice Dialer

- Press **Home**  >  > **Voice Dialer** .

The device prompts you to say a command from the list displayed on the screen. To complete your task, simply follow the onscreen prompts or tap an onscreen option.




If the application does not recognize the number, name, or application name, it will find the most likely matches and display a list. Tap a selection or tap **Cancel** to exit the Voice Dialer.

*Tip:* Use ASR in a quiet environment so it can accurately recognize your commands.




#### Making a Voice Call With the Voice Dialer

1. Press **Home**  >  > **Voice Dialer** .
2. When prompted to speak, say "**Call** [contact]" or "**Dial** [number]."
  - For example, say "**Call John Smith on mobile**," to call John Smith's mobile phone. Your device dials the number stored for the contact "John Smith" with the label "Mobile."
3. Tap **OK** to confirm or **Cancel** to cancel the command.




## Opening an Application With the Voice Dialer

1. Press **Home**  >  > **Voice Dialer** .
2. When prompted to speak, say “**Open** [application name].”
  - For example, say “**Open Calendar**,” to open the Calendar. The application screen is displayed.
3. Tap **OK** to confirm or **Cancel** to cancel the command.

## Opening a Settings Menu With the Voice Dialer

1. Press **Home**  >  > **Voice Dialer** .
2. When prompted to speak, say “**Open** [settings menu name].”
  - For example, say “**Open Sound settings**.” The settings menu screen is displayed.
3. Tap **OK** to confirm or **Cancel** to cancel the command.

## Google Voice Recognition Settings

- ▶ Press **Home**  > **Menu**  > **Settings**  > **Voice input & output** > **Voice recognizer settings**.
  - **Language** to set the language used when entering text by speaking.
  - **SafeSearch** to filter explicit text and images from the search results. Select from **Off**, **Moderate**, or **Strict**.
  - **Block offensive words** to replace recognized offensive words in transcriptions with [#] when entering text by speaking.
  - **Personalized recognition** to associate the words that you've used in ASR with your Google account. Enable this feature to improve speech recognition accuracy.
  - **Google Account dashboard** to view and manage all Google data associated with your Google Account.

## Voice Search

Voice Search allows you to find information on the web as well as items and information on your device by speaking your search terms.

1. Press **Home**  >  > **Voice Search** .

– or –




Tap  on the Google Search Bar.

*Tip:* The first few times you open Voice Search, it offers hints about how to use it and offers to play an introductory video. You can tap **Speak now** to use Voice Search at any time.

2. Speak clearly into the device's microphone. If an error occurs, tap **Speak again**.
3. Tap a matching item from the onscreen list.

## Text-to-Speech

Your device can convert text into speech in some downloaded applications. You may select the language you hear or adjust its speed.

1. Press **Home**  > **Menu**  > **Settings**  > **Voice input & output** > **Text-to-speech settings**.
2. Tap **Speech rate** and select a speed.
3. Tap **Language** and select a language.
4. Tap **Listen to an example** to play a short demonstration of the set speech synthesis.
5. Select the **Always use my settings** check box to keep your settings.

## 2G. microSD Card

- ♦ Your Device's microSD Card and Adapter (page 90)
- ♦ microSD Card Settings (page 92)
- ♦ Use the Device's microSD Card as a USB Drive (page 93)
- ♦ Important Connection Information (page 94)

### Your Device's microSD Card and Adapter




#### The microSD Card

Your device is equipped with a preinstalled 8GB microSD™ (Secure Digital) memory card and its adapter to expand the device's available memory space. It allows you to store images, videos, and music data in your device.

**Note:** Be sure to use only recommended microSD cards (up to 32GB). Using non-recommended microSD cards could cause data loss and damage your device.

 
#### Removing the microSD Card

When you need to remove the microSD card while the device is turned on, you must unmount the card first to avoid damaging it or corrupting stored data.

1. Press **Home**  > **Menu**  > **Settings**  > **Storage**.
2. Tap **Unmount SD card**.
3. Open the microSD card slot cover.
4. Gently push the microSD card inward and then release to eject it.
5. Remove the card from the slot and close the slot cover.

#### Re-inserting the microSD Card

1. Open the microSD card slot cover.
2. Insert a microSD card into the slot with the metal contacts facing down.
3. Gently push the microSD card until it snaps into place.
4. Close the microSD slot cover.



**Note:** You can easily damage the microSD card and its adapter by improper operation. Please be careful when inserting, removing, or handling it.

**DO NOT** remove a microSD card while files are being accessed or transferred. Doing so will result in loss or damage of data.

Make sure your battery is fully charged before using the microSD card. Your data may become damaged or unusable if the battery runs out while using the microSD card.

## microSD Icon Indicators

The following icons show your microSD card connection status at a glance:



– microSD card is being prepared for use and for mounting.



 
– microSD card has been removed.

## microSD Adapter

The supplied microSD adapter allows you to use microSD cards in other SD-compatible devices, like computers, cameras, and printers. Before using the microSD card with an SD-compatible device, you will need to insert the microSD card into the microSD adapter.


To insert the microSD card into the microSD adapter:

- ▶ With the label side of the microSD card facing up, insert the card into the supplied microSD adapter, and gently slide the card until it is fully inserted.

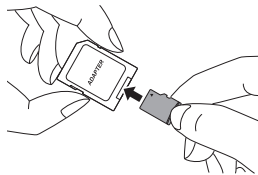

To remove the microSD card from the microSD adapter:

 
- ▶ Hold the front edge of the microSD card, and gently pull it out to remove it from the adapter.

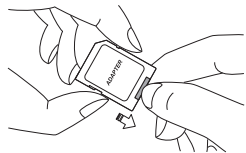

## Write Protection

The microSD adapter has a built-in Write Protection lock to prevent accidental overwriting or removal of your data when the microSD card and adapter are inserted in another device.

 - ▶ Slide the Write Protection lock tab down into the “Lock” position to prevent overwriting of data. To allow data to be added or removed from the microSD card, slide the Write Protection lock tab up into the normal position.



## microSD Card Settings

### Viewing Card and Device Memory

Your device allows you to review the memory allocation of both your device's internal storage and that of the microSD card.

1. Press **Home** [Home icon] > **Menu** [Menu icon] > **Settings** [Settings icon] > **Storage**.
2. Review the available information.
  - The storage capacity page is divided into two sections: **SD card** and **Internal storage**.
3. Press **Back** [Back icon] to return to the previous page.

### Formatting the microSD Card

Formatting a microSD card permanently removes all files stored on the card.

1. Press **Home** [Home icon] > **Menu** [Menu icon] > **Settings** [Settings icon] > **Storage**.
2. Tap **Unmount SD card** to release the microSD card from its use by the device.
3. Once released, tap **Erase SD card** > **Erase SD card** > **Erase everything**.
  - Once completely formatted, the card is automatically remounted (reconnected for use by the device).

**Important:** The formatting procedure erases all the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.




## Use the Device's microSD Card as a USB Drive

To transfer music, pictures, and other files from your computer to your device's microSD card, you need to set the device's microSD card as a USB drive.

1. Connect your device to your computer using the included micro-USB cable. (Wait for the connection to be completed. If a dialog box is displayed, click **Cancel** to proceed.)

*Note:* The process may vary depending on the operating system being used.

2. The USB icon () now appears on the left side of the status bar on your device.
3. When the PC connection dialog box appears, tap **Mass Storage**, and then tap **Done**.
4. On your computer, the connected device is recognized as a removable disk. Navigate to this removable disk and open it.
5. Do one of the following:
  - Copy files from the computer to the root folder on the device's storage card.

- Copy files from the device's storage card to a folder on your computer or computer desktop.
6. After copying the files, unmount the removable disk (that is, the connected device) as required by your computer's operating system to safely remove your device, and do either of the following:
    - Disconnect the device from the computer.
    - If you want to keep the device connected to the computer but want the device to be able to access and use the storage card, open the Notifications panel, tap **Mass Storage**, select an option other than Mass Storage, and then tap **Done**.

*Note:* The device will not recognize the microSD card when it is connected to a computer as a disk drive. You will not be able to use some of the device's applications such as the camera or Music.

### Creating Folders on the microSD Card

1. On your laptop or desktop computer, click **Start > My Computer > [drive letter]**.
2. Right click and select **New > Folder**.
3. Enter a name for the new folder.

## Important Connection Information

---

- Your device supports Windows XP/Vista/7. Other operating systems may not be compatible.
- To avoid loss of data, DO NOT remove the micro-USB cable, the microSD card, or the battery while files are being accessed or transferred.
- DO NOT use your computer to change or edit folder or file names on the microSD card, and do not attempt to transfer large amounts of data from the computer to the microSD card. Doing so may cause the microSD card to fail.
- DO NOT turn off or restart your computer, or put it into standby mode, while using a mass storage device. Doing so will result in loss or damage of data.
- The internal microSD card can only be mounted for use by either the device or a connected computer. Prior to accessing the card via a different method, it must first be unmounted from its current device (your Echo or your computer's USB port).

**Important:** The internal microSD card can't share a connection with your device and your computer (via USB) at the same time.

## 2H. Camera

- ◆ Taking Pictures (page 95)
- ◆ Recording Videos (page 100)
- ◆ Opening Gallery (page 102)


*Note:* You need to insert a microSD card into your device to use the camera and camcorder features. All pictures and videos will be stored on the inserted microSD card.

### Taking Pictures

Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the lens, and tapping the onscreen buttons.

 
To take a picture:

1. Press **Home**  >  > **Camera**  to activate camera mode.


2. Using the device's display screen as a viewfinder, aim the camera lens at your subject.
3. Tap the shutter button  to take the picture. (Your device automatically saves the picture to the DCIM folder on the microSD card.)

### Camera Viewfinder

When you open the camera, the viewfinder opens in portrait or landscape mode depending on the orientation of the device. You will find the following controls on the viewfinder screen:

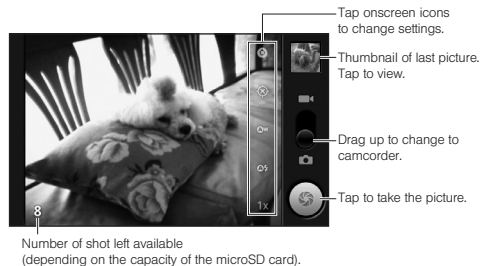

 With both screens open, you will find the following controls:

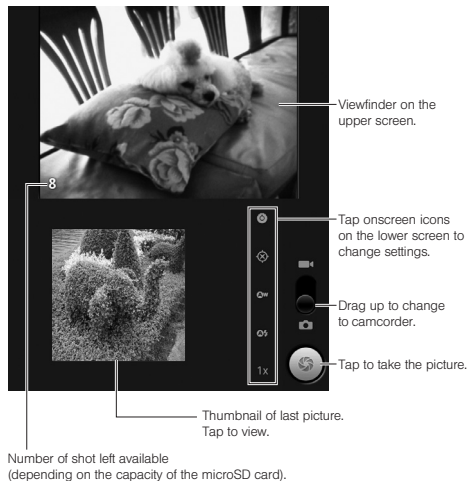

## Camera Viewfinder Icons

In the camera viewfinder, icons show the current setting. Tap the icon for the settings you want to change. The settings open over the screen.



### Settings

Tap to open a scrolling list of settings. (See “Changing Camera Settings” on page 99.)



### Store location

Tap to activate the built-in GPS application and attach the current location information to the pictures you will take. Choose from: **On** or **Off**.



### White balance

Tap to compensate for color differences found within different lighting conditions. Choose from: **Auto**, **Daylight**, **Cloudy**, **Incandescent**, or **Fluorescent**.



### Flash mode



Tap to set the flash mode from **Auto**, **On**, or **Off**.




### Zoom

Tap to adjust the zoom from **1X** to **2X**.





## Picture Options

1. From the camera mode, press **Menu**  > **Gallery** .
2. Tap and hold the picture to select it and display the following picture options:
  - **Share** to share the picture via jibe, Picasa, Bluetooth, Messaging, Gmail, or any other photo-sharing applications.
  - **Delete** to delete the current picture.
  - **More** to access additional picture options:
    - **Details** to display picture details such as file name, file type, date taken and folder name.
    - **Show on map** to view the location where you took the picture in Google Maps.
    - **Set as** to assign the picture to either a Contact's display picture or the wallpaper.
    - **Crop** to crop the picture. Tap **Save** to save the cropped picture as a separate data.
    - **Edit Image** to edit the picture according to your preferences. (See "Edit Image Function" on page 98 for details.)

- **Rotate Left** to rotate the picture counterclockwise.
  - **Rotate Right** to rotate the picture clockwise.
  - **Select All** to select all images and videos in the folder.
  - **Deselect All** to cancel all selection.
3. Press **Back**  to return to camera mode.

## Assigning Pictures

Assign a picture as a picture ID for a Contacts entry or as the Home screen background image (wallpaper).

1. Press **Home**  >  > **Gallery** .
2. From the Camera gallery (or other image folder), tap a picture to open it.
3. Press **Menu**  > **More** > **Set as**, and then select an option:
  - **Contact icon** to assign the picture to a Contacts entry as a picture ID. Tap an entry from the Contacts tab, crop the image and tap **Save** to assign the picture.
  - **Wallpaper** to assign the picture as a background image. Crop the image and tap **Save** to assign the picture.

## Edit Image Function




With this feature you can draw with your finger, insert text, and add stamps to transform your pictures.




1. Press **Home** > > **Gallery** .
2. Tap an album to open it, and then tap and hold the picture you want to edit. (A check mark appears at the upper right corner of the selected picture).
3. Tap **More** > **Edit Image**, and then select an option.
  - Tap **Draw** to draw with your finger. Select the line size, type, and color.

- Tap **Stamp** to open the stamps palette. (Flick the palette left to show more stamps.) Tap a stamp to select it, and then tap the area of the picture where you want to place the stamp.
  - Tap **Text** to add text to your picture. Tap the **Input letter** field and enter text you want to insert into the picture. Select the text size, type, and color, and then tap the area of the picture where you want to place the text.
  - Tap **Eraser** to erase the current edit. Select the size of the eraser and repeatedly drag over the area where you want to erase. Tap **Erase All** > **Yes** to erase all editing in the picture.
  - Tap **View** to zoom in or out the picture. You can zoom in and out by tapping or . When zoomed in, slide your finger on the screen to show the hidden area.
  - Tap **Hide** to hide the editing screen and to expand your picture across both screens.
  - If you need to remove or restore an edit, tap **Undo** or **Redo**.
4. Press **Menu** > **Save** to save the edited picture.


## Playing a Slideshow

1. Press **Home**  >  > **Gallery** .
2. From the Camera gallery (or other image folder), tap a picture to open it.
3. Tap **Slideshow** to start a slideshow.
  - To stop the slideshow, tap a display.

## Changing Camera Settings




1. In the camera viewfinder, tap the settings icon  to open a scrolling list of settings:
  - **Focus mode** to select the range in which the lens can focus. Choose from: **Auto**, **Macro**, or **Normal**.
  - **Picture size** to select from: **5M Pixels**, **3M Pixels**, **2M Pixels**, **1M Pixels**, **WVGA**, or **VGA**.
  - **Picture quality** to select the quality of the pictures from: **Super fine**, **Fine**, or **Normal**.
  - **Color effect** to add a color effect to the picture. Choose from: **None**, **Mono**, **Sepia**, **Negative**, or **Solarize**.
  - **Scene mode** to select a scene mode from: **Auto**, **Portrait**, **Scenery**, **Night portrait**, **Night scenery**, or **Action**.

*Note:* **Focus mode**, **Auto exposure**, **Select ISO** and **White balance** are not available when a particular Scene mode is selected.



- **Select ISO** to select the ISO level from: **ISO Auto**, **ISO100**, **ISO200**, or **ISO400**.
  - **Auto exposure** to select the exposure metering range from: **Frame average**, **Center weighted**, or **Spot metering**.
  - **Lens shading** to adjust the light volume around the lens. Choose from: **Enable** or **Disable**.
  - **Shutter sound** to select a shutter sound setting (**On** or **Off**).
  - **Camera settings** to restore all of the camera's settings to their default values.
2. Tap the setting category you want to control and then tap a setting.
  3. Press **Back**  to close the settings menus.

## Recording Videos




 
In addition to taking pictures, you can record, view, and share videos with your device's built-in video camera.

1. Press **Home**  >  > **Camera**  to activate camera mode.
2. Move the camera mode slider to the camcorder position () to activate camcorder mode.
3. Select **Video Mail** or **Long Video**.

*Note:* The maximum length that you can make a video attachment is 15 seconds.

4. Using the device's display screen as a viewfinder, aim the camera lens at your subject.
5. Tap the Record button  to begin recording.
6. Tap the Stop button  to stop recording. (Your device automatically saves the video within the DCIM folder on the microSD card.)

## Previewing Videos

1. Press **Home**  >  > **Gallery** .
2. From the Camera album (or other image folder), tap a video clip to play.
  - To show the video controls, tap the display while the video is playing. Tap the controls  to rewind or pause or fast forward the video.

## Video Viewfinder Icons

In the video viewfinder, icons show the current settings. Tap the icon for the settings you want to change. The settings appear over the screen.



### Settings

Tap to open a scrolling list of settings. (See “Changing Camcorder Settings” on page 101.)



### White balance



Tap to compensate for color differences found within different lighting conditions. Choose from: **Auto, Daylight, Cloudy, Incandescent, or Fluorescent.**

High **Video quality** (For Long Video mode only)



Tap to select the quality of the video from **High (30m), Medium (Wide, 30m), Medium (30m), Low (30m), or YouTube (High, 10m).**



## Video Options

1. From the camcorder mode, press **Menu**  > **Gallery** .
2. Tap and hold the video clip to select it and display the following video options:
  - **Share** to share the video via Messaging, Bluetooth, YouTube, Gmail, or any other video-sharing applications.
  - **Delete** to delete the video.
  - **More > Details** to display video details such as file name, file type, date taken, and folder name.
  - **Select All** to select all images and videos in the folder.
  - **Deselect All** to cancel all selection.

 
## Changing Camcorder Settings


1. In the video viewfinder, tap the settings icon  to open a scrolling list of settings:
  - **Color effect** to add a color effect to the picture. Choose from: **None**, **Mono**, **Sepia**, **Negative**, or **Solarize**.
  - **Auto exposure** to select the exposure metering range from: **Frame average**, **Center weighted**, or **Spot metering**.
  - **Lens shading** to adjust the light volume around the lens. Choose from: **Enable** or **Disable**.
  - **Shutter sound** to select a shutter sound setting (**On** or **Off**).
  - **Camera settings** to restore all of Camera's settings to their default values.
2. Tap the setting category you want to control and tap a setting.
3. Press **Back**  to close the settings menus.

# Opening Gallery


You can use Gallery to view pictures and play videos that you've taken with your device's camera, downloaded, or copied onto your microSD card.

1. Press **Home**  >  > **Gallery** .

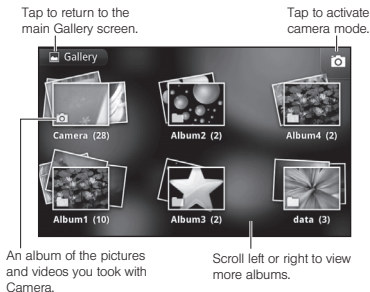

 
2. Tap an album to open it and view its contents.
3. Tap a picture or video in an album to view it.
4. After viewing, tap  at the top left of the screen to return to the main Gallery screen.



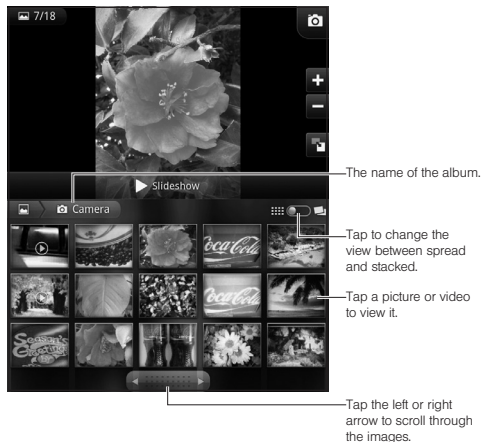





If you select an album and slide open the device, the thumbnail images in your selected album will be displayed in the lower display.



## Gallery Options

The Gallery options are available by pressing **Menu**  to edit, share, and perform other operations to the images in your Gallery. See “Picture Options” on page 97 and “Video Options” on page 101 for details.

Additional options may also be available:

- Tap  on the top right to activate camera mode.  
Press **Back**  to return to Gallery.
- Tap  or  to zoom in and out.
- Tap  to view the images in Tablet mode. Tap  to change back to normal mode.
- Tap an album and then tap  on the lower display to scroll through the images in the album.  
Drag left or right to scroll rapidly.
- Tap an album and then tap  on the top right to change the view between spread and stacked.  
The images are sorted according to the date they were captured in stacked view.
- Tap an image and then tap **Slideshow** to view the images in the folder slideshow. (See “Playing a Slideshow” on page 99.)

## 2l. Bluetooth

- ♦ Turning Bluetooth On and Off (page 104)
- ♦ Using the Bluetooth Settings Menu (page 105)
- ♦ Pairing Bluetooth Devices (page 105)
- ♦ Sending Items via Bluetooth (page 107)

### About Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, and wireless phones. The Bluetooth communication range is usually up to approximately 30 feet.

### Turning Bluetooth On and Off





By default, your device's Bluetooth feature is set to **Off**.

Bluetooth operates in three modes:




- **On:** Bluetooth is turned on. Your device can detect other Bluetooth devices but other devices cannot detect your device.
- **Discoverable:** Bluetooth is turned on. Your device can detect other Bluetooth devices and other devices can also detect your device for 120 seconds.
- **Off:** Bluetooth is turned off. Information cannot be sent or received when Bluetooth is turned off.

*Note:* Activating Bluetooth can drain your battery faster and reduce your available usage times. It is recommended that you turn it off when not needed.

To turn Bluetooth on:



1. Press **Home**  > **Menu**  > **Settings**  > **Wireless & networks**.
2. Tap the **Bluetooth** check box to turn on. (A check mark indicates this feature is enabled.) When active,  appears on the status bar.
3. To make your device discoverable, tap **Bluetooth settings**, and then tap the **Discoverable** check box to enable other Bluetooth devices to detect your device for 120 seconds.

To turn Bluetooth off:

1. Press **Home**  > **Menu**  > **Settings**  > **Wireless & networks**.
2. Clear the **Bluetooth** check box to deactivate Bluetooth.

## Bluetooth Status Indicators



The following icons show your Bluetooth connection status at a glance:

-  – Bluetooth is active
-  – Bluetooth data connection is active

## Using the Bluetooth Settings Menu

The **Bluetooth Settings** menu allows you to set up your device's Bluetooth service.

To access the Bluetooth Settings menu:

1. Press **Home**  > **Menu**  > **Settings**  > **Wireless & networks** > **Bluetooth settings**.
  - Verify your Bluetooth is active.

2. Set your Bluetooth options: **Device name**, **Discoverable**, and **Scan for devices**.

- Tap **Device name** and rename your device for Bluetooth. Tap **OK** to save.
- Tap **Discoverable** to make your device visible, allowing it to be detected by other devices for pairing and communication.

*Note:* Your device is visible for up to 120 seconds (two minutes). This value appears as a countdown within the **Discoverable** field.

- Tap **Scan for devices** to search for visible external Bluetooth-compatible devices such as headsets, devices, printers, and computers.

## Pairing Bluetooth Devices

### Paired Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device. When you pair devices, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your device with another Bluetooth device:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Discoverable**. Your device must be visible to successfully pair with an external device.
3. Tap **Scan for devices**. Your device will display a list of discovered in-range Bluetooth devices.
4. Tap a device you would like to pair with, enter a passkey, if necessary, and tap **OK**.

*Note:* Some devices may be paired by tapping **Pair** when the option is available.




5. The device will be paired when it enters the same passkey.

*Note:* If you're asked for a passcode and you're not sure what it is, try "0000" or "1234." If neither of these works, consult the Bluetooth device's documentation.




Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

*Note:* Pairing between two Bluetooth devices is a one-time process. Once a pairing has been created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passkey again.

To disconnect Bluetooth devices:

1. Press **Home**  > **Menu**  > **Settings**  > **Wireless & networks > Bluetooth settings**.
2. Under the Bluetooth devices section, tap and hold the connected device.
3. On the options menu, tap **Disconnect**.

To unpair Bluetooth devices:





1. Press **Home**  > **Menu**  > **Settings**  > **Wireless & networks > Bluetooth settings**.
2. Under the Bluetooth devices section, tap and hold the paired device.
3. On the options menu, tap **Unpair** or **Disconnect & unpair** (when connected).

## Sending Items via Bluetooth




Depending on your paired devices' settings and capabilities, you may be able to send pictures, Contacts information, or other items using a Bluetooth connection.

**Note:** Before using this feature, Bluetooth must first be enabled, and the recipient's device must be visible. If no devices are detected, tap **Scan for devices** to begin a new search.

To send contacts information:

1. Press **Home**  >  > **Contacts** .
2. Tap an entry to open its details page.
3. Press **Menu**  > **Share** > **Bluetooth**.
4. Tap a paired device.
  - The external Bluetooth device must be visible and communicating for the pairing to be successful.

To send pictures or videos:

1. Press **Home**  >  > **Gallery** .
2. Tap an album to open it and view its contents.
3. Tap and hold the picture or video to share. (A check mark appears at the upper right corner of the selected picture or video).
4. Tap **Share** > **Bluetooth**.
5. Tap a paired device.
  - The external Bluetooth device must be visible and communicating for the pairing to be successful.





*Section 3*  
***Sprint Service***



## 3A. Sprint Service: The Basics




- ◆ Voicemail (page 110)
- ◆ Messaging (page 112)
- ◆ Caller ID (page 116)
- ◆ Call Waiting (page 116)
- ◆ Making a 3-Way Call (page 117)
- ◆ Call Forwarding (page 117)
- ◆ Roaming (page 118)

### Voicemail

#### Setting Up Your Voicemail

Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off. You should set up your Sprint Voicemail and personal greeting as soon as your device is activated.

Always use a password to protect against unauthorized access.


1. Press **Home**  >  to access the phone keypad.
2. Tap and hold **1** .
3. Follow the system prompts to:
  - Create your password.
  - Record your name announcement.
  - Record your greeting.

#### Note: Voicemail Password

Sprint strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your device is able to access your voicemail messages.

#### Voicemail Notification

There are several ways your device alerts you to a new message:

- By sounding the assigned ringer type.
- By the LED blinking green (slow).
- By displaying  at the top of your screen.

## New Voicemail Message Alerts

When you receive a new voicemail message, the voicemail icon will appear on the status bar.

To call your voicemail from the notification screen:

1. Drag the status bar down to open the Notifications panel.
2. Tap **New voicemail**. (Your device will dial your voicemail box.)

**Note:** When you are roaming off the Nationwide Sprint Network, you may not receive notification of new voicemail messages. Sprint recommends that you periodically check your voicemail by dialing your area code + your wireless phone number. When your voicemail answers, tap **\*** and enter your password. Roaming rates apply when you access voicemail while roaming off the Nationwide Sprint Network.

Your device accepts messages even when it is turned off. However, your device notifies you of new messages only when it is turned on and you are in a Sprint service area.

## Retrieving Your Voicemail Messages

You can manually retrieve your messages directly from your wireless device or from any other touchtone phone. To dial from your wireless device, either dial your voicemail or use the menu keys.

### Using One-Touch Message Access

- Tap and hold **1** on the **Phone** screen. (Your device will dial your voicemail box.)

**Note:** You are charged for airtime minutes when you are accessing your voicemail from your wireless device.

### Using Another Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press the star key (\*).
3. Enter your password.

## Messaging

With messaging, you can send and receive instant messages between your device and another messaging-ready device.

There are two types of messaging, Text Messaging (SMS) and Multimedia Messaging (MMS).

Multimedia messages consist of both text and multimedia files, such as pictures, videos, or voice recordings.

### New Messages Notification

 
Depending on your notification settings, the device will play a ringtone, vibrate, or display the message briefly on the status bar when you receive a new text or multimedia message. To change the notification for new text and multimedia messages, see “Messaging Settings” on page 114 for details.

To open the message:


1. Drag the status bar down to open the Notifications panel.
2. Tap the new message to open and read it.

## Composing Messages

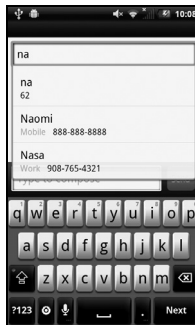

1. Press **Home** > **Messaging** > **New message**.
2. Enter the phone number or email address of the recipient in the **To** field using the onscreen keyboard. As you type, entries with matching information in your Contacts will appear in a list. Tap an entry to select it.







3. Enter a message in the text field.

4. To access more features, press **Menu**  for the following options:
  - **Add subject** to add a subject to the message.
  - **Attach** to add a file attachment. See “Attaching Files to a Message” below.
  - **Insert smiley** to add smiley icons to the message.
  - **Discard** to discard the message.
  - **All threads** to display a summary of all threads currently on your device.
5. Review your message and tap **Send**.




### *Attaching Files to a Message*

1. On the message composition screen, press **Menu**  > **Attach**.
2. Select a multimedia attachment type:
  - **Pictures**: Opens the Gallery application. Select the picture you wish to send with the outgoing message.
  - **Capture picture**: Opens the camera application. Take a picture, and then tap **OK** to use this image in your message.
  - **Videos**: Opens the Gallery application. Use the onscreen navigation to select a video and attach it to your outgoing message.
  - **Capture video**: Opens the camcorder application. Shoot a video, and tap **OK** to use this video in your message.
  - **Audio**: Opens the **Select audio** window. Select an audio file and tap **OK**.
  - **Record audio**: Opens the message recording application. Record an audio clip and tap either **Use this recording** or **Discard**.
  - **Slideshow**: Opens the Edit slideshow screen.
    - Tap **Add slide** to create a new slide. (This is a placeholder for new images to be added, similar to a playlist.)
    - Tap the created slide (example, **Slide 1**), tap **Add picture**, and then select the picture you want to add to the slide.
    - Tap the text field below the image to enter a caption for the picture.
    - Press **Menu**  > **Preview** (to preview the slide), **Remove picture** (to delete the currently selected picture), **Add music**, **Add slide**, or change the slide **Duration** or **Layout**.
    - When finished, tap **Done** to attach the slideshow to your message.

To view and play a multimedia message:





1. Press **Home**  >  > **Messaging** .
2. From the Messaging screen, tap a multimedia message to open its contents.
3. While the message is open, tap  to play the file.

To reply to a multimedia message:

1. Press **Home**  >  > **Messaging** .
2. From the Messaging screen, tap a multimedia message to open its contents.
3. While the message is open, tap the **Type to compose** field, and then type your reply message.
4. Once complete, tap **Send**.


## Deleting a Message or Message Thread

To delete a message thread:

1. Press **Home**  >  > **Messaging** .
2. On the All messages screen, tap the message thread that you want to delete.
3. Press **Menu** , and then tap **Delete this thread**.

4. When prompted to confirm, tap **Delete**.

To delete all message threads:

1. On the All messages screen, press **Menu**  > **Delete all threads**.
2. When prompted to confirm, tap **Delete**.

To delete a single message:

1. While viewing a message thread, press and hold the message that you want to delete.
2. Tap **Delete message** on the options menu.
3. When prompted to confirm, tap **Delete**.

## Messaging Settings


1. Press **Home**  >  > **Messaging** .
2. From the Messaging screen, press **Menu**  > **Settings**.
3. Adjust the following fields according to your needs:
  - **Delete old messages:** Enable this option to delete older text messages that exceed the maximum number of text messages that you have set.

- **Text message limit:** Sets the maximum number of text messages that can be stored on the device. (The default is 200 per conversation.)
- **Multimedia message limit:** Sets the maximum number of multimedia messages that can be stored on the device. (The default is 20 per conversation.)
- **Auto-retrieve:** Enable this option to automatically retrieve the entire content of your MMS message. When checked, the MMS message header, message body, and any attachments will automatically download to your device.
  - If you disable this option, only the MMS message header will be retrieved and shown in the message list.
- **Roaming auto-retrieve:** Disable this option if you only want MMS message headers downloaded while roaming. Enable this option to automatically download your complete multimedia messages even while roaming.
- **Notifications:** Enable this option if you wish to receive a notification on the status bar when a new text or multimedia message arrives.
- **Select ringtone:** Allows you to select a ringer to sound when a new message is received. Tap this option, and then select a ringtone that is specific to new text and multimedia messages. A sample will briefly be played upon selection.
- **Vibrate:** Enable this option if you want the device to vibrate when a new text or multimedia message is received.

## Caller ID

---

Caller ID allows people to identify a caller before answering the device by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. Enter **\*** **6** MNO **7** PQRS on the **Phone** screen.
2. Enter the number you want to call.
3. Tap .


To permanently block your number, call Sprint Customer Service.

## Call Waiting

---

When you're on a call, Call Waiting alerts you to incoming calls by beeping. Your device's screen informs you that another call is coming in and displays the caller's phone number (if it is available).

To respond to an incoming call while you're on a call:

- ▶ Flick . (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- ▶ Tap **Switch calls**.

*Tip:* For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by entering **\*** **7** PQRS **0** **+** before placing your call. Call Waiting is automatically reactivated once you end the call.



## Making a 3-Way Call

With 3-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.







1. During an active phone call, tap **Add call**.
2. Make another phone call. (Your first call is automatically put on hold.)
3. When you are connected to the second party, tap **Merge calls**.

If one of the people you called hangs up during your call, you and the remaining caller stay connected (subject to network availability). If you initiated the call and are the first to hang up, all callers are disconnected.








## Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your device is turned off. You can continue to make calls from your device when you have activated Call Forwarding.

To activate Call Forwarding:

1. Press **Home**  >  to access the phone keypad.
2. Tap   .
3. Enter the area code and phone number to which you want your calls forwarded.
4. Tap . (You will hear a tone to confirm the activation of Call Forwarding.)

To deactivate Call Forwarding:


1. Press **Home**  >  to access the phone keypad.
2. Tap    .
3. Tap . (You will hear a tone to confirm the deactivation.)

**Note:** You are charged a higher rate for calls you have forwarded.

# Roaming

---

## Roaming Icon

Your display screen always lets you know when you're off the Nationwide Sprint Network. Anytime you are roaming, the device displays the roaming icon ().


## Roaming on Other Networks

When you're roaming on other networks, your call quality and security will be similar to the quality you receive when making calls on the Nationwide Sprint Network. However, you may not be able to access certain features, such as data services, depending on the available network.

**Note:** If you're on a call when you leave the Nationwide Sprint Network, your call is dropped. If your call is dropped in an area where you think Sprint service is available, turn your device off and on again to reconnect to the network.

## Checking for Voicemail Messages While Roaming

When you are roaming off the Nationwide Sprint Network, you may not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.

1. Dial your area code + your phone number.
2. When you hear your voicemail greeting, tap .
3. Enter your password at the prompt and follow the voice prompts.



When you return to the Nationwide Sprint Network, voicemail notification will resume as normal.

## Setting Roam Mode

Your device allows you to control your roaming capabilities. By using the Roaming menu option, you can determine which signals your device accepts. Choose from different settings on your device to control your roaming experience.

## Enabling Roaming

You can enable roaming on voice or data, domestic or internationally, separately.




1. From the Home screen, press **Menu**  > **Settings**  > **Wireless & networks** > **Mobile networks** > **Roaming mode**.
2. Select an option:
  - **Sprint only** to access only the Nationwide Sprint Network and prevent roaming on other networks for both voice and data communications.
  - **Automatic** to seek service on the Nationwide Sprint Network. When Sprint service is unavailable, the device searches for an alternate service. If you select this option, select the type(s) of communication for which roaming should be allowed:
    - **Domestic voice** to allow voice communication only on domestic roaming systems.
    - **Domestic data** to allow data communication only on domestic roaming systems.

- **International voice** to allow voice communication on international roaming systems.
- **International data** to allow data communication on international roaming systems.

## Roaming Guard


Your device alerts you when you are roaming off the Nationwide Sprint Network by requiring an extra step before you can place or answer a call, or try to access data while roaming.

*Note:* Roaming guards are turned on by default on your device.

1. Press **Home**  > **Menu**  > **Settings**  > **Wireless & networks** > **Mobile networks** > **Roaming guards**.
2. Select **Domestic** or **International**.
3. Select **Voice** or **Data** by checking the check box.
  - For example, if you check **Data** under **International**, your device alerts you when you are using an international roaming system to access data service.

*Tip:* If you prefer not to use the roaming guards feature, tap the **Never Ask** check box while the alert dialog is displayed. You will not be notified of your roaming status until you enable it again.

To place roaming calls with a roaming guard on:

1. On the **Phone** screen, tap the area code + the seven-digit number and tap .
2. Read the message and tap **OK**.

To answer roaming calls with a roaming guard on:

- Read the message and tap **OK**.

To access data service with a roaming guard on:

- Read the message and tap **OK**.

## 3B. Web and Data Services

- ◆ Getting Started With Data Services (page 121)
- ◆ Wi-Fi (page 129)
- ◆ Sprint Hotspot (page 131)
- ◆ Email (page 133)
- ◆ Gmail (page 136)
- ◆ Corporate Email (page 139)
- ◆ Removing an Account (page 141)
- ◆ Using Google Talk (page 142)
- ◆ Using Android Market (page 145)
- ◆ Applications (page 148)
- ◆ Data Services FAQs (page 150)

## Getting Started With Data Services




With your Sprint service, you are ready to start enjoying the advantages of data services. This section will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your device.

### Your User Name

When you buy your device and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com." (For example, the third John Smith to sign up for Sprint data services might have [jsmith003@sprintpcs.com](mailto:jsmith003@sprintpcs.com) as his user name.)

When you use data services, your user name is submitted to identify you to the Nationwide Sprint Network. Your user name will be automatically programmed into your device. You don't have to enter it.

## Launching a Web Connection

- Press **Home**  >  > **Browser** . (Your data connection starts and you see the SprintWeb™ home page.)

*Note:* You can connect to the Internet via either the Sprint network or Wi-Fi (configured from the **Settings** > **Wireless & networks** page).

## Data Connection Status and Indicators

Your device displays the current status of your data connection through indicators at the top of the screen.



Your device is connected to the Sprint 3G Network. When the arrows are animated, your device is transferring data (for example, when you are opening a Web page); when the arrows are gray, your device is connected to the network but is not currently transferring data (for example, when you are viewing a Web page that is completely open). In either state, you can receive incoming calls.

If you do not see an indicator, your device does not have a current data connection. To launch a connection, see “Launching a Web Connection” on page 122.

## Updating Your User Name

If you choose to change your user name and select a new one online, you must then update the user name on your device.

- Press **Home**  > **Menu**  > **Settings**  > **System Update** > **Update Profile**.

## Navigating the Web

Navigating through menus and websites during a data session is easy once you have learned a few basics.

*Note:* Before you can access Sprint's Powerdeck Web page, you may be asked to enter your 10-digit wireless phone number. Entering your phone number is not required for access to other Web pages.

## Scrolling

As with other parts of your device's menu, you'll have to drag up and down to see everything on some websites.

To scroll through a Web page:

- In a single motion, tap and drag across or up and down a page.

## Selecting

To select onscreen items or links:

- Drag across a page, and then tap an onscreen link to select the link.

Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

## Zooming Out and In (Pinching and Spreading)

 
Zooming in and out on a Web page can be done now without the need of an onscreen zoom tool. Just use your fingers to pinch in or spread out on the screen.

To zoom in:

- Place your thumb and index finger on the screen and expand them outward (spread) to zoom in.

To zoom out:

- Place your thumb and index finger on the screen and bring them together (pinch) to zoom out.

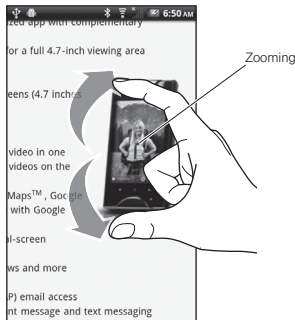



**Note:** Not all websites are viewable with the zoom function.

## Viewing in Tablet Mode or in Optimized Mode


You can choose to view the display in Tablet (full-screen) mode or in Optimized (dual-screen) mode with both screens open.

To switch between screen modes:

- ▶ While viewing a Web page, flick the screen and then tap  to view in Tablet mode, or tap  to view in Optimized mode.

## Going Back

To go back one page:

- ▶ Press **Back** . Repeat this process to keep going back through your Web page history of recently visited pages.

## Going to a Web Page


1. Tap the **Address** field and enter a new Web address.
2. Tap **Go** to launch the new page.

## Browser Menu

The browser menu offers additional options to expand your use of the Web on your device.

### Opening the Browser Menu

The browser menu may be opened anytime you have an active data session, from any page you are viewing.

- ▶ From any open Web page, press **Menu** . (You will see the browser menu.)


Options available within the browser menu include:

- **New window:** Launches a new Internet window while maintaining the current Web page active. You can open up to eight browser windows.
- **Bookmarks:** Allows you to access and manage your bookmarks.
- **Windows:** Displays a list of the current active Web pages.
- **Refresh:** Reloads the current Web page.
- **Stop:** Stops the loading of the Web page. Available while the page is loading.
- **Forward:** Returns you to a previously viewed page.



- **More:** Provides additional browser options:
  - **Add bookmark:** Allows you to save favorite Web pages.
  - **Find on page:** Searches the current Web page for a word.
  - **Select text:** Selects text from the current Web page.
  - **Page info:** Displays the Name and URL (website address) of the site you're currently viewing.
  - **Share page:** Allows you to send a URL via Bluetooth, Gmail, or Messaging.
  - **Downloads:** Keeps a list of previously downloaded content.
  - **Settings:** Lets you configure and manage your browser settings.


## Creating Bookmarks

1. From any open Web page, press **Menu**  to open the browser menu.
2. Tap **Bookmarks**. Three tabs are revealed:
  - **Bookmarks:** Displays a list of your current Web bookmarks.
  - **Most visited:** Displays a list of your most frequently visited websites. Tap an entry to launch the selected page.


- **History:** Displays a record of your browsing history.

3. Tap **Add**.
4. Enter a descriptive name for the new bookmark and tap **OK** to store the new entry to your Bookmarks list.


## Creating Bookmarks From Other Tabs

1. From any open Web page, press **Menu**  > **Bookmarks**.
  2. Tap either **Most visited** or **History** tab.
  3. Tap and hold an entry from the list to display an onscreen pop-up menu.
  4. Tap **Add bookmark** to add the selected entry to your current list of bookmarks.
- or –
1. Repeat steps 1 and 2.
  2. Tap the star icon adjacent to a website address. The color of the star now changes. This adds the “starred” website to your current Bookmarks list.

## Creating a New Home Page

 
1. From any open Web page, press **Menu**  > **Bookmarks**.
2. Tap either **Most visited** or **History**.
3. Tap and hold an entry from the list to display an onscreen pop-up menu.
4. Tap **Set as homepage** to assign the selected entry as your new home page.

## Adding Bookmarks to Your Home Screen

1. From any open Web page, press **Menu** .
2. Tap the **Bookmarks** tab.
3. Tap and hold an existing entry from the list to display an onscreen pop-up menu.
4. Tap **Add shortcut to Home** to add the selected entry to your Home screen.


## Selecting Text on a Web Page

1. Scroll to the area of the Web page containing the text you want to select.
2. Tap and hold the screen area. (The selected text is highlighted in orange, with a tab at the beginning and end of the selection.)

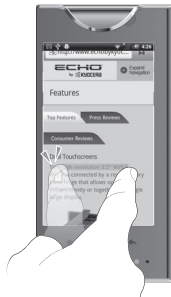

3. Drag a selection tab to expand or reduce the range of selected text. Any selected text will appear highlighted. You can copy to the device's clipboard by tapping the highlighted area.


## Adjusting Browser Page Settings

1. From any open Web page, press **Menu**  to open the browser menu.
2. Tap **More > Settings**.


3. Navigate to the **Page content settings** area and select from one of the following page settings:
  - **Text size:** Adjusts the current onscreen text size. Options include: **Tiny**, **Small**, **Normal**, **Large**, or **Huge**.
  - **Default zoom:** Sets the default browser viewing size. Choose from: **Far**, **Medium**, or **Close**.
  - **Open pages in overview:** Provides an overview of recently opened pages.
  - **Text encoding:** Adjusts the current text encoding.
  - **Block pop-up windows:** Prevents pop-up windows from appearing onscreen. Clear the check box to disable this function.
  - **Load images:** Allows Web page images to be loaded along with the other text components of a loaded website.
  - **Auto-fit pages:** Allows Web pages to be resized to fit as much of the screen as possible.
  - **Landscape-only display:** Displays pages only in the wider landscape screen orientation.
  - **Enable JavaScript:** Enables javascript for the current Web page. Without this feature, some


pages may not display properly. Clear the check box to disable this function.

- **Enable plug-ins:** Enables browser plugins for the current Web page. Some pages may require plug-ins to properly display or function.
- **Open in background:** New pages are launched in a separate page and displayed behind the current one. Clear the check box to disable this function.
- **Set home page:** Sets the current home page for the Web browser. (See “Setting the Browser Home Page” on page 128.)


4. Press **Back**  to return to the browser.


## Adjusting Browser Privacy Settings

1. From any open Web page, press **Menu**  to open the browser menu.
2. Tap **More > Settings**.
3. Navigate to the **Privacy settings** area and select from one of the following privacy settings:
  - **Clear cache:** Deletes all currently cached data. Tap **OK** to complete the process.


- **Clear history:** Clears the browser navigation history. Tap **OK** to complete the process.
  - **Accept cookies:** Allows sites, that require cookies, to save and read cookies from your device.
  - **Clear all cookie data:** Clears all current browser cookie files.
  - **Remember form data:** Allows the device to store data from any previously filled out forms. Clear the check box to disable this function.
  - **Clear form data:** Deletes any stored data from previously filled out forms. Tap **OK** to complete the process.
  - **Enable location:** Allows sites to request access to your current location (using the built-in GPS).
  - **Clear location access:** Clears location access for all websites.
4. Press **Back**  to return to the browser.

### Adjusting Browser Security Settings


1. From any open Web page, press **Menu**  to open the browser menu.
2. Tap **More > Settings**.

3. Navigate to the **Security settings** area and select from one of the following privacy settings:
  - **Remember passwords:** Stores user names and passwords for visited sites. Clear the check box to disable this function.
  - **Clear passwords:** Deletes any previously stored user names or passwords. Tap **OK** to complete the process.
  - **Show security warnings:** Notifies you if there is a security issue with the current website. Clear the check box to disable this function.
4. Press **Back**  to return to the browser.


### Setting the Browser Home Page

1. From any open Web page, press **Menu**  to open the browser menu.
2. Tap **More > Settings > Set home page**.
3. Delete the current address and enter a new Web page.
4. Tap **OK** to complete the process.

## Setting Search Engine


1. From any open Web page, press **Menu**  to open the browser menu.
2. Tap **More > Settings > Set search engine**.
3. Select the search engine you want to use as your default search engine.

## Creating Website Settings

1. From any open Web page, press **Menu**  to open the browser menu.
2. Tap **More > Settings > Website settings**. These advanced settings can be configured for individual sites (ex: Clear location access).

## Resetting the Browser to Default

If the Web browser seems to be malfunctioning or stops responding, you can usually fix the problem by simply resetting the browser settings.

1. Press **Menu**  to open the browser menu.
2. Tap **More > Settings > Reset to default**.
3. Tap **OK** to complete the process.

## Wi-Fi

### About Wi-Fi




Wi-Fi is a term used for certain types of wireless local area networks (WLAN). These device types use an 802.11 wireless specification to transmit and receive wireless data.

Wi-Fi communication requires access to an existing and accessible Wireless Access Point (WAP). These WAPs can either be open (unsecured) as within most hot spots, or secured (requiring knowledge of the router name and password).




### Turning Wi-Fi On and Off

By default, your device's Wi-Fi feature is turned off. Turning Wi-Fi on makes your device able to discover and connect to compatible in-range Wi-Fi networks.

To turn Wi-Fi on:




1. Press **Home**  > **Menu**  > **Settings**  > **Wireless & networks**.
2. Tap the **Wi-Fi** field to activate the feature. (A check mark indicates this feature is enabled.) The device will scan for available in-range wireless networks.

To turn Wi-Fi off:

1. Press **Home**  > **Menu**  > **Settings**  > **Wireless & networks**.
2. Tap **Wi-Fi** to deactivate Wi-Fi.

*Note:* The use of wireless data connections such as Wi-Fi and Bluetooth can cause an added drain to your battery and reduce your use times.

To connect to a Wi-Fi network:

1. Press **Home**  > **Menu**  > **Settings**  > **Wireless & networks > Wi-Fi settings**.
  - The network names and security settings (open network or secured with WEP/WAP, etc.) of detected Wi-Fi networks are displayed in the Wi-Fi networks section.
2. Tap a Wi-Fi network to connect.
  - If you select an open network, your device will automatically be connected.
  - If you select a network that is secured with WPA, WEP, etc., enter the security key (password), and then tap **Connect**.





*Note:* Some Wi-Fi routers will require you to enter a security key from your Web browser after a connection is established.

To manually add your new network connection:

1. Tap **Add Wi-Fi network**.
2. Enter the **Network SSID**. This is the name of your Wireless Access Point.
3. Tap the **Security** field and select a security option. This must match the current security setting on your target.
4. If secured, you will also need to enter the network password. The show password option reveals the password as you type it instead of showing only dots (....).
5. Tap **Save** to store the new information and connect to your target.

*Note:* The next time your device connects to a previously accessed or secured wireless network, you are not prompted to enter the network key again, unless you reset your device back to its factory default settings.

To manually scan for a Wi-Fi network:

1. Press **Home**  > **Menu**  > **Settings**  > **Wireless & networks** > **Wi-Fi settings**.
2. Press **Menu**  > **Scan**.

## Wi-Fi Status Indicators

The following icons show your Wi-Fi connection status at a glance:



– Wi-Fi is connected and active.



– An open Wi-Fi network is available.

## Using the Advanced Wi-Fi Settings Menu

The advanced Wi-Fi settings menu allows you to set up many of your device's Wi-Fi service, including:

- Setting your Wi-Fi sleep policy
- Viewing your device's MAC Address
- Configuring use of either a DHCP or Static IP

To access the advanced Wi-Fi settings menu:

1. Press **Home**  > **Menu**  > **Settings**  > **Wireless & networks** > **Wi-Fi settings**.
2. Press **Menu**  > **Advanced**.





## Sprint Hotspot

Sprint Hotspot turns your device into a wireless router and shares your device's data connection with one or more computers or mobile devices using Wi-Fi.

To use your device as a wireless router, make sure that your device has an active connection with the Sprint network. (For more information, see "Getting Started With Data Services" on page 121.)

To connect to your device's Wi-Fi network, you need a computer with a built-in or add-on Wi-Fi adapter.

## Set Up Sprint Hotspot

1. Press **Home**  >  > **Sprint Hotspot** .
2. Tap **OK** on the introduction screen.
3. Tap the **Portable Wi-Fi hotspot** checkbox to activate the service.
  - When the portable Wi-Fi hotspot is active and is ready to share its connection, the hotspot icon  appears on the status bar.

*Note:* Using both data services and Sprint Hotspot drains your device's battery at a much faster rate than when using any other feature combination. The best way to keep using the device as a hotspot is to have it connected to a power supply.





*Important:* Write down the passkey (password) for this WEP/WPA/WPA2 PSK communication (shown onscreen).

## Connect to Sprint Hotspot

1. Enable Wi-Fi (wireless) functionality on your target device (laptop, media device, etc.).
2. Scan for Wi-Fi networks from the device and select your device hotspot from the network list.
  - The default name for your device hotspot is **M9300-XXX**. You can change the name by tapping **Portable Wi-Fi hotspot Settings > Network SSID** from the Settings menu.
3. Select this device and follow your onscreen instructions to enter the passkey (provided on the Sprint Hotspot page).

4. Launch your Web browser to confirm you have an Internet connection.




## Configure Sprint Hotspot

1. Press **Home**  >  > **Sprint Hotspot** .
2. Tap **Portable Wi-Fi hotspot settings** and select an option from the following:
  - **Network SSID** to change the name of your device's Wi-Fi network name (SSID).
  - **Security** to set the security type.
  - **Password** to set security password. You will need to enter that password when you connect to the device's hotspot with a computer or other device.
  - **Maximum Wi-Fi clients** to set the maximum number of devices that can connect to and use Sprint Hotspot on your device.
  - **Auto off** to turn off the portable Wi-Fi hotspot automatically after a certain period of time. Select **Never** to disable this feature.
  - Press **Menu**  > **Advanced** to set the advanced settings.



## Tethered mode




You can tether your device to your computer with a USB cable to share your device's Internet connection with your computer.

1. Press **Home**  > **Menu**  > **Settings**  > **Wireless & networks** > **Tethering & portable hotspot**.
2. Tap the **Tethered mode** check box to turn on the tethered mode.
  - If you want to use your device in tethered mode whenever it is connected to a PC, select **Tethered mode** as the default PC connection type. See "PC Connection Settings" on page 64.



## Email

Your device's email applications let you access and manage multiple email accounts simultaneously from one convenient location.

### Creating an Email Account (POP3 or IMAP)





1. Press **Home**  >  > **Email** .
2. Tap the **Email address** field and type your email address.
3. Tap the **Password** field and type your password.
4. Tap **Next** and configure your connection settings manually (POP3 or IMAP).
5. Enter the **Account name** and **Your name**, and then tap **Done**.


### Adding Another Email Account

1. If you are in the Inbox of an existing email account, press **Menu**  > **Accounts**.
2. On the email accounts list screen, press **Menu**  > **Add account**.



3. Enter the **Email address** and **Password** for the email account and then tap **Next**.
4. Enter the **Account name** and **Your name**, and tap **Done**.

## Creating and Sending Email

1. Press **Home**  >  > **Email** .
2. Press **Menu**  > **Compose**.
3. Enter the message recipient's email address in the **To** field.
  - If you are sending the email to several recipients, separate the email addresses with a comma.
  - You can add as many message recipients as you want.




**Note:** To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, press **Menu**  > **Add Cc/Bcc**.

4. Tap the **Subject** field and enter the email subject.
5. Tap the text field and compose your email.





6. To add an attachment, press **Menu**  > **Add attachment**, and choose from the following options:
  - **Pictures:** Select photos from Gallery.
  - **Videos:** Select videos from Gallery.
  - **Audio:** Select sound files.
7. Once complete, tap **Send**.
  - Tap **Save as draft** to save the current email as a draft. To view your draft email messages later, press **Menu**  > **Folders** > **Drafts**.
  - To delete the current email message, tap **Discard**.

## Viewing and Replying to Email





Reading and replying to email on your device is as simple as it is on your computer.

1. Press **Home**  >  > **Email** .
2. On the email account Inbox, tap the message you want to view.
3. Tap **Reply** or **Reply all** to reply to the message.

## Viewing and Managing Your Email Inbox

1. Press **Home**  >  > **Email** .
2. Tap the email account you want to view.
3. Press **Menu**  to select the following options:
  - **Refresh:** Refreshes your email box.
  - **Compose:** Composes a new email message.
  - **Folders:** Displays folders.
  - **Accounts:** Displays a list of email accounts.
  - **Account settings:** Displays the account settings of the selected account.
  - **Search:** Searches the current folder.

## Configuring Email Settings




1. Press **Home**  >  > **Email** .
2. Tap an email account, and then press **Menu**  > **Account settings**.
  - **Account name:** Displays your uniquely created account display name.
  - **Your name:** Displays the name used in the From field of your outgoing email messages.

- **Signature:** Allows you to create an email signature for your outgoing email messages.
- **Inbox check frequency:** Tap to select the time interval used by your device to check your new email messages. Choose from: **Never**, **Every 5 minutes**, **Every 10 minutes**, **Every 15 minutes**, **Every 30 minutes**, and **Every hour**.
- **Default account:** Assign this as the default email account used for outgoing messages.
- **Email notifications:** Sets your device to display an email notification icon on the status bar whenever new email is received.
- **Select ringtone:** Sets your device to play the specified ringtone whenever new email arrives.
- **Vibrate:** Sets your device to vibrate whenever new email arrives.
- **Incoming settings:** Adjusts the incoming email settings, such as username, password, and other settings.
- **Outgoing settings:** Adjusts the outgoing email settings, such as username, password, and other settings.

# Gmail

Gmail is Google's Web-based email service. Gmail comes preconfigured on your device. You can synchronize your Gmail account on your device with your Gmail account on the Web.

## Setting Up a Gmail Account via the Device


1. Press **Home**  >  > **Gmail** .
2. Follow the instructions on the screen to set up Gmail.

## Opening Gmail

1. Press **Home**  >  > **Gmail** .
2. Log into your account via the device.

 
**Note:** You must have a valid and active Google account (xxxxxx@gmail.com) prior to Gmail setup and configuration. Your Gmail address is then used to log into your account via the device.




To refresh your Gmail messages:

- Press **Menu**  > **Refresh** to send or receive new email and synchronize your email with your Gmail Web account.


## Creating and Sending Gmail

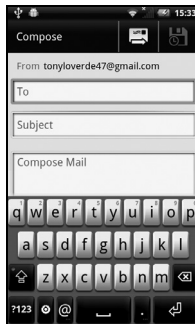1. Press **Home**  >  > **Gmail** .
2. Press **Menu**  > **Compose**.



3. Tap the **To** field to enter the recipient's email address. To send to multiple recipients, separate the email addresses with commas and add as many recipients as you want.
  - To add a carbon copy (Cc) or blind carbon copy (Bcc), press **Menu**  > **Add Cc/Bcc**.
4. Tap the **Subject** field and enter the email subject.
5. Tap the text field and compose your email.
  - To add a picture attachment, press **Menu**  > **Attach**. Locate and then tap the picture you want to attach.
  - Tap **X** to delete a selected attachment from your current email.
6. Once complete, tap .

## Accessing Gmail Messages

When new messages are received, a new Gmail message icon  appears on the status bar if the email notifications option is enabled.

Email messages you send to and receive from the same recipient are grouped as message threads or conversation.

## Opening and Reading Gmail Messages

 
To view Gmail messages, do either of the following:



- Drag the status bar down to open the Notifications panel. Tap a Gmail message to open and read it.
- From the **Inbox**, tap the Gmail message to open and read it.

*Note:* Unread messages are in **bold**.

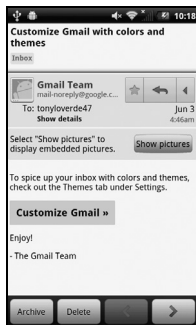

## Replying to the Sender

1. From the **Inbox**, tap a Gmail message to open and view it.



2. Tap .
3. Type your reply message.
4. Tap .


## Replying to All Recipients


1. From the **Inbox**, tap a Gmail message to open and view it.
2. Tap .
3. Type your reply message.
4. Tap  to send the message.

## Deleting Gmail Messages


1. From the **Inbox**, tap a Gmail message to open and view it.
2. With the Gmail message displayed, tap **Delete**.

## Configuring Gmail Settings




1. From the **Inbox**, press **Menu**  > **More** > **Settings**.
2. Choose from the following options:
  - **Signature** to enter a signature that is added at the end of your email messages.
  - **Confirm actions** to show a confirmation box when you archive, delete, or send a message.
  - **Reply all** to reply to everyone (sender and CC/BCC recipients) by default when responding to a message.

- **Auto-advance** to select which screen is shown after you delete or archive an email message. Choose from: **Newer conversation**, **Older conversation**, or **Conversation list**.
  - **Message text size** to choose the text size.
  - **Batch operations** to show batch operations features, such as archiving, deleting, or applying a label to multiple email messages at the same time.
  - **Clear search history** to delete all the search history.
  - **Labels** to set which Gmail labels to synchronize.
  - **Email notifications** to show a new message icon on the status bar when you receive new email.
  - **Select ringtone** to select if you want the device to ring when a new email is received. On the ringtone menu, tap a ringtone to play the tone briefly, and then tap **OK** to confirm your selection. Select **Silent** if you do not want the device to ring when a new email is received.
  - **Vibrate** to select if you want the device to vibrate when a new email is received.
  - **Notify once** to notify you only the first time new email arrives, not for every new message that arrives until you check your email.
3. Press **Back**  to save your changes.

## Corporate Email

The **Email** application () also provides access to your Microsoft Exchange server via your device. If your company uses Microsoft Exchange Server 2003 and 2007 as the corporate email system, you can use this email application to wirelessly synchronize your email, Contacts, and calendar directly with your company's Exchange Server.






### Setting Up a Corporate Email Account

1. Press **Home**  >  > **Email** .
2. Enter your **Email address** and **Password** information, and then tap **Manual setup**. Consult your network administrator for further details.
  - **Email address:** your corporate email address.
  - **Password:** typically your network access password (case-sensitive).
3. Tap **Exchange** (from the add new email account screen).
4. Enter a **Domain\Username**, **Password**, and **Server** information and tap **Next**.


- **Domain\Username:** enter your network domain\login username.
  - **Password:** your previously entered password. (Usually, this field will be already filled in, so you won't need to re-enter your password.)
  - **Server:** your exchange server remote email address. Typically it is in the form **mail.XXX.com**. Obtain this information from your company's network administrator.
  - If your network requires SSL encryption, tap the **Use secure connection (SSL)** box to place a check mark and activate this additional level of security. If your exchange server requires this feature, leaving this field unchecked can prevent connection.
5. If the onscreen activation disclaimer is displayed, tap **Next**.
  6. Configure your **Inbox checking frequency**, **Amount to synchronize** (days to synchronize between your device and server), activate any other email settings, and then tap **Next**.
  7. Identify your new account with a unique name, provide the outgoing name, and then tap **Done**.

*Note:* You can have multiple corporate email accounts active on your device.


## Opening Corporate Email


1. Press **Home**  >  > **Email** .
2. Tap a message to read, manage, and reply to your email messages.
  - From your Inbox screen, press **Menu**  to select options such as **Refresh**, **Compose**, **Folders**, **Accounts**, **Account settings**, or **Search**.
  - While a message is open, press **Menu**  or tap the button at the bottom of the screen to select messaging options, such as **Delete**, **Forward**, **Copy all**, **Reply**, **Reply all**, or **Mark as unread**.

## Creating and Sending Corporate Email


1. From the Inbox, press **Menu**  > **Compose**.
2. Enter the message recipient's email address in the **To** field.
  - If you are sending the email to several recipients, separate the email addresses with a comma.
  - You can add as many message recipients as you want.



**Note:** To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, press **Menu**  and tap **Add Cc/Bcc**.

3. Tap the **Subject** field and enter the email subject.
4. Tap the text field and compose your email.
5. To add an attachment, press **Menu**  > **Add attachment**, and choose from the following options:
  - **Pictures:** Select photos from Gallery.
  - **Videos:** Select videos from Gallery.
  - **Audio:** Select sound files.
6. Once complete, tap **Send**.

To reply to an email message:




1. From the Inbox, tap an email message.
2. With the email message displayed, tap either **Reply** or **Reply all**.
  - or –With the email message displayed, press **Menu**  > **Forward** to forward the message to another recipient.
3. Enter a new message body and tap **Send**.

To delete an email message:

- ▶ Tap and hold an email (from your inbox list) and select **Delete** from the onscreen context menu.
  - or –With the email message displayed, tap **Delete**.

## Removing an Account

If you no longer want an email account on your device, you can delete it through the Accounts & sync menu. You can't remove the first Google Account you set up on the device. That account can only be removed by resetting your device entirely. See “Resetting Your Device” on page 67.

 
1. Press **Home**  > **Menu**  > **Settings**  > **Accounts & sync**.
2. Tap the account you want to delete.
3. Tap **Remove account**.
4. Tap **Remove account** again to confirm that you want to remove the account.

## Using Google Talk

**Google Talk** is the instant messaging program provided by Google. Google Talk lets you chat with other people that also have a Google account. Your Google Talk account is based on the Google account set on your device.

### Signing In and Chatting

- Press **Home** > **Talk** to open Google Talk.

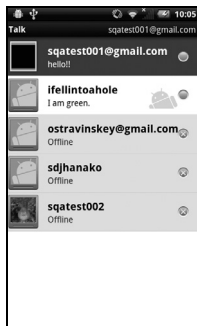

### Adding New Friends

You can add only people who have a Google account.

1. On the friends list screen, press **Menu** > **Add friend**.
2. Enter the Google Talk ID or the Gmail address of the person you want to add.
3. Tap **Send invitation**.

### Viewing Your Invitations

On the friends list screen, press **Menu** > **More** > **Invites**. The pending invitations screen lists all chat invitations that you have sent.

*Note:* When a person accepts your invitation, that invitation disappears from the list.

### Accepting and Canceling Invitations

On the friends list screen, tap **Chat invitation**. When an invitation pop-up window appears, tap **Accept** or **Cancel**.

### Changing Your Online Status Message

1. On the friends list screen, tap the online status icon that appears beside your email address.


2. Tap the status that you want from the menu.
3. Tap the text box below the online status icon, and then type your desired status message.
4. Tap **Done** on the onscreen keyboard.

## Starting a Chat


1. Tap a friend on the friends list.
2. Tap the text box, and then type your message.
3. Tap **Send**.

## Switching Between Active Chats

You can conduct multiple chats at the same time and switch between active chats.

1. On a chat screen, press **Menu**  > **Switch chats**.
2. On the panel, tap the friend you want to chat with.

## Closing a Chat



- ▶ On the friends list screen, tap and hold the name of a friend. On the options menu, tap **End chat**.  
– or –  
On a chat screen, press **Menu**  > **End chat**.

## Managing Your Friends

Friends on the friends list screen are sorted according to their online status and are listed alphabetically.

## Viewing the Friends List

By default, only the friends that you frequently chat with are displayed on the friends list screen.


- ▶ To list all your friends, press **Menu**  > **All friends**.
- ▶ To display only the friends that you frequently chat with, press **Menu**  > **Most popular**.

## Blocking Friends

You can block friends from sending you messages.

1. On the friends list screen, tap and hold the name of the friend you want to block.
2. Tap **Block friend**. That friend is removed from your friends list and is added to the blocked friends list.

## Unblocking Friends

1. On the friends list screen, press **Menu**  > **More** > **Blocked**.

2. On the blocked friends list, tap the name of the friend you want to unblock.
3. Tap **OK** to confirm.

## Mobile Indicators



### Checking Friends' Devices

You can see which devices your friends are using to chat in Google Talk.


- If an Android icon appears to the right of your friend's name, it indicates that your friend is using an Android phone.
- If no icon is displayed, it indicates that your friend is using a computer.

### Displaying a Mobile Indicator


You can choose to show a mobile indicator along with your name to let your friends know the type of wireless device you are using.

1. On the friends list screen, press **Menu**  > **Settings**.
2. Tap **Mobile indicator**.
3. Press **Back** .

## Signing Out

- ▶ On the friends list screen, press **Menu**  > **Sign out** to sign out from Google Talk.

## Google Talk Settings

1. On the friends list screen, press **Menu**  > **Settings**.
2. Tap any of the following to change the settings:
  - **Automatically sign in:** Select to automatically sign in to Google Talk every time you turn on your device.
  - **Mobile indicator:** Select to allow your friends to see the type of wireless device you are using. See "Mobile Indicators" on page 144.
  - **Automatic away-status:** Select to show your status as away when the screen is turned off.
  - **Clear search history:** Select to delete the Google Talk search history.
  - **IM notifications:** Select to show a new IM message icon on the status bar when a new instant message is received.

- **Select ringtone:** Select if you want the device to ring when a new instant message is received. On the ringtone menu, tap a ringtone to play the tone briefly, and then tap **OK** to confirm selection. Select **Silent** if you do not want the device to ring when a new instant message is received.
- **Vibrate:** Select if you want the device to vibrate when a new instant message is received.
- **Invitation notifications:** Select to show a notification on the status bar when you receive a request to be someone's friend.


## Using Android Market

 
Android Market™ provides direct access to a large selection of applications which you can download and install on your device.



**WARNING:** You are responsible for the results of installing applications on your device. Be sure to confirm if the application you are going to install is safe and secure. Installing some applications may cause virus infection or destruction of data.

Some applications may automatically start packet communication.

## Accessing the Market

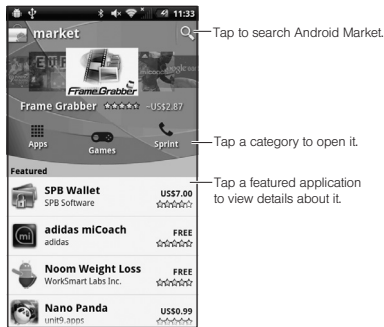1. Press **Home**  >  > **Market** .
2. If you don't already have a Google account, you will need to set one up. See "Creating a Google Account" on page 48.
3. Tap **Accept** to agree to Android Market terms of service when you access the service for the first time.
4. Explore Android Market.



- Browse apps by categories. First, tap **Apps** or **Games**, and then tap a category. Under a category, you can filter the apps by **Top paid**, **Top free**, or **Just in**.
- Search for an app. Tap the search icon  while on the Android Market home screen, enter the name or type of app you're looking for, and then tap  to the right of the search box.

## Installing Applications

1. Select the item that you want to download.
2. On the item details screen, view ratings of the application, comments by users and developer information.
3. Tap **Install** (for free applications) or **Buy** (for paid applications). A list of items the application will access is displayed.
4. Tap **OK** under Accept permissions to start installation.

**Note:** To check the status of the download, open the Notifications panel. To stop the download, tap the item and then tap **Cancel**.



## Getting Help About Android Market

- On the Android Market screen, press **Menu**  > **Help** to go to the Android Market website.

## Finding Applications


You can select an application through one of the following means:

- Browse through featured apps. Scroll through the list of featured apps when you open Android Market.

5. When installation is complete,  will appear on the status bar.
6. On the Android Market screen, press **Menu**  > **My apps**.
7. Tap the application, and tap **Open**.

*Note:* Tablet (full-screen) mode is not supported with some third-party applications. (See “Tablet Mode Extension” on page 28.)

## Uninstalling Applications





1. On the Android Market screen, press **Menu**  > **My apps** to view downloaded applications.
2. Tap the application that you want to remove.
3. Tap **Uninstall**.
4. Tap **OK** to confirm.
5. Select the reason for removing the application, and then tap **OK**.

## Reinstalling a Google Application

If the Android operating system is ever updated, any applications you’ve installed on the device will be erased. However, you can easily reinstall any Android Market applications (free or paid).

*Note:* Applications which have been moved to the microSD card will not be erased.

Pictures and music are stored on the microSD card.  
Contacts and calendars are stored remotely on remote Google or Exchange servers.

1. Log into your Google account via the device.
2. Press **Home**  >  > **Market**  > **Menu**  > **My apps**.
3. Scroll through the list of previously downloaded Google applications and choose the one you wish to reinstall.
4. Follow the onscreen prompts.

*Note:* If you have installed an application from outside Android Market, you will not be able to reinstall it using the above steps. If you have saved the installation file (.apk) to your computer, you can copy it back to your device and reinstall using **Manage applications**.





## Applications

You can access a wide variety of applications in many different categories with your device and data service. Your device comes preloaded with links to the following applications such as:

- **Google**
- **NASCAR Sprint Cup Mobile**
- **Sprint Football Live**
- **Sprint Zone**


**Important Privacy Message** – Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

## NASCAR Sprint Cup Mobile

1. Press **Home**  >  > **NASCAR** .
2. If prompted, read the permission check disclaimer, make a selection and tap **OK**. Follow the onscreen instructions until you reach the main NASCAR Sprint Cup Mobile page.
3. Tap an onscreen option to activate features that include:
  - **Home** is the main NASCAR home page where you can view stats on a current race, choose to follow a specific driver, view special NASCAR promotions and other NASCAR-specific multimedia content.
    - Press **Menu**  > **Home** to return to the main NASCAR page. This applies to each of these options.
  - **Race Recap** provides overviews of the current races, pictures, commentary, additional photos, and race stats.
  - **Speed** displays a list of selectable multimedia video clips from the SPEED channel that are specific to NASCAR.







- **My Driver** to customize your NASCAR experience by following specific drivers. Information includes driver-specific stats and NASCAR RSS feeds. You can also get additional stats, review other driver info, or change drivers.
- **Stats & Schedule** lets you track race information such as: **NSCS Recap**, **NNS Recap**, **Point Standings**, **Season Stats**, and **Schedule**.
- **Miss Sprint Cup** is your insider to NASCAR by providing news, information, blogs and twitter updates to the goings-on within NASCAR.
- **Videos** displays a list of selectable multimedia content. Other features include streaming multimedia content from NASCAR radio stations or other racing radio shows.
- **News & Alerts** provides you with quick access to NASCAR-specific news, photos, and driver stats. You can also customize alerts for new information such as ALL NASCAR News, Sprint Cup News, etc.
- **Twitter** launches an onscreen Twitter page.
- **Fantasy** lets you take part in online fantasy racing and access news or videos.

- **FanZone** displays a list of selectable content available to Sprint subscribers.
- **Settings and Help** displays help information for usage of the NASCAR application and features.
- **Exit** to quit the NASCAR application.
  - Press **Menu**  > **Exit** > **Yes**.




## *Sprint Football Live*

Get the Football live on your device. It lets you be right in the middle of your favorite game by being a part of previews, blogs, discussions groups, fantasy football, etc.

1. Press **Home**  >  > **Sprint Football Live** .
2. Tap the **PRO** or **COLLEGE** tab. Each includes the information such as schedules, scores, news, statistics, twitter, and odds.
  - Press **Menu**  > **Exit** > **Yes** to exit the Sprint Football Live application.

## Sprint Zone

Sprint Zone is a free application which helps you manage your account, get tips and tricks for your device, find recommended apps, and more.

1. Press **Home**  >  > **Sprint Zone** .
2. From the Sprint Zone Web page, scroll up or down and tap an item to check your account, read the latest news about your device, load an application, and more.

Currently, various applications, such as NASCAR, Sprint Football Live, TeleNav GPS Navigator, and Sprint TV are available through Sprint Zone. Access Sprint Zone for the latest information.


## Data Services FAQs

---

### How do I sign in for the first time?

You are automatically signed in to access data services when you turn on your device.


### How do I know when my device is connected to data services?

Your device automatically connects when you use data service or an incoming message arrives. You will also see the  indicator.

### Can I make calls and use data services at the same time?

No, you cannot use voice and data services simultaneously.

### When is my data connection active?

Your connection is active when data is being transferred. Outgoing calls are allowed; incoming calls may go to voicemail. When active, the  indicator is animated on the display screen.

**When is my data connection dormant?**

If your device receives no data for 10 seconds, the connection goes dormant. When the connection is dormant, you can make and receive voice calls. (The connection may become active again quickly.) If your device receives no data for an extended period, the connection will terminate.

**Can I re-download paid applications without being charged again?**

Your Market applications are associated to your Google account login information. Even if your device is reset and reinstalled with an update to Android, you can log back into your Google account and reinstall these applications. See “Reinstalling a Google Application” on page 147.



## 3C. Entertainment: TV and Music

- ♦ TV (page 152)
- ♦ Music (page 155)
- ♦ VueQue (page 158)

**Sprint TV** gives you the ability to listen to audio clips and to view video clips right from your device's display. Watch live TV and catch up on episodes of your favorite shows – anywhere on the Nationwide Sprint Network.\*

*\* Sprint TV coverage not available everywhere. Content and lineup subject to change. Select channels also available for casual usage. Visit [www.sprint.com/tvguide](http://www.sprint.com/tvguide) for more information.*

**Note:** If Sprint TV isn't already installed on your device, you can download it from Sprint Zone:

- Press **Home**  >  > **Sprint Zone** > **Sprint Applications.**

## TV

### *Your Sprint TV Channel Options*




The Sprint TV application offers a wide variety of accessible channels. Subscription options include comprehensive basic packages as well as a full menu of “a la carte” channels. Visit [www.sprint.com/tvguide](http://www.sprint.com/tvguide) for more information on channels and pricing.

Some of the available categories may include:

- |                   |                   |
|-------------------|-------------------|
| ● Primetime TV    | ● Music Videos    |
| ● Sprint TV Live  | ● Music & Radio   |
| ● Sports          | ● Entertainment   |
| ● Cartoons        | ● News & Weather  |
| ● Movies & Shorts | ● Mobile Previews |

**Note:** Available categories and content are subject to change.

## Watching TV

1. Press **Home**  >  > **Sprint TV & Movies** .  
Depending on your settings, your device may prompt you to accept a data connection.
2. Select **Live TV**, **On Demand**, or **Movies** to display channel options.
3. Tap a channel from the Sprint TV listings or tap an available category.

**Note:** The first time you access a channel, the system will prompt you to purchase access (unless the channel doesn't have a monthly fee). Select **Subscribe** to purchase access.

4. If applicable, tap a clip to view the program. The clip will automatically load and begin playing.

**Tip:** While you are playing a clip, you can scroll through the channels to view more selections. You will see a small pop-up screen that tells you which channel you are watching as well as other channels that you have access to. Once you find a channel that you want to watch or listen to, scroll to it and tap (or simply wait approximately three seconds), and the channel will begin loading.

## TV FAQs

1. **Will I know if I'm receiving an incoming call while I'm viewing or listening to a media clip?**

Yes. All incoming calls will stop the Sprint TV app. The program you were watching will start from the beginning after you reject or end the call.

2. **How long are the clips? Will I know the estimated time it will take to play the clip prior to accessing it?**

Once you have selected a channel, you will see a listing of the available clips, with each clip's length displayed after the clip's title. In general, a clip's duration will depend on the story or content being provided, and can be fairly short or as long as a few minutes.

3. **Can I access a clip wherever I am, as long as I have my device?**

As long as you are on the Nationwide Sprint Network, you will have access to the audio and video clips.

**Note:** Sprint TV service does not work while roaming off of the Nationwide Sprint Network or where service is unavailable.

**4. Are the videos that I'm viewing "live" videos?**

It depends on the content provider. Some of the channels available through Sprint TV stream live content. Others provide media on demand with video and audio clips that are refreshed throughout the day, but that are not "live."

**5. After purchasing access to an Available Channel for a monthly fee, do I receive any confirmation? That is, how do I know it has been purchased?**

The next time you access the channel, you bypass the Preview/Purchase page and go directly to the available content.

**6. If I don't subscribe to a data plan, will I still be able to view the multimedia clips?**

Yes. For service access charges, please consult your Sprint service plan or visit [www.sprint.com](http://www.sprint.com).

**7. What does it mean when the video pauses and I see the word "loading" at the bottom of the screen?**

This happens when the device is loading the data necessary to play the clip. It typically occurs when there is heavy traffic on the network.

**8. How can I cancel service if I decide I don't want it?**

To cancel your Sprint TV service, visit [www.sprint.com](http://www.sprint.com) and sign on to **My Sprint** with your account number and password. From this page, you have the ability to cancel the service or any channels to which you subscribe.

**9. Can I surf to a different channel while I am playing a clip?**

Yes. While you are playing a clip, you can surf to a different channel. You will see a small pop-up screen that tells you which channel you are watching as well as other channels that you have access to. Once you find a channel that you want to watch, scroll to it and tap (or simply wait approximately three seconds), and the channel will begin loading.

# Music

**Music** plays digital audio files saved on the storage card.

 
To play audio files which are not saved in the storage card, copy the files to the storage card first. See “Use the Device’s microSD Card as a USB Drive” on page 93 for more details on copying files.

## Opening the Music Library

- ▶ Press **Home**  >  > **Music** . The Music library screen appears.

## Playing Music

1. On the Music library screen, tap a category to view the contents under that category. Options are: **Artists**, **Albums**, **Songs**, and **Playlists**.
2. Drag your finger through folders until you reach the music you want to play.
3. Tap the music file to play. The playback screen opens.

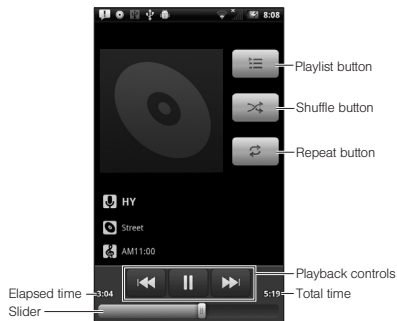

4. The following options are available for the control:
  - Tap the playback controls to rewind, pause/play, and forward playback.
  - Tap the rewind button twice to play the previous music.
  - Tap the Playlist button to view the current playlist.
  - Tap the Shuffle button to toggle shuffle on or off.
  - Tap the Repeat button to cycle through the repeat modes: **Repeating all songs**, **Repeating current song**, or **Repeat is off**.

## Using Playlists

Create a playlist to organize your music.

### Creating Playlists

1. Open the Music library and browse for the music that you want to add to the playlist.
2. Tap and hold a selection to open the options menu.
3. Tap **Add to playlist**.
4. On the **Add to playlist** window, tap **New**.
5. Type the name of your new playlist.
6. Tap **Save**.

### Adding Music to Existing Playlists

1. Open the Music library and browse for the music that you want to add to the playlist.
2. Tap and hold a selection to open the options menu.
3. Tap **Add to playlist**.
4. On the **Add to playlist** window, tap the name of the playlist that you want to add the music to.

## Removing Music From Playlists

1. Open the Music library and tap **Playlists**.
2. Tap the playlist that contains the music you want to remove.
3. Tap and hold a selection and tap **Remove from playlist**.

### Renaming Playlists

1. Open the Music library and browse for the playlist that you want to rename.
2. Tap and hold the playlist.
3. On the options menu, tap **Rename**.
4. Type the new name of the playlist.
5. Tap **Save**.

### Playing Music in Playlists

1. Open the Music library and browse for the playlist that you want to play.
2. Tap and hold the playlist.
3. On the options menu, tap **Play**.



## Deleting Playlists

1. Open the Music library and browse for the playlist that you want to delete.
2. Tap and hold the playlist.
3. On the options menu, tap **Delete**.

## Setting Music As a Ringtone

1. Open the Music library and browse for the music that you want to set as ringtone.
2. Tap and hold a selection, and then tap **Use as phone ringtone**.

## Deleting Music

You can delete music files from the microSD card.

1. Open the Music library and browse for the music that you want to delete.
2. Tap and hold a selection, and then tap **Delete**.
3. Tap **OK** to confirm.

## Backing Up Your Downloaded Music Files

Sprint recommends you back up your downloaded music files to your computer. Although the downloaded files can only be played on your device and on your account, backing them up to your computer lets you access the files in case your microSD card is lost or damaged, or if you install a new microSD card. See “Use the Device’s microSD Card as a USB Drive” on page 93.

1. Connect your device to your computer using a USB cable or the built-in connection on Bluetooth-enabled phones.
2. Use your computer to navigate to the microSD card’s **Music** folder.
3. Select and copy the music files to a folder on your computer’s hard drive.

## VueQue


YouTube™ is a video sharing application on which users can upload and share videos. This application is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts and other original videos.

VueQue™, powered by YouTube, lets you watch a video on one screen while selecting and queuing other videos on the second screen.

### Opening VueQue



- Press **Home**  >  > **VueQue** . The library screen appears.

### Watching VueQue Videos


1. On the VueQue screen, tap a video.
2. Tap the screen to show or hide the playback controls. Use the playback controls to rewind, pause, play, or advance the video.
3. Press **Back**  to go back to the previous screen.

*Tip:* Tap **HQ** to display the video in high quality mode.

### Searching for Videos

 
1. On the VueQue screen, tap  at the upper right of the screen to open the search box.
2. Enter a keyword to search, and then tap  again.
3. Search results appear below the status bar.  
Scroll through the results and tap a video to watch it.

### Sharing Videos

1. On the video list, tap and hold a video.  
– or –  
While watching a video, press **Menu**  > **Share**.
2. Select from **Bluetooth**, **Gmail**, or **Messaging**.
3. If you select Bluetooth, select the device you want to send the video to. The video link is automatically added to your email message.
4. If you select **Gmail** or **Messaging**, select the account that you want to use to send the video link.
5. Enter the recipient, complete your message, and then tap **Send**.



## Watching Videos in Optimized Mode

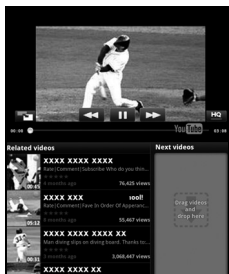If you slide open the device while playing a video, VueQue enters the buffer mode. In the buffer mode, a video will be played on the upper screen, and the library screen appears on the lower screen.



The Library screen displays the following:

- **Related videos:** videos related to the currently played video.
- **Next videos:** videos being buffered. Listed videos will be played continuously. (Buffering the next video is only available on Wi-Fi network.)

*Tip:* Tap  on the display to play the video in Tablet mode. To get back to optimized mode, tap .

## 3D. GPS Navigation

- ◆ GPS Services (page 160)
- ◆ TeleNav GPS Navigator (page 160)
- ◆ Google Maps (page 162)
- ◆ Places (page 165)
- ◆ Google Navigation (page 165)

### GPS Services

Your device's built-in GPS capability gives you access to a number of location-based services, including **Maps** and **TeleNav GPS Navigator**.




#### Activating Location Mode

Before using any of the location-based services, you must turn on your device's location mode.

- ▶ Press **Home**  > **Menu**  > **Settings**  > **Location & security** > **Use GPS satellites**.

### Using Wireless Networks

This additional location feature uses open Wi-Fi and mobile network connections to assist in providing additional location accuracy.



1. Press **Home**  > **Menu**  > **Settings**  > **Location & security** > **Use wireless networks**.
  - Since this feature is based on Google's location service, you will need to agree to allow Google to collect anonymous information.
2. Tap **Agree** to accept the terms of service.

### TeleNav GPS Navigator

TeleNav GPS Navigator gives you turn-by-turn directions onscreen and over speakerphone.

**Note:** Depending on your service plan, TeleNav GPS Navigator may require a monthly subscription. Contact Sprint for information and pricing.

If TeleNav GPS Navigator isn't already installed on your device, you can download it from Sprint Zone:




- Press **Home**  >  > **Sprint Zone** > **Sprint Applications**.

## Registering TeleNav GPS Navigator

Before you can use TeleNav GPS Navigator, your device and service must be registered.

1. Press **Home**  >  > **TeleNav GPS Navigator** .
2. Follow the onscreen instructions to enter and submit the required information.

## Using TeleNav GPS Navigator

1. Press **Home**  >  > **TeleNav GPS Navigator** .
2. Select an option and follow the onscreen instructions to get directions or view maps.
  - **Drive To** lets you enter an address (by speaking it or by using the keypad) or select from categories such as My Favorites, Recent Places, or Businesses to search for turn-by-turn directions.
  - **Places** provides a categorized list of locations such as Gas Stations, Grocery Stores, and Hospitals to help find local businesses and services.

- **Maps & Traffic** lets you view maps and get traffic information for your current location or for any other location (same categories as **Drive To**).
- **Local Apps** provides access to additional features such as Movies, Weather, and more.

 
*Note:* For more information about TeleNav GPS Navigator, visit [www.sprint.com/navigation](http://www.sprint.com/navigation).

# Google Maps

Use this application to find directions, location information, business addresses, etc., all right from your device. Determine your current location with or without GPS, get driving and transit directions, get phone numbers and addresses for local businesses.

## Opening Google Maps

- ▶ Press **Home**  >  > **Maps** .

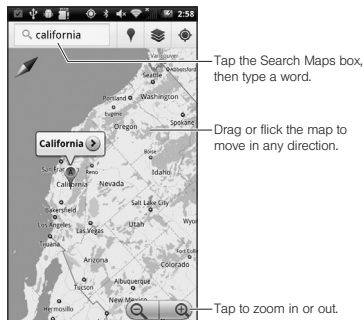

## Zooming In or Out on a Map

- ▶ Tap the magnification icons to zoom in or out on the map.
  - or –
- Pinch the screen to zoom out and spread to zoom in.



Zooming in



Zooming out


## Navigating the Map

- Swipe your finger on the screen to view other areas of the map.




## Finding Your Current Location

*Note:* Don't forget to set your location sources.


On the Google Maps screen, tap the My Location icon . A blinking blue arrow indicates your current location on the map. This feature is available when **Use GPS satellites** or **Use wireless networks** is enabled. See “GPS Services” on page 160.

## Searching Maps

1. On the Google Maps screen, tap the Search Maps box at the upper left of the screen.
2. On the Search Maps box, type the place that you want to search. You can enter an address, a city, or type of establishment.
3. Tap . A callout label appears on the map to indicate the location.
4. Tap the callout to open the menu for the location.


## Adding Map Layers

Layers allow you to view locations and additional info overlaid on the map.


On the Google Maps menu, tap the Layers icon  at the top right of the screen, and then tap one or more of the following options:

- **Traffic:** Add this layer to view real-time traffic conditions with roads marked in color-coded lines that indicate the traffic condition. This mode is available in selected areas only.
- **Satellite:** Add this layer to use the same satellite data as Google Earth. The images are not real-time and are approximately one to three years old.
- **Terrain:** Add this layer for a shaded relief view of topographic features.
- **Buzz:** Add this layer to read the comments posted from the location shown on the Google Maps.
- **Latitude:** Add this layer to see your friends' locations and share yours with them. You may sign in with your Google Account to use this feature.
- Tap **More layers** to add other layers.


## Finding Places

1. On the Google Maps screen, tap the Find places icon .
2. Select a category you want to find out.


## Getting Directions

1. On the Google Maps screen, press **Menu**  > **Directions**.
2. Do one of the following:
  - Type your starting point in the first text box, and then type your destination in the second text box.
  - Tap the location source buttons to open the location source menu and select a starting point and destination.
3. Tap **Go**. The directions to your destination appear in a list.

## Viewing Directions on Map

On the Directions list screen, press **Menu**  > **See map** to view the directions on a map.




## Clearing the Map

When you have reached your destination, press **Menu**  > **Clear Map** to reset the map.






## Places

Your device shows you nearby businesses and points of interest, such as grocery stores, gas stations, Wi-Fi hotspots, malls, and hospitals.

1. Press **Home**  >  > **Places**  .
2. Search for a business in your area by either choosing from an available category (**Restaurants, Coffee, Bars, Attractions, ATMs, Gas Stations, Explore Nearby**) or by using the search field.
3. Tap a matching entry based upon star ratings and distances.

## Google Navigation

Another Google Maps navigation application is available on your device. It uses your current location (provided by GPS communication to your device) to provide various location-based services.

1. Press **Home**  >  > **Navigation**  .
2. Read the onscreen disclaimer and tap **Accept**.
3. Choose from the following onscreen options:
  - **Speak Destination** to use the voice recognition feature to search for matching locations in your area.
  - **Type Destination** to manually enter a destination address.
  - **Contacts** to receive turn-by-turn directions to the address stored for a selected Contacts entry.
  - **Starred Places** to obtain directions to locations that have been starred within Google maps ([maps.google.com](https://maps.google.com)).



*Section 4*

***Safety and Warranty  
Information***



## 4A. Important Safety Information

- ◆ General Precautions (page 168)
- ◆ Maintaining Safe Use of and Access to Your Device (page 169)
- ◆ Using Your Device With a Hearing Device (page 170)
- ◆ Caring for the Battery (page 172)
- ◆ Radio Frequency (RF) Energy (page 172)
- ◆ Owner's Record (page 175)
- ◆ User Guide Proprietary Notice (page 175)

**This device guide contains important operational and safety information that will help you safely use your device.** Failure to read and follow the information provided in this device guide may result in serious bodily injury, death, or property damage.

## General Precautions

There are several simple guidelines to operating your device properly and maintaining safe, satisfactory service.

- To maximize performance, do not touch the top and bottom portions of your device where the internal antennas are located while using the phone.
- Speak directly into the mouthpiece.
- Avoid exposing your device and accessories to rain or liquid spills. If your device does get wet, immediately turn the power off and remove the battery.
- Do not expose your device to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your device is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your device not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

**Note:** For the best care of your device, only Sprint-authorized personnel should service your device and accessories. Failure to do so may be dangerous and void your warranty.

## Maintaining Safe Use of and Access to Your Device

### Do Not Rely on Your Device for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services or mobile phone features are in use. Check with your local service provider for details.

### Using Your Device While Driving

Talking on your device while driving (or operating the device without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

**Tip:** Purchase an optional hands-free accessory at your local Sprint Store, or call Sprint at 1-866-866-7509. You can also dial # 2 2 2 on your device.

### Following Safety Guidelines

To operate your device safely and efficiently, always follow any special regulations in a given area. Turn your device off in areas where use is forbidden or when it may cause interference or danger.

### Using Your Device Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

**Note:** Always turn off the device in healthcare facilities, and request permission before using the device near medical equipment.

### Turning Off Your Device Before Flying

Turn off your device before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your device while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your device while the plane is in the air.

## Turning Off Your Device in Dangerous Areas

To avoid interfering with blasting operations, turn your device off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your device off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your device and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

*Note:* Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your device or accessories.

## Restricting Children's Access to Your Device

Your device is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the device or make calls that increase your Sprint invoice.

## Using Your Device With a Hearing Device

A number of Sprint phones have been tested for hearing aid device compatibility. When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both wireless phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones that have been rated have a label located on the box. **Your Echo™ has an M4 and T4 rating.**

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise; even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying

out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the better/higher of the two ratings. Note that not all hearing devices have telecoils in them.)

**Note: New Technologies, Including Wi-Fi**

This device has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be newer wireless technologies (including Wi-Fi) used in this phone that have not been tested for use with hearing aids.

Hearing aid devices may also be measured for immunity to interference noise from wireless phones and should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your hearing aid. Add the rating of your hearing aid and your device to determine probable usability:




- Any combined rating equal to or greater than six offers excellent use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for "excellent use." This is synonymous for T ratings.

Sprint further suggests you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to find the one that works best with your hearing aid device. Should you experience interference or find the quality of service unsatisfactory after purchasing your device, promptly return it to the store within 14 days of purchase. (A restocking fee may be applied to exchanges. Visit [www.sprint.com/returns](http://www.sprint.com/returns) for details.) More information about hearing aid compatibility may be found at: [www.fcc.gov](http://www.fcc.gov), [www.fda.gov](http://www.fda.gov), and [www.accesswireless.org](http://www.accesswireless.org).

## Getting the Best Hearing Device Experience With Your Device

To further minimize interference:

- Set the device's screen timeout setting to ensure the minimum time interval:
  1. Press **Home**  > **Menu**  > **Settings**  > **Display** > **Screen timeout**.
  2. Tap the minimum time interval setting (15 seconds).
- Position the device so the internal antennas are farthest from your hearing aid.
- Move the device around to find the point with least interference.

## Caring for the Battery

---

### Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire, or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Sprint is not aware of similar problems with Sprint phones resulting from the proper use of batteries and accessories approved by Sprint or the manufacturer of your device. Use only Sprint-approved or manufacturer-approved batteries and accessories found at Sprint Stores or through your device's manufacturer, or call 1-866-866-7509 to order. They're also available at [www.sprint.com](http://www.sprint.com) — click **Accessories**. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.

- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:
  - Less than one month:  
-4° F to 140° F (-20° C to 60° C)
  - More than one month:  
-4° F to 113° F (-20° C to 45° C)

### Disposal of Lithium Ion (Li-Ion) Batteries

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

For safe disposal options of your Li-Ion batteries, contact your nearest Sprint authorized service center.

**Special Note:** Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

## Radio Frequency (RF) Energy

---

### Understanding How Your Device Operates

Your device is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your device, the system handling your call controls the power level. This power can range from 0.006 watt to 0.2 watt in digital mode.



## Knowing Radio Frequency Safety

The design of your device complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

### Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use a Sprint-supplied or Sprint-approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least 0.866 inches (2.2 centimeters) from your body when transmitting. Use of non-Sprint-approved accessories may violate FCC RF exposure guidelines. Other accessories used with this device for body-worn operations must not contain any metallic components and must provide at least 0.866 inches (2.2 centimeters) of separation between the antenna and the user's body.

For more information about RF exposure, visit the FCC website at [www.fcc.gov](http://www.fcc.gov).

## Specific Absorption Rates (SAR) for Wireless Phones

The SAR value corresponds to the relative amount of RF energy absorbed into the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the Echo™ are:

**Cellular CDMA mode (Part 22):**

Head: 0.65 W/kg; Body-worn: 0.58 W/kg

**PCS mode (Part 24):**

Head: 1.36 W/kg; Body-worn: 0.38 W/kg

## FCC Radio Frequency Emission

This device meets the FCC Radio Frequency Emission Guidelines.

FCC ID number: V65M9300.

More information on the device's SAR can be found from the following FCC website: <http://www.fcc.gov/oet/ea/>.

## FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

*Note:* This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the direction of the internal antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## *Owner's Record*

---

The model number, regulatory number, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your device in the future.

Model: Echo™

Serial No.:

## *User Guide Proprietary Notice*

---

User Guide template version 10a (January 2010)

## 4B. Manufacturer's Warranty

### ◆ Manufacturer's Warranty (page 176)

Your device has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your device, please visit [www.sprint.com](http://www.sprint.com) or call Sprint Customer Service at **1-888-211-4727**.

**Note:** In addition to the warranty provided by your device's manufacturer, which is detailed on the following pages, Sprint offers a number of optional plans to cover your equipment for non-warranty claims. **Sprint Total Equipment Protection** provides the combined coverage of the **Sprint Equipment Replacement Program** and the **Sprint Equipment Service and Repair Program**, both of which are available separately. Each of these programs may be signed up for within 30 days of activating your device. For more details, please visit your nearest Sprint Store or call Sprint at **1-800-584-3666**.

## Manufacturer's Warranty

### Manufacturer's Warranty

**Kyocera Communications, Inc.** ("KCI") offers you, the original purchaser who has purchased the enclosed subscriber unit ("Product") only from an authorized dealer in the United States, a limited warranty that the Product, including accessories in the Product's package, will be free from defects in material or workmanship as follows:

**A. ONE (1) YEAR LIMITED WARRANTY:** For a period of one (1) year from the date of original purchase, KCI will, at its option, either repair or replace a defective Product (with new or rebuilt parts/replacements).

**B. LIMITED WARRANTY ON REPAIRED/REPLACED PRODUCTS:** For a period equal to the remainder of the limited warranty period on the original Product or, on warranty repairs which have been effected on Products for 90 days after the date of its repair or replacement, whichever is longer, KCI will repair or replace (with new or rebuilt parts/replacements) defective parts or Products used in the repair or replacement of the original Product under the Limited Warranty on it.

Proof that the Product is within the warranty period in the form of a bill of sale or warranty repair document that includes the date of purchase, Product serial number and the authorized dealer's name and address, must be presented to obtain warranty service. This limited warranty is not transferable to any

third party, including but not limited to any subsequent purchaser or owner of the Product. Transfer or resale of a Product will automatically terminate warranty coverage with respect to it.

This limited warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks. Also this limited warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by KCI for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the Kyocera device for which it is specified.

This limited warranty covers the Product only as originally supplied and does not cover and is void with respect to the following: (i) Products which have been improperly installed, repaired, maintained or modified (including the antenna); (ii) Products which have been subjected to misuse (including Products used in conjunction with hardware electrically or mechanically incompatible or Products used with software, accessories, goods or ancillary or peripheral equipment not supplied or expressly authorized by KCI for use), abuse, accident, physical damage, abnormal use or operation, improper handling or storage, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature; (iii) Products operated outside published maximum ratings; (iv) cosmetic damage; (v) Products on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) customer

instruction; (vii) cost of installation, set up, removal or reinstallation; (viii) signal reception problems (unless caused by defect in material or workmanship); (ix) damage the result of fire, flood, acts of God or other acts which are not the fault of KCI and which the Product is not specified to tolerate, including damage caused by mishandling and blown fuses; (x) consumables (such as memory cards, fuses, etc.); (xi) third party software or applications, data and equipment not originally supplied with the Product; (xii) any Product in which the software has not been updated to the current version; (xiii) any Product in which the operating system has been unlocked (allowing installation of a third party operating system); or (xiv) any Products which have been opened, repaired, modified or altered by anyone other than KCI or a KCI authorized service center. Before returning any Product for service, be sure to back up data and remove any confidential, proprietary, or personal information from the Product. KCI is not responsible for damage to or loss of any software, applications, data or removable storage media.

This warranty is valid only in the United States.

***REPAIR OR REPLACEMENT, AS HEREIN ABOVE PROVIDED, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY. KCI SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO LOSS OF PROFITS, LOST SALES, LOSS OF DATA, LOSS OF USE OF THE PRODUCT, OR ANTICIPATED PROFITS ARISING OUT OF USE OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME***

**CHARGES DUE TO THE MALFUNCTION OF A PRODUCT OR LOST APPLICATIONS). THIS WARRANTY DOES NOT COVER PRODUCTS SOLD "AS IS" OR "WITH ALL FAULTS". KCI MAKES NO OTHER EXPRESS WARRANTY WITH RESPECT TO THE PRODUCTS. THE DURATION OF IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THIS EXPRESS WARRANTY.**

Some States do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This limited warranty gives you specific legal rights, and you may have other rights which vary from State to State.

To obtain warranty service, contact

Kyocera Communications, Inc.

Attention : Customer Services for Wireless Products

Phone : 1-800-349-4478

Web : <http://www.kyocera-wireless.com>

## 4C. End User License Agreement

- ◆ End User License Agreement (page 179)

### End User License Agreement

Kyocera Communications, Inc. ("Kyocera") End User License Agreement

**CAREFULLY READ THE FOLLOWING TERMS AND CONDITIONS ("AGREEMENT") BEFORE USING OR OTHERWISE ACCESSING THE SOFTWARE OR SERVICES PROVIDED WITH YOUR KYOCERA DEVICE. THE SOFTWARE AND SERVICES PROVIDED WITH YOUR KYOCERA DEVICE ARE SOLELY FOR PERSONAL USE BY YOU, THE ORIGINAL END USER, AS SET FORTH BELOW.**

**BY ACTIVATING, USING, DOWNLOADING OR INSTALLING THIS KYOCERA DEVICE AND/OR THE SOFTWARE PROVIDED WITH IT, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS LICENSE AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT USE, DOWNLOAD OR OTHERWISE ACCESS THE SOFTWARE OR SERVICES AND (I) PROMPTLY RETURN THE SOFTWARE OR SERVICE TO KYOCERA OR DELETE IT; OR (II) IF YOU HAVE PURCHASED THE KYOCERA DEVICE ON WHICH THE SOFTWARE OR SERVICE IS PRE-**

**INSTALLED, PROMPTLY RETURN THE DEVICE AND THE ACCOMPANYING SOFTWARE (INCLUDING DOCUMENTATION AND PACKAGING) TO KYOCERA OR THE KYOCERA AUTHORIZED DISTRIBUTOR FROM WHICH YOU PURCHASED THE KYOCERA DEVICE.**

**License:** Subject to the terms and conditions of this Agreement and any other terms that may be incorporated by reference or otherwise presented to you prior to your use of the Software, Kyocera grants you a limited, non-exclusive, license to use Kyocera and third party proprietary software and services found on your Kyocera device and/or packaged with your Kyocera device, including any updates to such material by whatever means provided, and any related documentation ("Software"). You may use the Software only as expressly authorized by this Agreement.

**Limitations:** This Software is licensed for use only on the single Kyocera device you originally purchased. You acknowledge and agree that ownership of the Software and all other rights associated with the Software not expressly granted in this Agreement are retained by Kyocera or its suppliers or licensors. You are not permitted to, in any way, distribute the Software or make it available over a network for use on more than the single Kyocera device for which it was originally supplied. The Software may be copied only as permitted by applicable law and as necessary for backup purposes. You may not remove any proprietary notices or labels on the Software or any copies thereof. You may not in any way, modify, reverse engineer, decompile, disassemble or create derivative works based on the Software (except to the extent that this restriction is expressly prohibited by law). You agree that you will not attempt to circumvent, disable or modify any security technology associated with the Software. You may use the

Software only in a manner that complies with all applicable laws in the jurisdictions in which you use it, including, but not limited to, applicable restrictions concerning copyright and other intellectual property rights and/or the export control regulations.

Some of the Software packaged with your Kyocera device may be provided by third parties ("Third Party Software"). Third Party Software may also be available from third party content distributors such as application stores. Third Party content may be subject to different or additional terms and conditions as determined by the Third Party Software provider. **THIRD PARTY SOFTWARE IS NOT A KYOCERA PRODUCT. KYOCERA IS NOT RESPONSIBLE FOR AND HAS NO LIABILITY WITH REGARD TO THIRD PARTY SOFTWARE.**

**Open Source Software:** The Software contains certain open source software which may be subject to the GNU General Public License ("GPL"), GNU Library/Lesser General Public License ("LGPL") and/or other copyright licenses, disclaimers and notices ("Open Source License Terms"). The applicable Open Source License Terms for the corresponding Open Source Software are reproduced and available at <http://www.opensource.org/licenses>. Please refer to the Open Source License Terms regarding your rights under such licenses to the Open Source Software. To the extent any such agreement requires that Kyocera provide you the rights to copy, modify, distribute or otherwise use any Open Source Software that are inconsistent with the limited rights granted to you in this Agreement, then such rights in the applicable Open Source License shall take precedence over the rights and restrictions granted in this Agreement, but solely with respect to such Open Source Software.

**Disclaimer of Warranty and Liability:** THE SOFTWARE IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND. KYOCERA FURTHER DISCLAIMS ALL WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NONINFRINGEMENT, TITLE, ACCURACY, CORRESPONDENCE WITH DESCRIPTION AND SATISFACTORY QUALITY. TO THE MAXIMUM EXTENT PERMISSIBLE BY LAW, THE ENTIRE RISK ARISING OUT OF THE USE OR PERFORMANCE OF THE SOFTWARE REMAINS WITH YOU. IN NO EVENT WILL KYOCERA, ITS EMPLOYEES, OFFICERS, SHAREHOLDERS, LICENSORS, SUPPLIERS, CARRIER OR DISTRIBUTOR CUSTOMERS OR AFFILIATES BE HELD LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, INDIRECT, SPECIAL, PUNITIVE, OR OTHER DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR OTHER PECUNIARY LOSS) ARISING OUT OF THIS AGREEMENT OR THE USE OF OR INABILITY TO USE THE SOFTWARE, WHETHER BASED IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT PRODUCT LIABILITY OR ANY OTHER THEORY, EVEN IF KYOCERA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND EVEN IF ANY LIMITED REMEDY IS DEEMED TO HAVE FAILED ITS ESSENTIAL PURPOSE. KYOCERA'S TOTAL LIABILITY FOR ANY DAMAGES UNDER THIS AGREEMENT SHALL NEVER EXCEED THE PURCHASE PRICE YOU PAID FOR THE KYOCERA DEVICE.

No software is fault free. The Software is designed for use in systems that do not require fail-safe performance. You may not use the software in any device or system in which a



malfunction of the software would result in foreseeable risk of loss, injury or death to any person. This includes operation of nuclear or infrastructure facilities, medical equipment, aircraft navigation or communication systems or use in risky or dangerous situations or environments.

**Consent to Use of Data:** You agree that Kyocera, its affiliates and its designated agents may collect and use technical and related information, gathered in any manner, as part of its product support services. Kyocera, its affiliates and designated agents may use this information solely to improve its products or to provide customized services or technologies to you. Kyocera will collect and use this information in accordance with its privacy policy and accordance with applicable data protection laws. Kyocera, its affiliates and designated agents may disclose this information to others, but not in a form that personally identifies you.

**Modification of Software and Terms of Use:** Kyocera reserves the right to from time to time modify any portion of the Software. Kyocera may be required to take these actions due to restrictions from third party licensors or due to safety or security concerns or government restrictions or court orders.

Kyocera reserves the right to modify the terms of this Agreement at its sole discretion. Any such modification will be effective upon Kyocera or a Kyocera affiliate or agent sending notice to you by email, text message, other electronic communication or postal mail. Your continued use of the Software after such notice will constitute your binding acceptance of the Agreement as revised. Additionally, some Software may be subject to different or additional terms

presented to you through a separate click-through or other type of agreement or notice prior to your use of such Software.

**Termination:** This License Agreement will automatically terminate without notice from or action by Kyocera if you fail to comply with any term hereof.

**Governing Law:** This Agreement is governed by the laws of State of California except any conflict of law provisions. The U.N. Convention on Contracts for the International Sales of Goods is hereby excluded in its entirety from this Agreement.

**Severability:** If any provision of this Agreement is found to be invalid, illegal or unenforceable, the validity, legality or enforceability of the remaining provisions will not in any way be impacted or impaired.

**Entire Agreement:** By using or otherwise accessing the Software, you agree that this Agreement sets forth the entire agreement between you and Kyocera with regard to the Software and supersedes all prior agreements, notwithstanding the terms of any such agreements.

©2011 Sprint. SPRINT and the logo are trademarks of Sprint. KYOCERA is a registered trademark of Kyocera Corporation. Other marks are the property of their respective owners.

This product contains NetFront Document Viewer of ACCESS CO., LTD. ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries. This software is based in part on the work of the Independent JPEG Group

Android, Android Market, Google Maps, Gmail, Google Talk are trademarks of Google, Inc.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kyocera Corporation is under license. Other trademarks and trade names are those of their respective owners.

Kyocera Communications, Inc. is a wholly-owned subsidiary of Kyocera International Inc.



microSDHC Logo is a trademark of SD-3C, LLC.



Contains Adobe® Flash® Player by Adobe Systems Incorporated.  
Adobe Flash Player Copyright© 1996-2011 Adobe Systems Incorporated.  
All rights reserved. Adobe and Flash are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

# Index

---

## A

- Accounts
  - Google Account 48
  - Synchronizing 54
- Activation 3
- Adapter
  - microSD Card 91
- Airplane Mode 59
- Alarm 83
- Android Market 145
- Animation 52
- Answering Calls 34
- Application Settings 65
- Applications 148–150
  - Applications Launcher 26
  - NASCAR Sprint Cup
    - Mobile 148
  - Sprint Football Live 149
  - Sprint Zone 150

- Automatic Speech Recognition (ASR) 87

## B

- Backlight 52
- Battery 13–16
  - Capacity 13
  - Charging 14
  - Disposal 172
  - Removing 13
  - Viewing Battery Use 52
- Bluetooth 104–107
  - Pairing 105
  - Sending Items 107
  - Settings 105
  - Turning On and Off 104
- Browser
  - Adding Bookmarks 126
  - Creating Bookmarks 125
- Browser Menu 124

## C

- Calculator 85
- Calendar 78–82
  - Adding Events 79
  - Calendar View 78
  - Changing Settings 80
  - Editing an Event 80
  - Erasing an Event 81
  - Event Reminders 79
  - Synchronizing 81
- Call Log 68–70
  - Editing a Number 70
  - Erasing 70
  - Making a Call 69
  - Options 69
  - Saving a Number 69
- Call Waiting 116
- Caller ID 116

Camera 95–103  
    see also Pictures  
    Camera Viewfinder 95  
    Options 97  
    Settings 99  
    Taking Pictures 95

Clock 82

Contacts 71–77  
    Adding an Entry 72  
    Adding Entries to Your  
        Favorites 75  
    Assigning a Picture 74  
    Assigning Ringers 74  
    Contact Entry Options 73  
    Deleting Entries 75  
    Dialing From 38  
    Editing an Entry 73, 74  
    Importing and Exporting 75  
    Sending 75  
    Synchronizing 76  
Corporate Email 139

## D

Data Services 121–151  
    see also Web  
    FAQs 150  
    Launching the Web 122  
    Password 5  
    Sprint Hotspot 131  
    User Name 122  
Device Settings 49–67  
    Adding and Synchronizing  
        Accounts 54  
    Airplane Mode 59  
    Application Settings 65  
    Call Settings 58  
    Display Settings 52–53  
    Language 53  
    Location Settings 53  
    Security Settings 61  
    Sound Settings 49–51  
    TTY Use 60  
Dialing Options 33  
Display Screen 10  
Display Settings 52

Document Viewer 85

## E

Email 133  
    Configuring Settings 135  
    Corporate Email 139  
    Create and Send 134  
    Creating Accounts 133  
Emergency Call 35  
Emergency Numbers 35  
End User License  
    Agreement 179  
Entering Text 39–47  
    Android Keyboard 42  
    Editing Text 46  
    Selecting Mode 39  
    Swype Keyboard 39  
Event Reminders 79

## F

Factory Data Reset 67  
FCC Notice 174  
Folders 26

## G

- Gallery 102
  - Options 103
- Gmail 136
- Google Maps 162
- Google Navigation 165
- Google Talk 142
- GPS Navigation 160
  - Google Maps 162
  - TeleNav GPS Navigator 160
- GPS Services 160

## I

- In-Call Options 36
- Internet
  - see Web
- Internet Calling 58

## K

- Key Functions 9

## L

- Languages 53
- Location Mode 160

- Location Settings 53
- Locking Your Device 62

## M

- Making Calls 33
- Menu i
  - Navigation 18
- Messaging
  - Email 133
  - Gmail 136
  - Multimedia Messaging 112
  - Notification 32
  - Settings 114
  - Text Messaging 112
  - Voicemail 110
- microSD Card 90–94
  - Adapter 91
  - Connecting Device to
    - Computer 93
  - Formatting 92
  - Write Protection 92
- Missed Calls 35

- Multimedia Messaging 112

- Composing 112
- Opening 114
- Replying to 114

- Music 155–157

- Backing Up Music Files 157
- Creating Playlists 156
- Music Library 155
- Playing Music 155

## N

- Navigating the Web 122
- Navigating Through Menus 18
- Notifications Panel 32

## O

- Onscreen Keyboard 39
- Opening and Closing the
  - Device 17
- Optimized Mode 27, 159
- Owner's Record 175

## P

- Phone (illus.) 8
- Phone Number
  - Finding 37
  - Saving 36
- Pictures
  - Assigning to Contacts 97
  - Options 103
  - Settings 99
  - Taking Pictures 95
- Places 165
- Playing Music 155
- Plus Code Dialing 38

## R

- Resetting Your Device 67
- Ringers
  - Assigning to Contacts 74
  - Setting for Notifications 50
  - Setting for Voice Calls 49
  - Silent Mode 51
  - Types 49
  - Vibrate 51

- Roaming 118–120
  - Roam Mode 118
  - Roaming Guard 119

## S

- Safety Information 168–175
- Saving a Phone Number 36
- Screen Lock 61
- Screen Modes 27
- Search 23
  - Text Search 23
  - Voice Search 89
- Security 61–64
  - Locking Your Device 62
  - Setting the Screen Lock 63
- Silent Mode 51
- Simul-Task Mode 27
- Sound Settings 49–51
- Sprint Hotspot 131

## Sprint Service

- Account Passwords 5
- Activation 3
- Operator Services 6
- Sprint 411 6
- Sprint TV 152
- Sprint Zone 150
- Swype 39

## T

- Tablet Mode 27, 28
- TeleNav GPS Navigator 160
- Text Entry
  - see Entering Text
- Text-to-Speech 89
- Three-Way Calling 117
- TTY Use 60
- Turning Your Device On and Off 12
- TV 152

## U

Unlocking Your Device 62

Updating Your Device 86

## V

Vibrate 51

Videos

Options 101

Recording 100

Settings 101

Voice Dialing 87

Voicemail

Notification 110

Retrieving 111

Setting Up 4, 110

Volume 50

VueQue 158

## W

Wallpaper 25

Warranty 176–178

Web 121–129

see also Data Services

Bookmarks 125

Browser Menu 124

Launching 122

Navigating 122

User Name 121

Zooming Out and In 123

Wi-Fi 129–131

Connecting to a

Network 130

Manually Adding a

Network 130

Sprint Hotspot 131

Status Indicators 131